


Soft Close -assembly instructions (OH-75/P/FLOW)

Parts:

- | | |
|-----------------------------|-----------------------|
| 1 Track K-75 Flow | 6 Set up pin |
| 2 Wall bracket SK-75/P/Flow | 7 End cap PLH-75/Flow |
| 3 Stop KP-75/100 | 8 Plate PLP-75 |
| 4 Hanger MP-75 | 9 Bottom guide AO-75 |
| 5 Soft Close OH-75/Flow | |

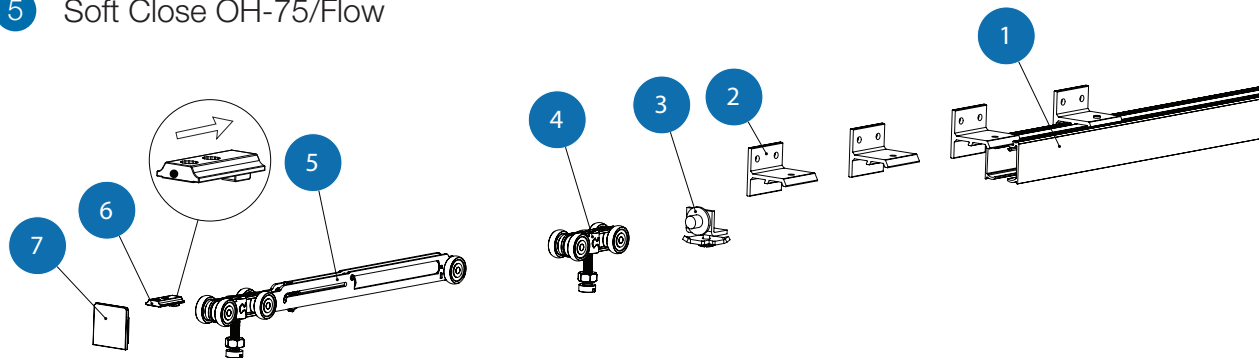

- 1** Slide wall brackets (2) to the track (1).
(Note. In soffit fixing, go to section 3 and mount track to soffit after section 4).
- 2** Attach the track to the wall
- 3** Make sure that the trigger is tuned up.
- 4** Slide all the parts (3, 4, 5, 6) to the track.
- 5** Adjust the Set up pin (6) to the approximately correct position.
(Tighten the screws with a moderate torque.)
- 6** Attach the plates to the door (8).
- 7** Lift the door to its place.
- 8** Install the bottom guide (9).
- 9** Adjust the Stop KP-75/100 (3) so that it stops the door in the desired position.
- 10** Check that the door stops at the correct position and adjust the Set up pin (6) if necessary.
- 11** Attach the End caps (7) to the track.

