


ROCK BOARD[®] DISPLAY SETTING INSTRUCTIONS

Display setting actions are the same for all variants



1. Remove front frame

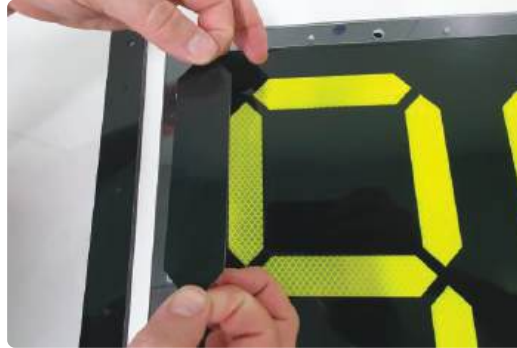

2. Apply segment blanking stickers to create the desired number



(Hero Series)
Apply letters from display kit



Clean with soap and water only. Solvents, alcohol-based cleaners and other chemicals may damage the sign.

Firmly press all yellow segment stickers into place.
Ensure they are flat, fully adhered and free from air bubbles.
Visible perforated guide lines are normal and are for alignment only.

3. Using supplied bolts, tighten all bolts to torque setting 3.5Nm
Your Rock Board LED ID Sign is now ready to fit to your vehicle.

