

PART NUMBER

## SSR-704-40



### BEFORE YOU BEGIN

#### PRIMARY APPLICATIONS




- › Suzuki Jimny 4X2  
(1996 - present)
- › Suzuki Jimny 4X4  
(1996 - present)

#### PARTS LIST

| Item | Part # | Description          | QTY |
|------|--------|----------------------|-----|
| A    | 511480 | SumoSPrings Blue -40 | 2   |
| B    | 512404 | Spacer               | 2   |

#### TOOLS REQUIRED

- › Floor Jack
- › Jack Stands
- › Wheel Chocks

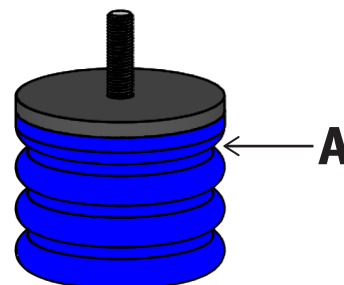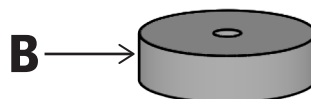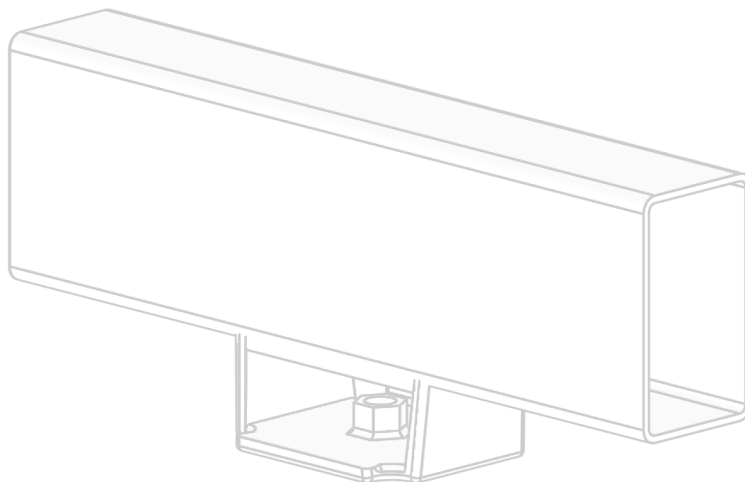

**DRIVER SIDE (PASSENGER SIDE SIMILAR)**

Part Number: SSR-704-40

Product Line: SUMOSPRINGS REAR

Page 1

Questions or Concerns?

Scan here:



or visit:  
superspringsinternational.com

**SAFETY NOTICE:** We recommend installation be done by a professional or persons with sound mechanical knowledge.

**WARNING:** These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

**BEFORE INSTALLATION:** Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

**DURING AND/OR AFTER INSTALLATION:** Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 1 | JUN 2026

PART NUMBER

**SSR-704-40**



**INSTALLATION**

1. Park vehicle on a on a hard, level surface and engage emergency brake. Place chocks in front and behind front wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
2. Raise rear of vehicle to allow the axle to hang freely. Support the frame using safety jack stands.
3. Remove existing factory bump stop assembly by unscrewing it from the frame.
4. Place the Spacer [ITEM B] over the pre-installed Stud in the SumoSpring [ITEM A].
5. Place a drop of Blue Thread Locker on the threads of the Stud.
6. Insert the Stud into the hole in the frame where the factory bump stop was attached and tighten securely.
7. Repeat 3 through 6 on the other side.
8. Raise the vehicle to allow room to remove the safety jack stands.
9. Carefully lower vehicle to the hard surface and remove the chocks from in front and back of the front wheels.
10. Register the warranty for your SuperSprings International part at SuperSpringsInternational.com or scan the QR Code below.

**Part Number: SSR-704-40**

**Product Line: SUMOSPRINGS REAR**

**Page 2**

Questions or Concerns?

Scan here:



or visit:  
superspringsinternational.com

**SAFETY NOTICE:** We recommend installation be done by a professional or persons with sound mechanical knowledge.

**WARNING:** These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

**Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.**

**BEFORE INSTALLATION:** Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

**DURING AND/OR AFTER INSTALLATION:** Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 1 | JUN 2026