

PART NUMBER

SSR-628-40/47

SumoSprings®

BEFORE YOU BEGIN

PRIMARY APPLICATIONS


- > Nissan Frontier 4x2
(2022 - present)
- > Nissan Frontier 4x4
(2022 - present)

PARTS LIST

Item	Part #	Description	QTY
A	511441	SumoSprings Blue -40	2
	511442	SumoSprings Black -47	
B	512116	½" Spacer	2

TOOLS REQUIRED

- > Floor Jack
- > Jack Stands
- > Wheel Chocks
- > 12mm Socket/Wrench

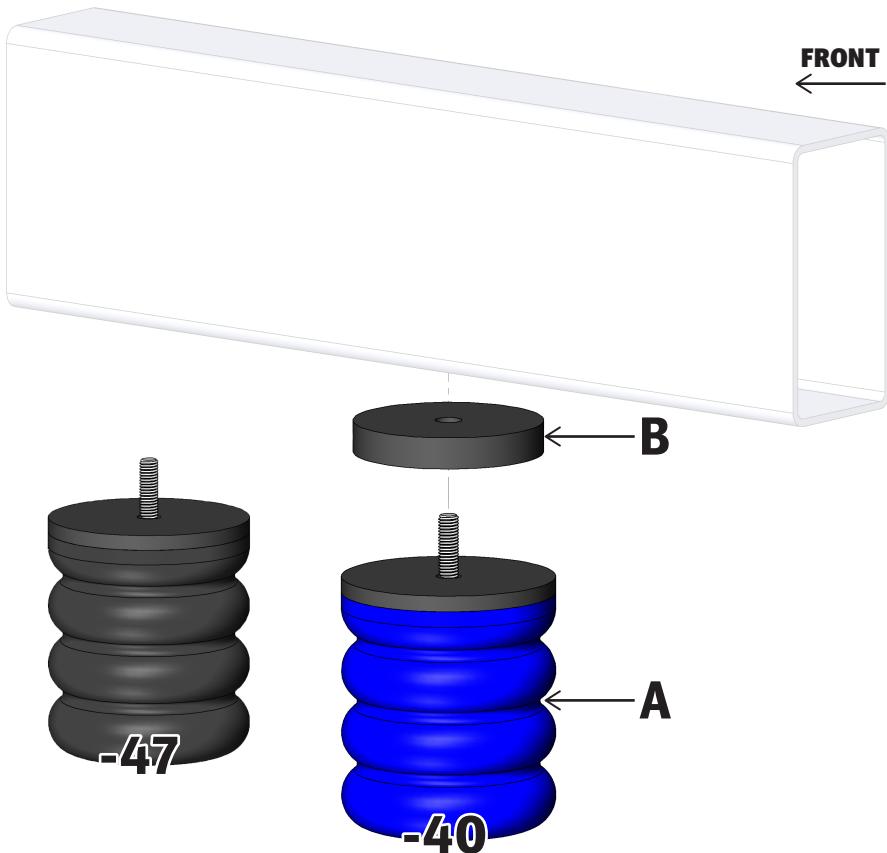

DRIVER SIDE (PASSENGER SIDE SIMILAR)

Part Number: SSR-628-40/47

Product Line: SUMOSPRINGS REAR

Page 1

Questions or Concerns?

Scan here:



or visit:
superspringsinternational.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

PART NUMBER

SSR-628-40/47**SumoSprings®****INSTALLATION**

1. Park vehicle on a hard, level surface. Engage emergency brake. Place chocks in front and behind front wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
2. Raise rear of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
3. Starting on the driver side, remove existing factory bump stop assembly by pulling the bump stop out of the frame mounted cup. Then remove the cup from the frame by unscrewing the bolt attaching it in the center.
4. Apply the included Blue Thread Locker to the threads of the stud on the SumoSpring [ITEM A].
5. Thread the stud into the existing hole in the frame where the factory bump stop was removed.
6. Tighten securely by hand.

NOTE: If more preload is desired, add the optional $\frac{1}{2}$ " Spacer [ITEM B] to the top of the SumoSpring prior to installation.

7. Repeat steps 3 through 6 on the passenger side of the vehicle.
8. Raise the vehicle, remove safety jack stands.
9. Carefully lower vehicle to the hard surface. Remove the chocks from in front and back of the rear wheels.
10. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

Part Number: SSR-628-40/47**Product Line: SUMOSPRINGS REAR****Page 2**

Questions or Concerns?

Scan here:

or visit:
superspringsinternational.com**SAFETY NOTICE:** We recommend installation be done by a professional or persons with sound mechanical knowledge.**WARNING:** These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.**DURING AND/OR AFTER INSTALLATION:** Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 1.01 | SEP 2023