

BERNADETTE ASSEMBLY


STEP 01

UNZIP THE SLIPCOVER. HOLD THE SLIPCOVER IN ONE HAND. WITH YOUR OTHER HAND, FIRMLY GRASP THE INSERT AT ONE END.

STEP 02

STUFF THE INSERT INSIDE THE SLIPCOVER.

NOTE: IF THERE ARE ANY LUMPS, BREAK THEM APART WITH YOUR HANDS.

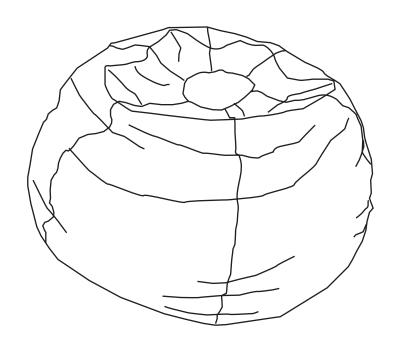

STEP 03

WHEN THE INSERT IS COMPLETELY INSIDE THE COVER, CLOSE THE ZIPPER AND WAIT FOR THE FOAM TO EXPAND. NOTE: MAY TAKE 24 HOURS TO FULLY EXPAND.

LifeWorkEtc.com **800-634-9514** Part # 3330771, Rev. C