

## Modesty Panel

### Tools Required

- Drill with 1/8" #2 Phillips tip bit
- 5/16" Hex socket or Hex drill bit
- Level
- 3/16" head wrench

### Hardware Provided

- Metal to metal: #10x 1/2" Hex washer head drill screws (provided).

### Installation

1. Modesty Panel is mounted 1 1/2" from top of worksurface, 3" from floor, and 3" from rear edge of worksurface. From approach side of desk, Modesty Panel is visibly inset.
2. Facing the Pedestal, determine where the Modesty Panel will attach to the Pedestal: on the left or right side. Remove Pedestal drawers (see Remove Pedestal Drawer Assembly Instruction).
3. Inside each Pedestal are two front and two rear uprights. In the front flange of the rear upright, look for locator holes where Modesty Panel will attach (Figure A). Drill the four holes, left OR right, with an 1/8" bit.

**NOTE:** If future reconfiguration is expected, a Pedestal Non-Deface Kit (IFMDF) can be ordered to attach Modesty Panel to the Pedestal without drilling into it.

4. With finished side facing out, secure one end of Modesty Panel to Pedestal with four #10x 1/2" screws (Figure B).
5. Install End Panel or Support Panel to worksurface (see Attach End Panel/Support Panel Assembly Instruction) or second Pedestal and secure Modesty Panel using screws provided. Return Support Panel illustrated (Figure C).
6. Retighten all screws, beginning with Modesty Panel and working your way out to Pedestal and end panels.

Figure A

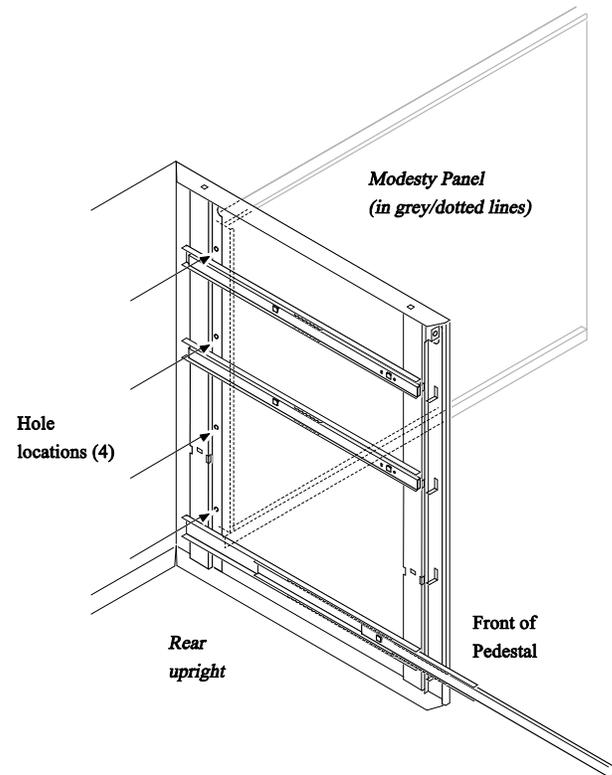


Figure B

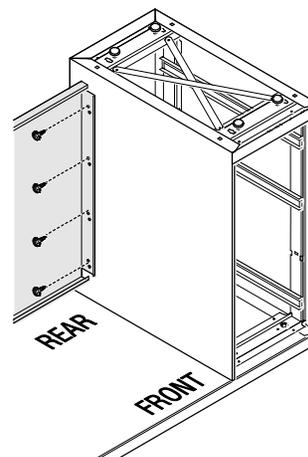


Figure C

