

### Xsede Metal Wire Manager Assembly

#### Tools Required

- Box Cutter/Utility Knife

#### Hardware Required

- 1 - Freestanding Single Base (**ordered separate**) - or
- 1 - Freestanding L-Base (**ordered separate**)
- 1 - Metal Wire Manager (**See Figure A**)

#### Installation

**Note: Metal Wire Manager should be installed after bases and/or tops.**

1. Using a knife, open box removing metal wire manager.  
**See Figure A.**
2. Set bases in correct location, and run cords down leg plugging in base for power.
3. **See Figure B.** Open wire manager flanges with hands and slide over top of base leg encapsulating cords. **Note: Opening flanges will prevent wire manager from scratching base leg. Wire manager will set on top of base foot. Cutout at top of wire manager is for use of cable carrier. See cable carrier assembly instructions for use.**
4. Use wire gap, **Figure C**, for cord management concealment.

Figure A




Figure C

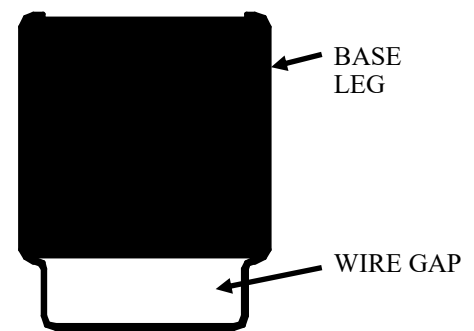


Figure B

