


End Tandem Table

Tools Required

- Cordless Screwdriver with #P2 Phillips Bit
- 1/2" Box End/Open End Wrench
- Torpedo Level

Ganging Bracket Bags Include:

- 40 - #8 X 5/8" Sheet Metal Screws
 - 4 - L Brackets
 - 2 - U Brackets
- (Number of bags included will depend on the model)

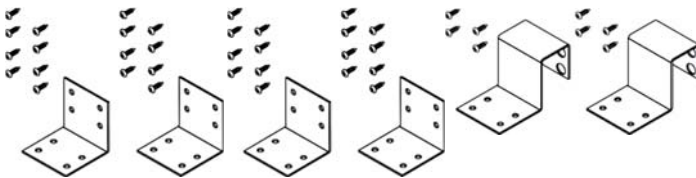

End Table Installation

1. Place worksurface face down on clean, soft surface.
2. Remove L-brackets from packaging bag and place over pre-drilled holes in center of worksurface bottom. (Figure A)
3. Loosely Install 16- #8 x 5/8". (Figure B)
4. Place leg in center of L-brackets, aligning vertical back edge of leg to edge of end table. Install 16- #8 x 5/8" sheet metal screws. (Figure C)
5. Tighten all 32 screws.
6. Place U-brackets over pre-drilled holes. (Figure A)
7. Install 8-#8 x 5/8" screws. (Figure D)
8. Remove 4 machine screws from chair frame.
9. Position the chair to be ganged to table in the desired location. (Figure E)
10. Use Torpedo Level to ensure tabletop is level to floor. If not, adjust table accordingly.
11. Install 4- 5/16-18 x 3/4" machine screws through U-bracket to chair frame. (Figure F)

Figure A

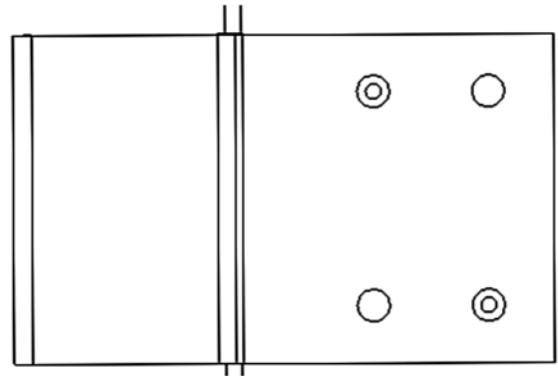


Figure B

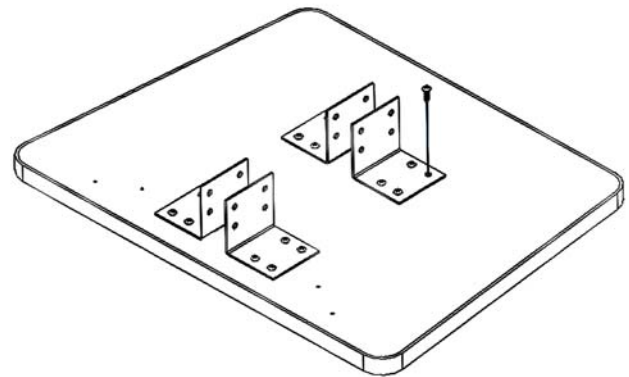


Figure C

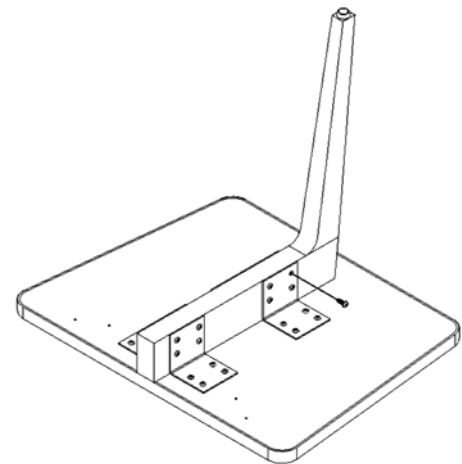


Figure D

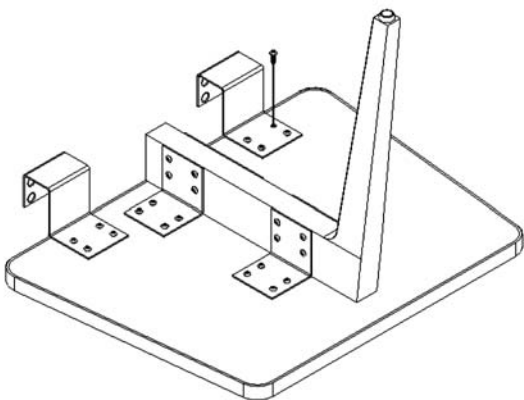


Figure F

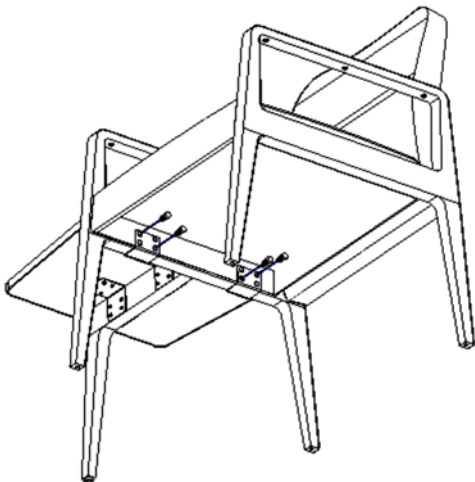


Figure E

