BENCH END STORAGE CABINET

Tools Required

- Cordless driver with magnetic post and following tips
  - # 2 Phillips Drive
  - M5 Hex Drive

Hardware Required (Included)

- 36— Shelf Pins
- 19— Panhead Phillips #8X 3/4" Wood Screws
- 4—Button Head Cap Screw M6-1 X 12mm
- 4 1/8" clear bumpers

Installation

1. Unpack Cabinet and all hardware.
2. Cabinet can be mounted to align with 14" or 21" Tall Bench Screens or Inserts. Identify which screens are installed on the target bench.
3. Locate the mounting bracket as shown in Figure A. Attach bracket using Pan Head Phillips screws provided.
4. Mount the cabinet to the Bench Leg by sliding the bracket around the Bench Leg as shown in Figure B and using the supplied Button Head Cap Screws to affix the bracket to the frame. Cabinet back panel should be 1/32" inset of the worksurface edge on both sides of the bench.
5. Install Shelf Pins at desired locations and slide shelves into place.
6. Place bumper between the bottom of the cabinet and each leg .

Figure A

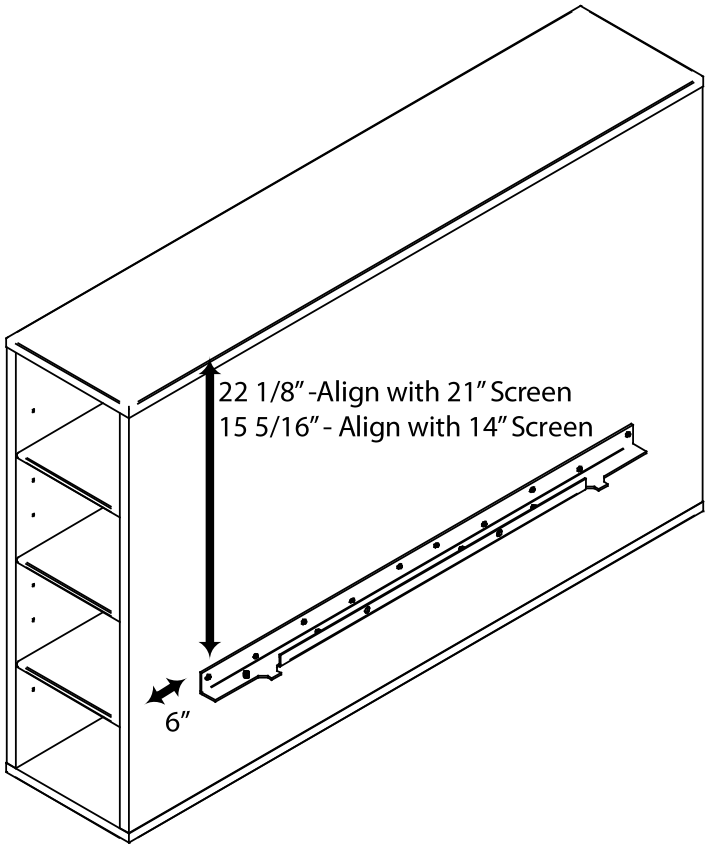


Figure B

