

## Framed Fabric Screen

### Tools Required

- Cordless driver with magnetic post and following tips
  - M 5 Hex Drive
  - # 2 Phillips Drive

### Hardware Required (Included)

- 2— Flanged Socket Head Cap Screw
- 2— Panhead Phillips #8 X 5/8" Sheet Metal Screw

### Installation

1. Unpack frame and hardware.
2. Align Frame down the center of the bench as shown in Figure A. Holding the Frame 5/16" off end of leg rail (Figure B), use the Cap Screws to attach the Bench Leg, threading the screw into the machine threads in the bottom corners of the Frame.
3. Use the pan head screws to attach the Frame to the Bench Crossrails as shown in Figure A.

Figure A

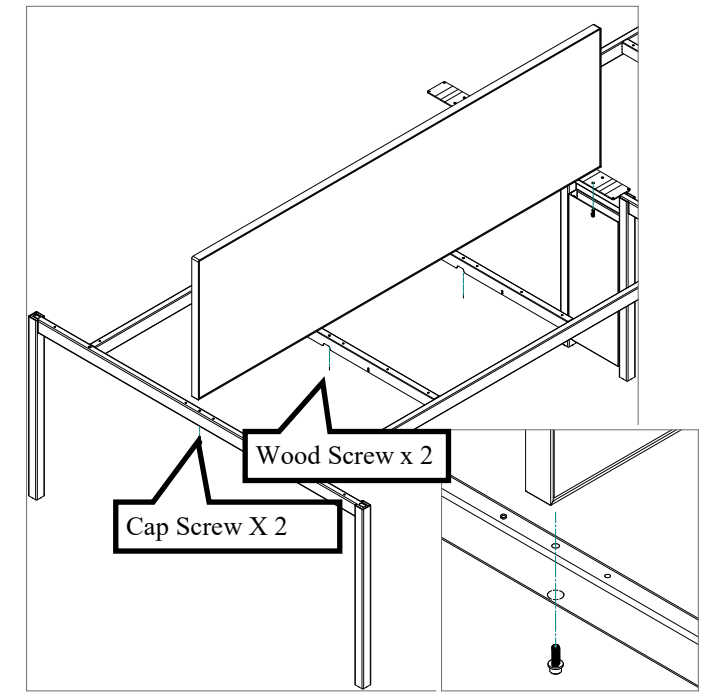


Figure A

