

### End Trim

#### Tools Required

- Drill/Driver w #2 Phillip

#### Hardware Required

- 2 #6 X 3/8" Self Drilling Panhead Screw

#### Installation

1. Slide the end trim behind the installed Traxx. (Figures A and B). Align top of end trim with top of Traxx.
2. Attach end trim to the Traxx using the screws provided. (Figure C).

Figure A

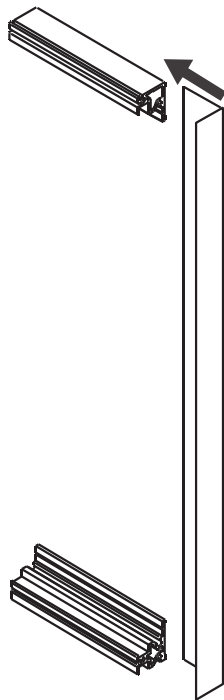


Figure B

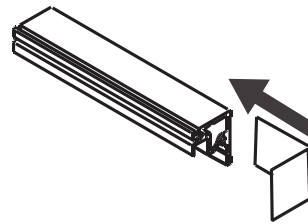


Figure C

