

TV Mount

Tools Required

- M4 Head Screw Driver

Hardware Required

- 4 - M6 X 12mm Screw machine screw.

Installation

1. Determine desired height of TV. Find corresponding hole pattern in the metal bracket that aligns with the holes in the back of the TV.
2. Verify the screw length does not damage TV by referring to the TV manual.
3. Install the brackets on the back of the TV as shown in Figure A.
4. Install the TV on the Traxx by rotating the TV outward to engage the top of the bracket in the Traxx slot and then pivot into place. See Figure B.

Figure A

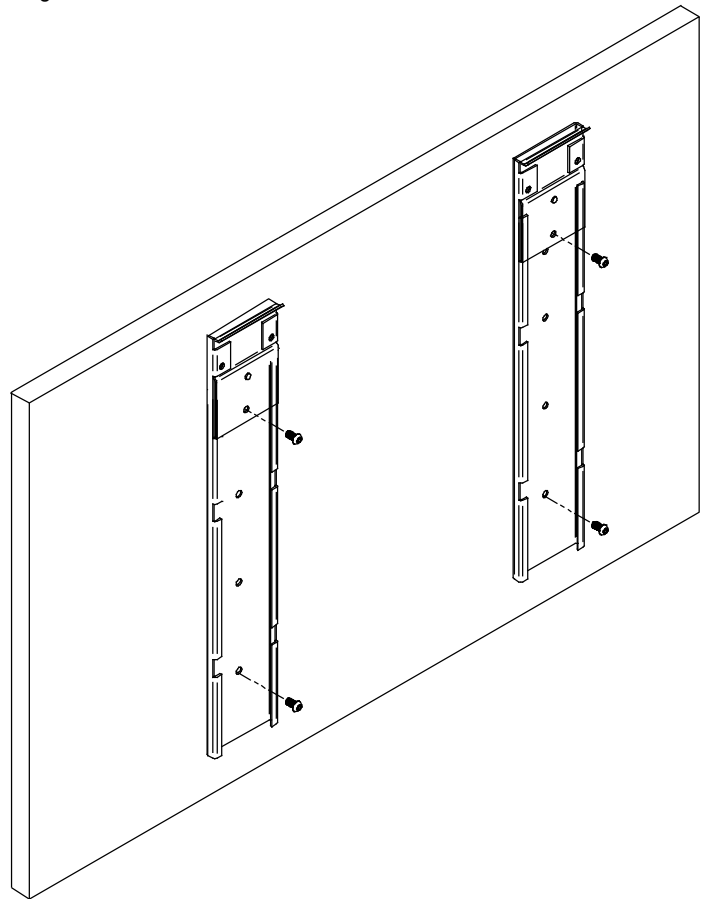


Figure B

