


Assembly Instruction


Alloy Power Entry Whip

1 Unpack and place the loop clamp around the power entry cable metal conduit on roughly 6 inches from the phase block connection.

2 Connect the ganging jumper to any open phase block or 3 way jumper connection point.

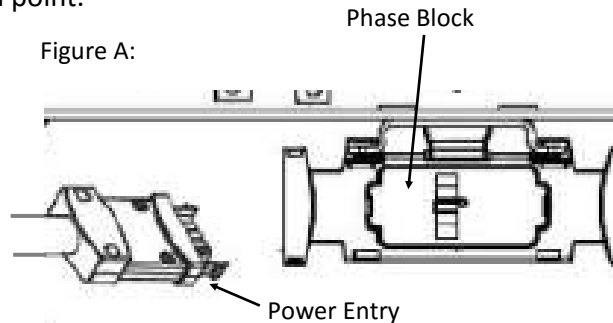

3 Using the supplied self drilling screw, secure the loop clamp and power entry whip to the bottom side of the powered beam. Be sure to place the screw in either the right or left side groove (Figure B). Clamp may be placed anywhere along beam within 6 inches of an open connection where power infeed is needed.

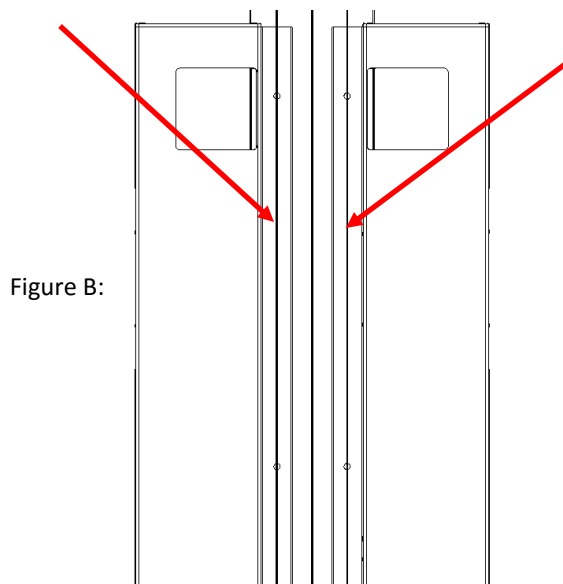

Note: 12 Duplexes per circuit maximum. 36 Duplexes maximum for all circuits before additional power entry whip is required.

4 Consult licensed electrician to hardwire power entry into the building.

Package Contents

Hardware	Qty
Loop Clamp	1
Self Drilling Screw	1

Component	Qty
Power Entry Cable	1

Tools Required

#3 Phillips Bit
Screw Driver

NATIONAL

Furniture with Personality®

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 2891775
Rev. -

Printed in U.S.A
© 2014 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.