
1

Lay the work surface face down on a smooth, clean, dry surface, attach the support bars to the work surface (Figure A).

Note: Corian material work surfaces have threaded metal inserts for 3/4"x 1/4_20 machine screws. Veneer and Laminate material work surfaces have two (2) predrilled holes. Attach Veneer and Laminate units with two (2) #10 x 3/4" panhead screws per bracket. **Figure A**


Note: Corian material uses, 3/4"x 1/4_20 machine screws.

Veneer or HPL material uses, #10 x 3/4" panhead screws

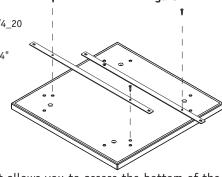


Align two seating units into a position that allows you to assess the bottom of the units and attachment of the work surface (Figure B). Attach the work surface and brackets to the unit using four (4) 1/4"-20 x 1" Round Head Machine screws. Insure the Machine screw is seated to the bottom of the bracket and to the underside of the ganging unit.

Caution: Improper installation may result in a damage unit or injury.

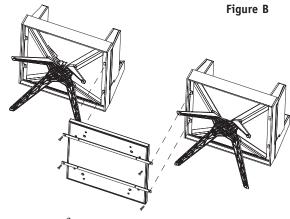

Position the units in their upright user postion. (Figure C).

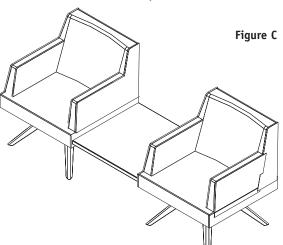

Farrah Ganging Table

Recommended Tools

• Phillips head screwdriver

Qtv.

4

4

Qty.

Package Contents Corian material unit

• 3/4"x1/4_20 RHP Mach Screws

• 1"x1/4_20 RHP Mach Screws

• Support bars 2

Package Contents Veneer/Lamanate material units

• #10x3/4 FH Wood Screws 4

• 1"x1/4_20 RHP Mach Screws 4

• Support bars 2

NATIONAL

Furniture with Personality

Telephone 800.482.1717 Fax 812.482.8800 www.NationalOfficeFurniture.com

Part #2867025 Rev.-

Printed in U.S.A © 2016 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.