


Top Cap Frameless Glass / Resin

Tools Required • Phillips screwdriver

Hardware Required (Included)

Glass Sizes	18-24	30	36-48	51-57	60-66	69-72	78-84	90	96
#8-32 X .25 PHP Machine Screw	0	0	0	0	2	2	2	2	2
#8-32 x 1.125 PHP Machine Screw	2	2	2	2	2	2	2	2	2
#8 Washer	0	0	0	0	0	4	4	4	4
Slab Nuts	2	2	2	2	2	4	4	4	4
Felt	2	2	4	5	6	7	8	9	10

Figure A

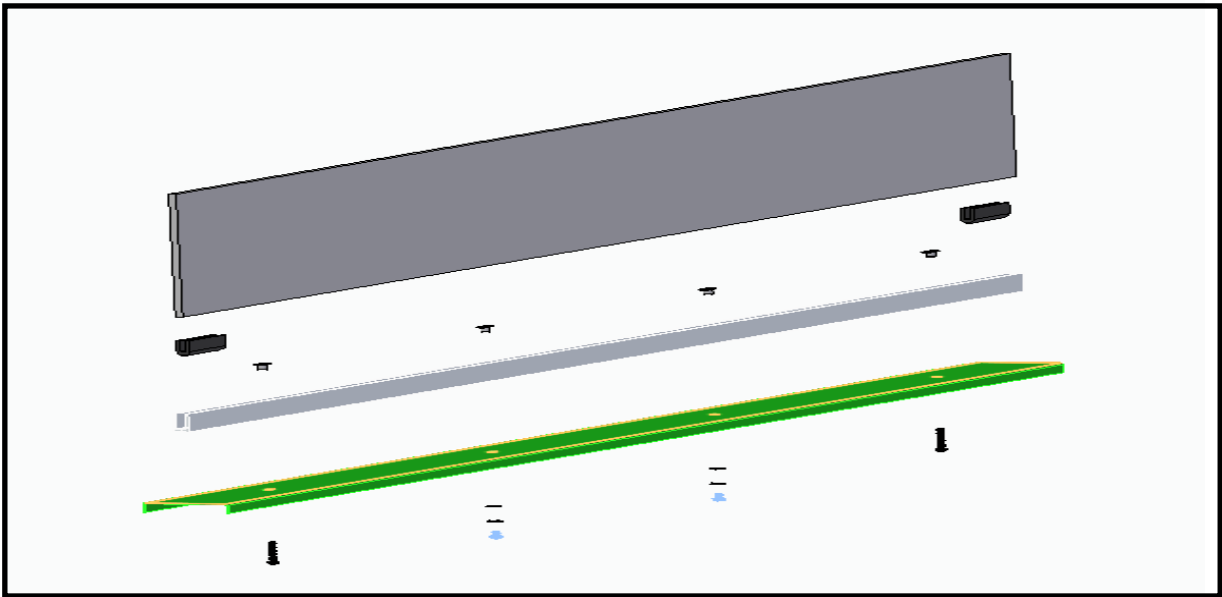

Installation

1. Unpack Frameless Glass or Resin and all hardware.
2. Remove adhesive backer from felt strip and attach to bottom edge of Glass or Resin so equal amounts of felt are on the face and back, space evenly along length of glass, avoid placing on top of Slab Nut as shown in Figure A.
3. Attach U-Channel to Top Cap for sizes 63" to 96" with Slab Nuts (2), Washers (4), and PHP 8-32 x .25 machine screws (2), then attach to Crossrail with PHP 8-32 x 1.125 machine screws (2)
4. Attach U-Channel to Top Cap and Crossrail for sizes 18" to 60" with Slab Nuts (2) and PHP 8-32 x 1.125 machine screws (2)
5. With Felt attached to Glass or Resin press into U-Channel, insure that Glass or Resin is fully seated into U-Channel

Crossrail Attachment Shown

