

**1**

Using a 7/32" Allen Wrench, attach the Disk Base to the Column using the three (3) 3/8"-16 x 1 1/2" Allen Head Bolts provided (Figure AA).

**Figure AA**



3/8 -16 x 1 1/2 Allen Head Bolt  
(3 required)

**Fringe Table**


**Recommended Tools**

- Tape Measure or Ruler
- Phillips Head Screwdriver
- 7/32 Allen Wrench

**2**

On a smooth, clean, dry surface, place the Worksurface face down. Center the base side to side and 12" from the end. Attach the base with four (4) #10 x 1" Pan Head Phillips Screws (Figure A).

**Figure A**

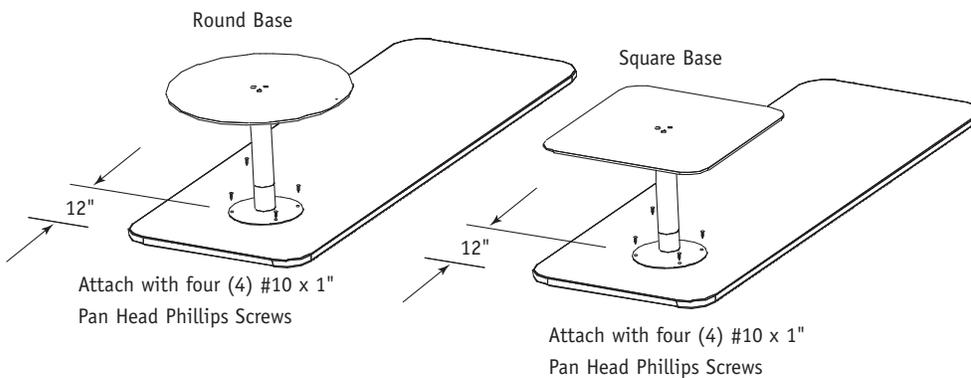

**Note:** If Square Base is used, adjust the height before attaching to the Worksurface. This will insure Square Base is aligned with the Worksurface.

Package Contents	Qty.
• #10 x 1" PHP FBSCR BK	12
• 3" L-Bracket	2
• 3/8"-16 x 1 1/2" Allen Head bolts	3

**NATIONAL**

Furniture with Personality®

Telephone 800.482.1717  
Fax 812.482.8800  
www.NationalOfficeFurniture.com

Part #2761516  
Rev,-

Printed in U.S.A  
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.


## Assembly Instructions

### Fringe Table

3

Place the brackets as shown in Figure B. Attach each bracket with two (2) #10 x 1" Pan Head Phillips Screws (Figure B).


Figure B

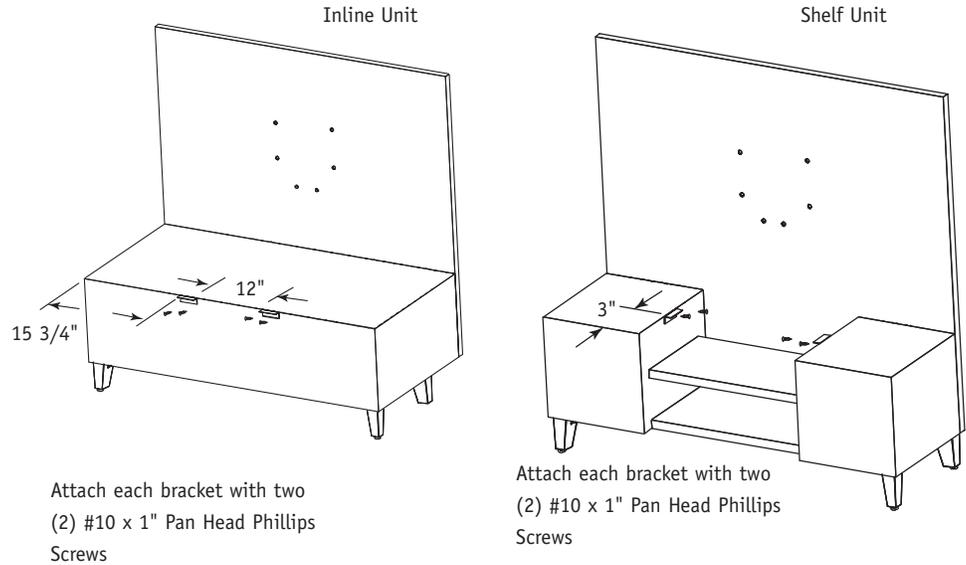

4

Place the units in the upright user position. Center the Worksurface side to side and 12" from the end. Attach the Worksurface with four (4) #10 x 1" Pan Head Phillips Screws (Figure C).

Figure C

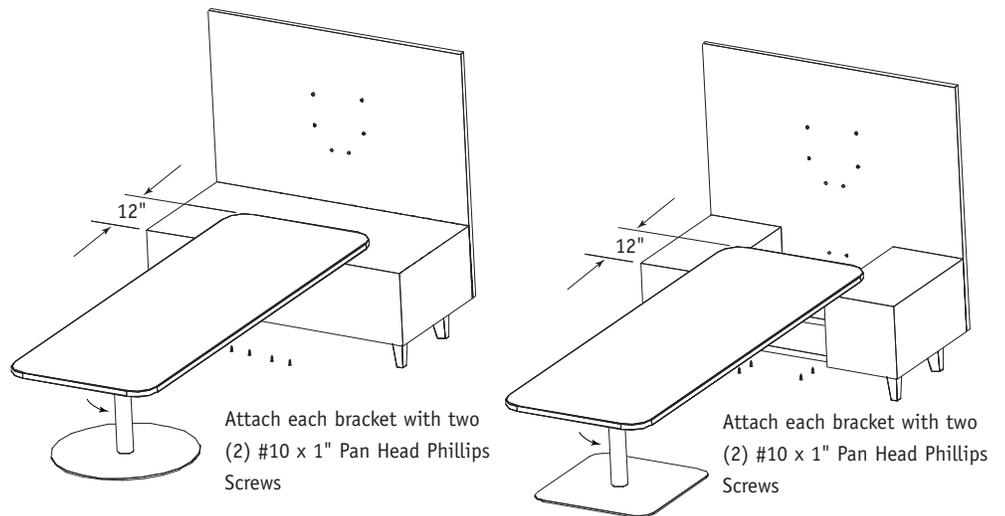

Spin base to adjust the height.

**Note:** If Square Base is used, adjust the height before attaching to the Worksurface. This will insure Square Base is aligned with the Worksurface.