

Assembly Instruction

Power Entry

Package Contents for:

- **N87ELPE1**


Electrical Power Entry (Hardwire), Metal Cable Clamp, Clamp Attachment Screw



or

- **N87ELPE48**

48" Electrical Power Entry (20 amp Plug), Metal Cable Clamp, Clamp Attachment Screw



or

- **N87ELPE72**

72" Electrical Power Entry (20 amp Plug), Metal Cable Clamp, Clamp Attachment Screw



Note:

- It is recommended the power/USB grommet are to be installed into the top of each upholstered spine &/or work surface prior connecting power entry.
- For ease of assembly, it is recommended that all electrical connections with electrical distribution jumpers are made prior connecting power entry.
- It is recommended the unit is not ganged to other unit prior to connect the power entry.
- A maximum of 26 power grommets per circuit.
- Consult a licensed electrician to hardwire power entry into the building.

1. Identify the unit for which the power entry cable is to be connected.
2. Unpack and place the loop clamp around the power entry cable metal conduit.
3. Locate the general area the power entry cable is to extend from the bottom of the upholstered spine.
4. Connect the power entry cable to the nearest 4-way H block connection as illustrated below.
(3 Options to connect the power Entry)

Recommended Tools

- None

Package Contents	Qty.
Reference Sheet Per Model	

NATIONAL | Furniture with Personality™

Telephone 800.482.1717
Fax 812.482.8800
www.nationalofficefurniture.com

Part #2879049
Rev,A

Printed in U.S.A
© 2017 Kimball International, Inc.


Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.

Assembly Instruction

Work Surface Assembly


POWER CONNECT OPTION 1

(2 Power Grommet Connection)

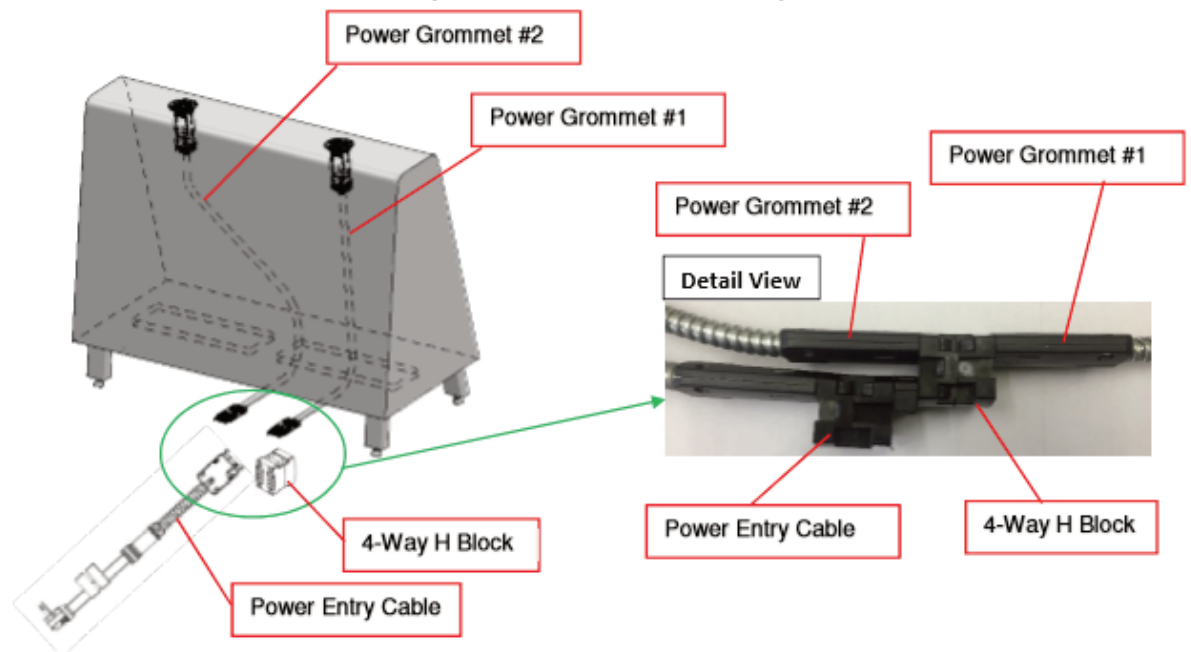


POWER CONNECT OPTION 2

(2 Power Grommet/Single Jumper Connection)

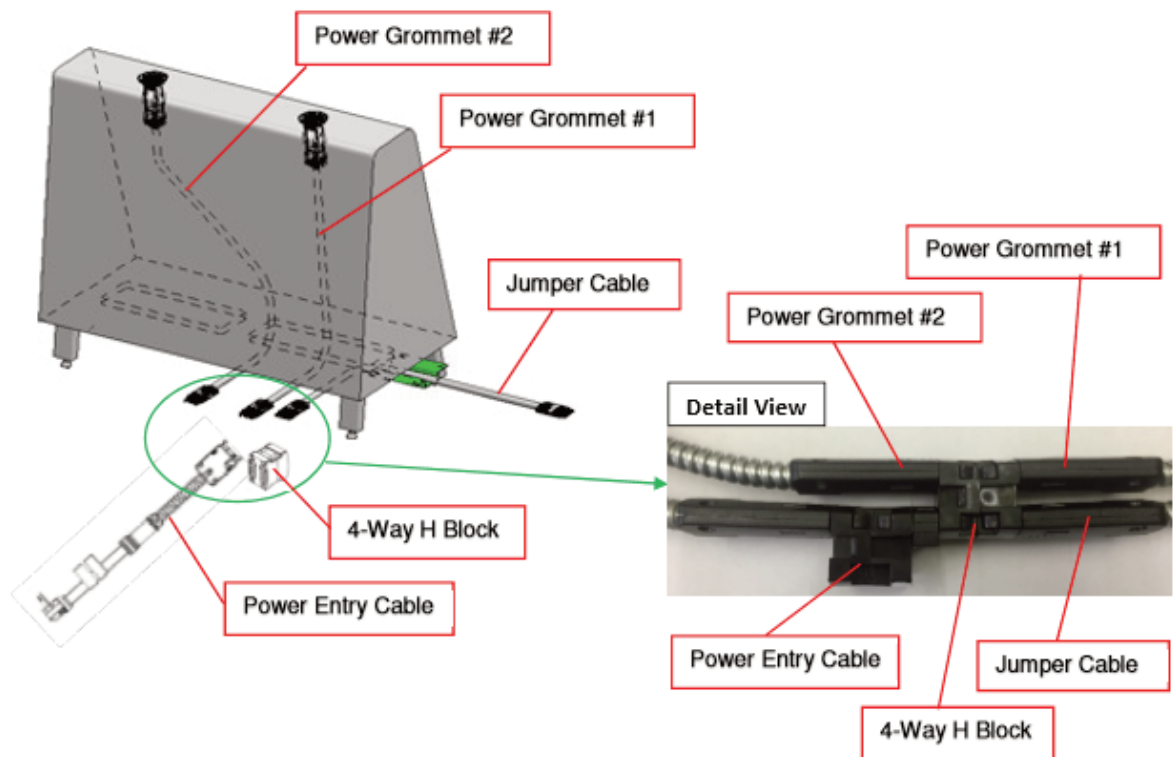


Assembly Instruction

Work Surface Assembly

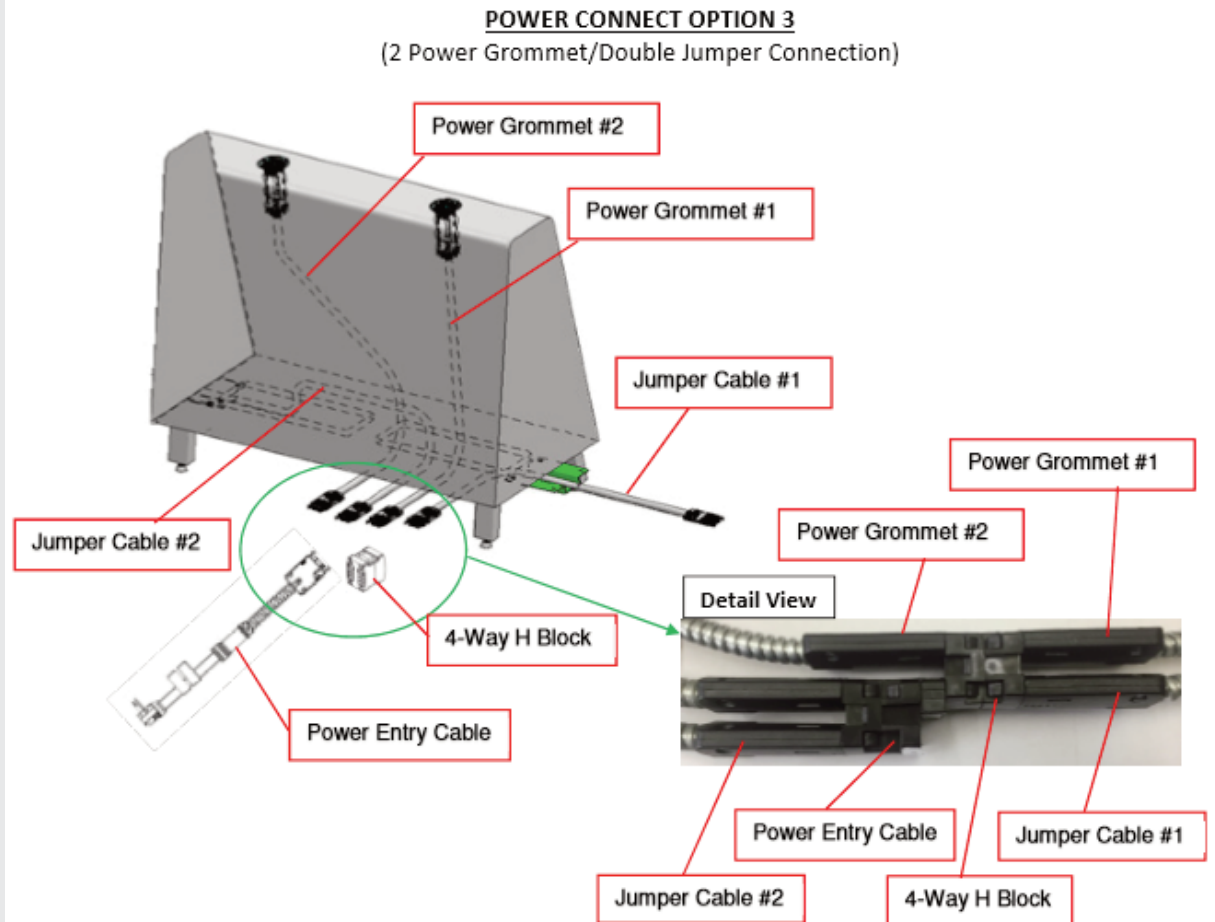

5. Position the connection up inside the spine unit so cables are not visible beneath the unit.
6. Secure the metal cable clamp to the bottom panel of the upholstered spine with the attachment screw provided. It is recommended the clamp to be located a minimum of 1 ½" from any edge of the bottom of the upholstered spine. Metal clamp is to be secured around the metal flexible conduit, not around the insulated rubber portion of the cord. See the illustration below.

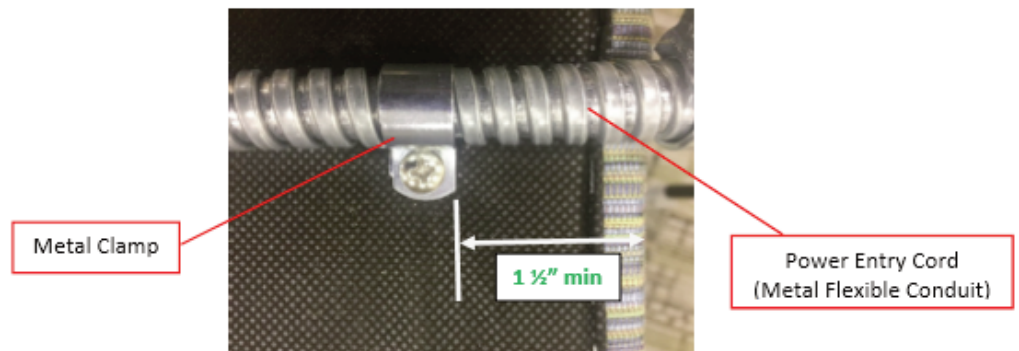

7. Align, orient, level, & gang the unit in the desired final position.