

Assembly Instruction

1 Unpack the worksurface and place upside-down on a soft, clean surface to avoid scratches.

2 Unpack the metal base and place upside-down on top of the worksurface, lining up the pilot holes in underside of the worksurface with the outer-most holes in the metal base. Screw the metal base onto the worksurface starting with these pilot holes and attaching through every pilot hole in the worksurface using the provided screws.

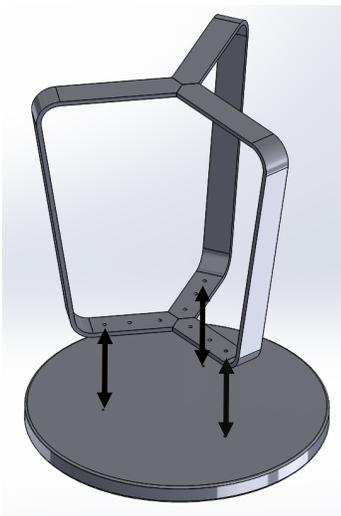


FIGURE A

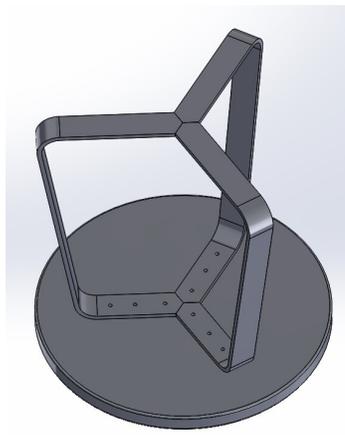


FIGURE B

3 Locate the supplied adhesive backed felt pads from the hardware kit. Apply 2 pads tangent to each other, towards the end of each leg section. 6 pads will be used on 3 leg bases and 8 pads will be used on 4 leg bases.

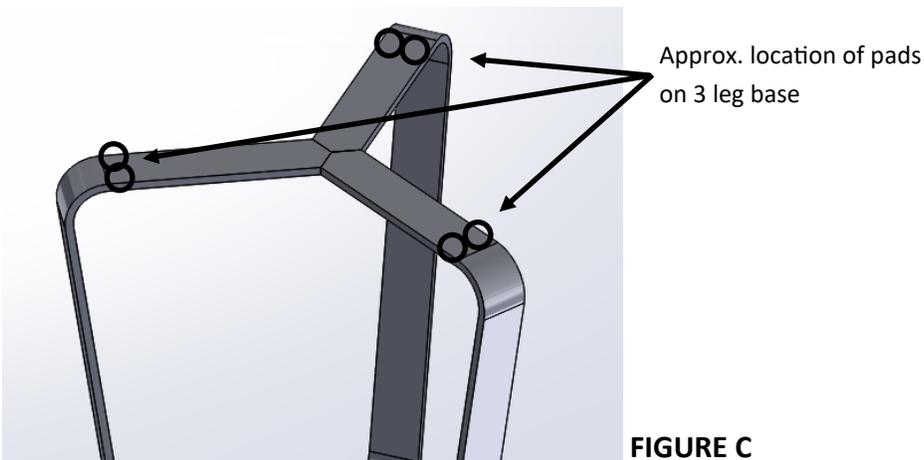


FIGURE C

Marnia Occasional Tables

Package Contents

Hardware.....	Qty
Panhead Phillips #10 3/4 Inch	16
Felt Glides	8

Tools Required
Drill (Phillips #2)

NATIONAL
Furniture with Personality™

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 3146760
Rev. A

Printed in U.S.A.
© 2014 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.