

Etarran®

## Panel to Connector Attachment

### Tools Required

- Cordless drill/driver (90deg driver works best)
- Socket extension (if 90deg driver isn't available)
- 3/8" Socket

### Installation

1. Align the hook at the base of the frame with the notch at the base of the corner connector. Make sure connector is seated all the way on the frame hook. **(Figure A)**
2. Insert bolt through the frame into the connector and attach the connector using the flange nut. **(Figure B)**
3. Set the driver to the highest torque setting, **NOT ON THE DRILL SETTING**, and tighten the bolt.
4. In instances where there is not a hook on the frame to engage the connector, install the hook on the connector that is provided in the connector hardware bag **(Figure C)**

Figure A

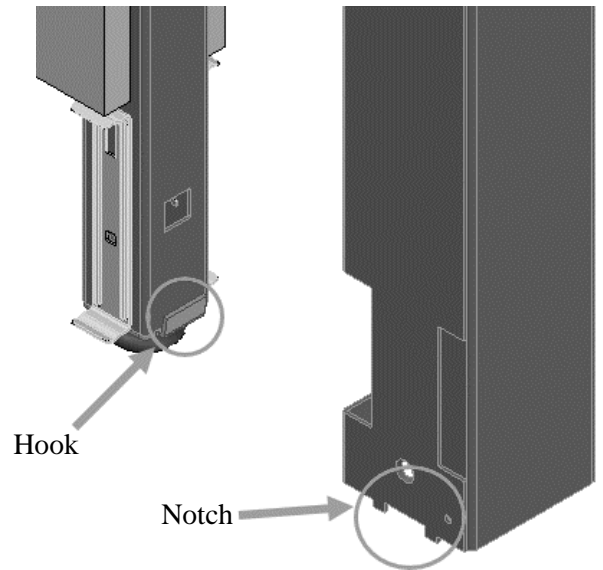


Figure B

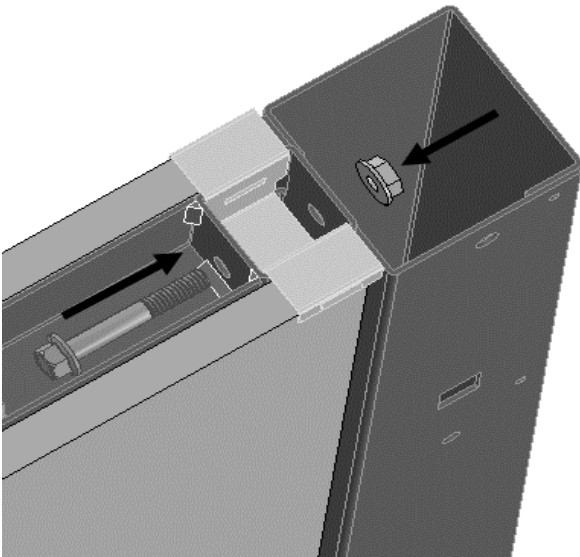


Figure C

