


Assembly Instruction

1 Place height adjust table upside down on clean soft surface.

2 Locate hanging ped so that it is 4" off the leg column and parallel to the front edge of the surface. Figure A

Figure A

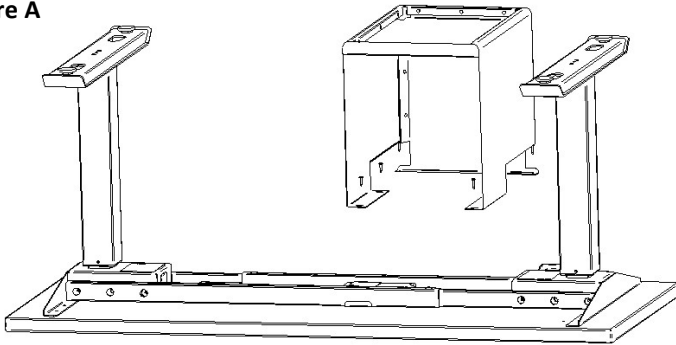

3 Attach ped with #8 x 5/8" pan head Phillips screws. Two in each side and two in the back.

Figure B


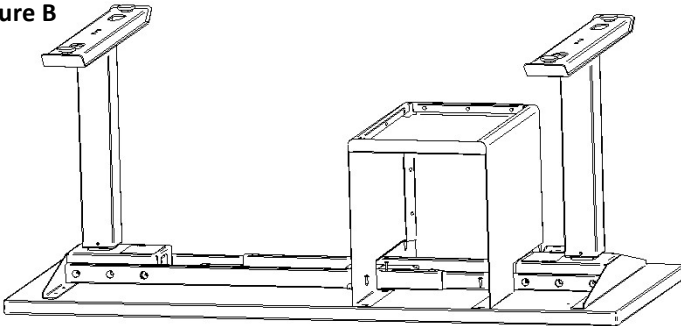


Figure C

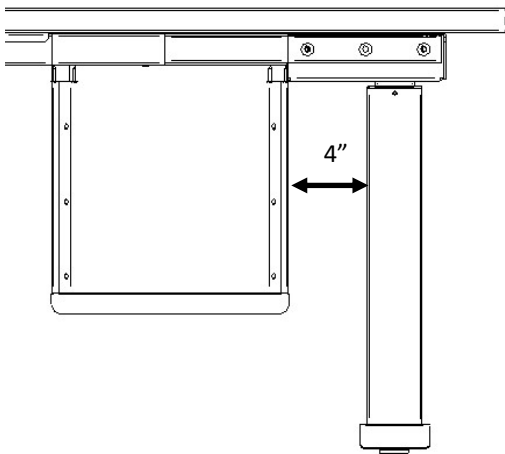

WaveWorks

Package Contents

Components..... Qty

Hanging Ped 1
#8 x 5/8" pan head Phillips 6

Tools Required

Tape measure
Cordless Drill
#2 Phillips tip

NATIONAL

Furniture with Personality®

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 3553474
Rev. -

Printed in U.S.A
© 2023 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.