


Assembly Instructions

1

Reception Counter kits have several different configurations (Figure A). Find your desired configuration and follow the instruction accordingly.


Figure A

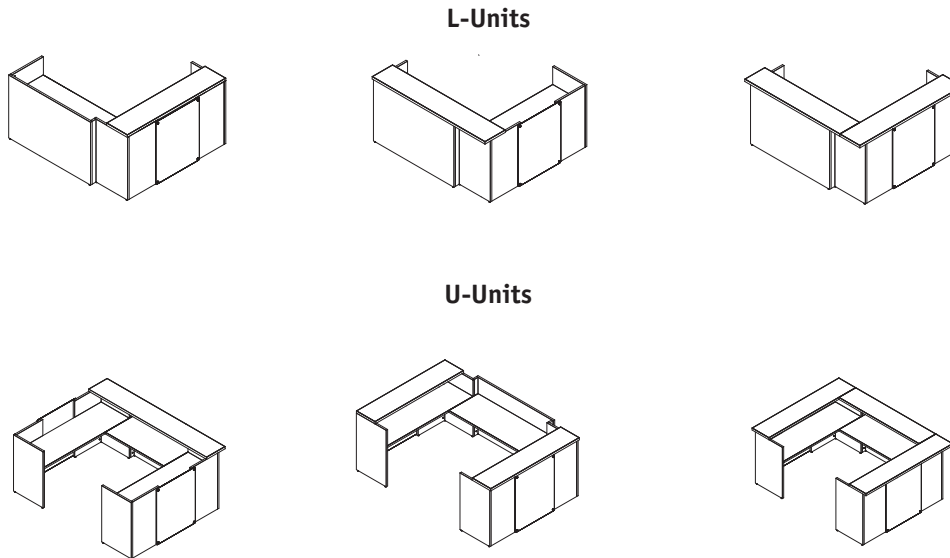

2

Each kit comes with Nine (9) L Brackets and one (1) flat bracket. Attach the Nine (9) L-Brackets with the #8 x 5/8" Panhead Screws spaced even per your configuration (Figure B).

Figure B

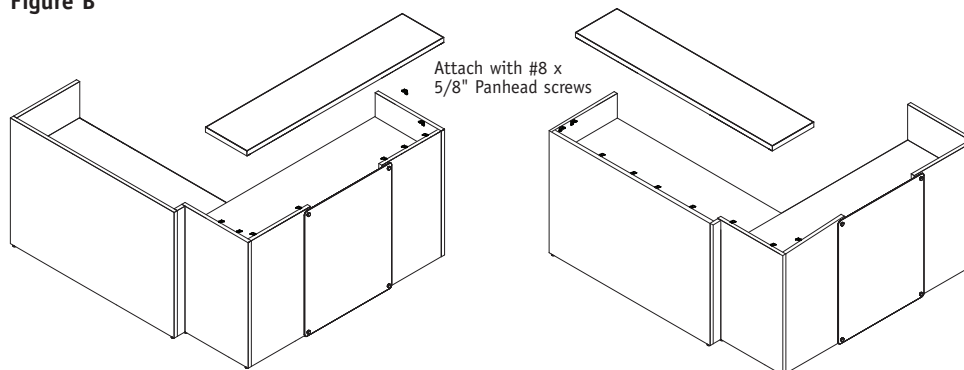


3

If the configuration has two (2) or more kits then the flat bracket will be used to attach the two (2) joining kits. Attach the flat bracket using four (4) #8 x 5/8" Panhead Screws to the underside of the long kit. Center the flat bracket as shown in (Figure C).

Note: All L-Brackets should be used but not necessarily all flat brackets. One (1) flat bracket per joint.

Figure C

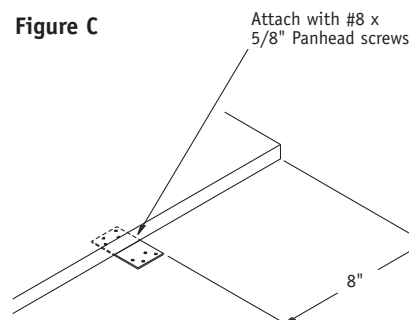

Reception Counter Kit

Recommended Tools

- Tape Measure
- Phillips Screw Bit
- Phillips Screwdriver
- Square

Package Contents Qty.

- Flat Bracket 1
- L Bracket 9
- #8 x 5/8" Panhead Screw 26

NATIONAL | Furniture with Personality™

Telephone 800.482.1717
Fax 812.482.8800
www.nationalofficefurniture.com

Part #2273445
Rev , -

Printed in U.S.A
© 2010 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.

Assembly Instruction

Reception Counter Kit

4

Position and align the kit over the brackets per your configuration attach all brackets with #8 x 5/8" Panhead Screws (Figure D).

Figure D

