


Installation Instructions


Momo Aspen Solid Brass Entrance Pull Handle - Back to Back Install




1. Components

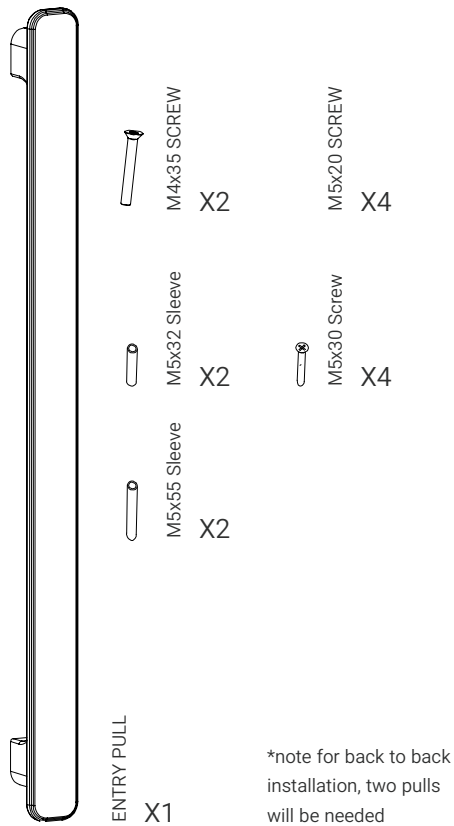

2. Drilling Dimensions

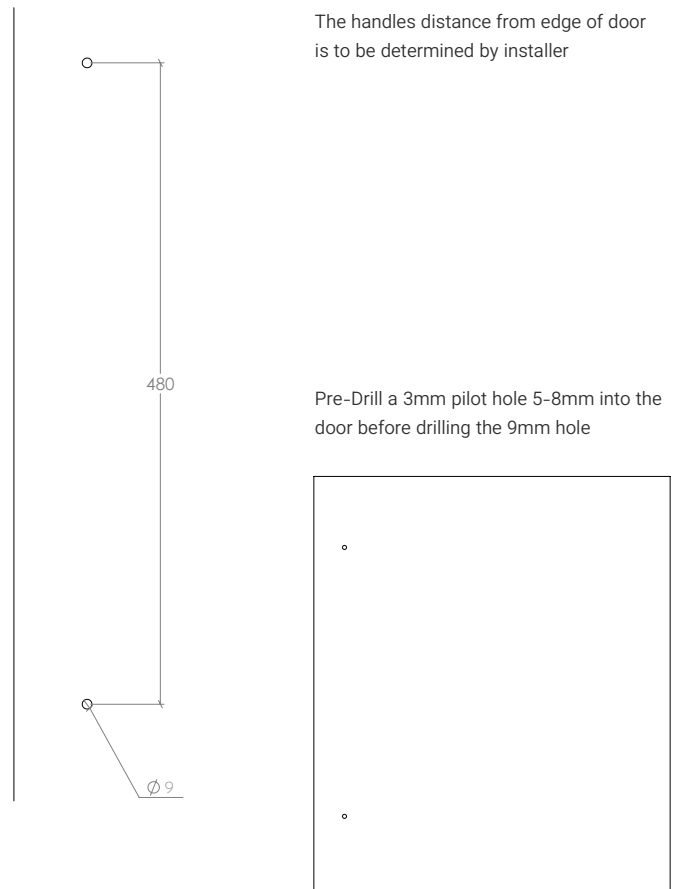

3

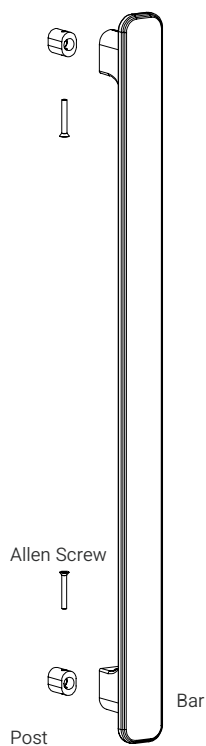

Door Thickness Specifications:

Door Thickness Min (mm): 35mm

Door Thickness Max (mm): 80mm

Hardware is provided in the boxes for either door thickness application

Installation Instructions

Momo Aspen Solid Brass Entrance Pull Handle - Back to Back Install





4.

Place M5x20 screw into the entry pull post and secure with the M5 sleeve

Repeat and secure the other side so they are now fixed to the door



Ensure the holes on top of the post are inline vertically

Carefully install the Entry Pull bar over the posts

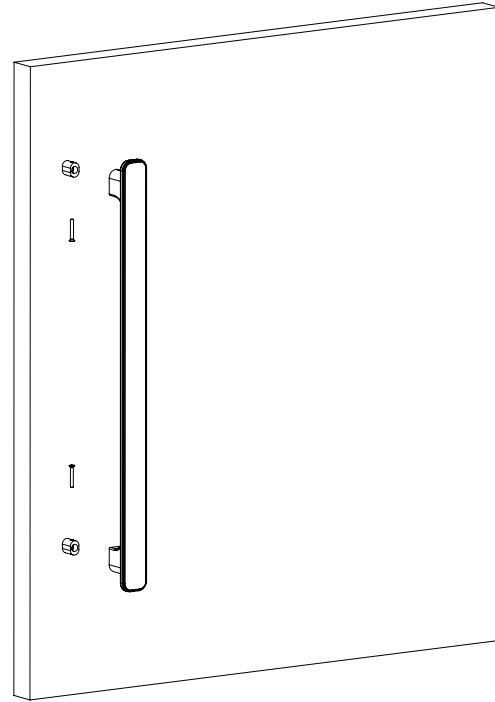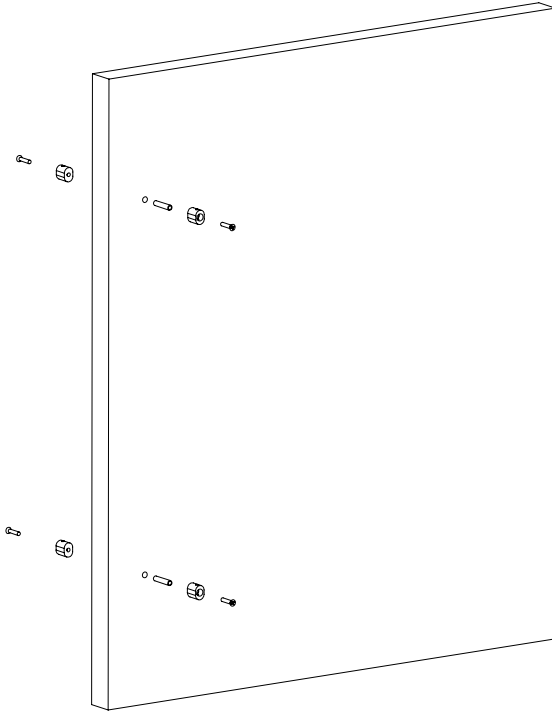

5.

Secure the bar to the posts with the M4x35 Allen Head screw by hand

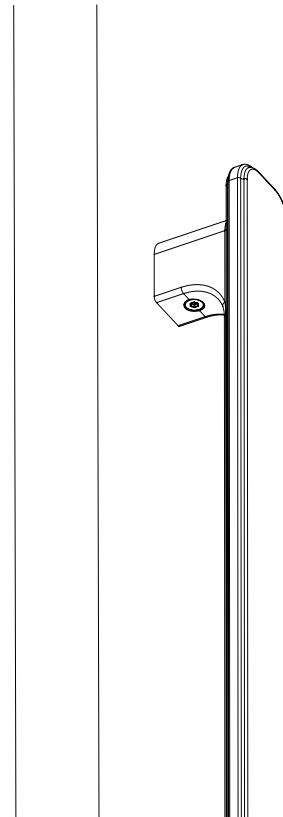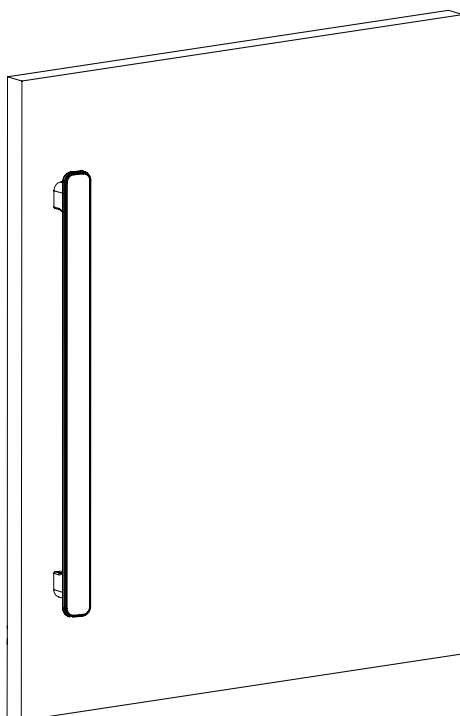


Installation Instructions

Momo Aspen Solid Brass Entrance Pull Handle, Single Sided Installation



1. Components

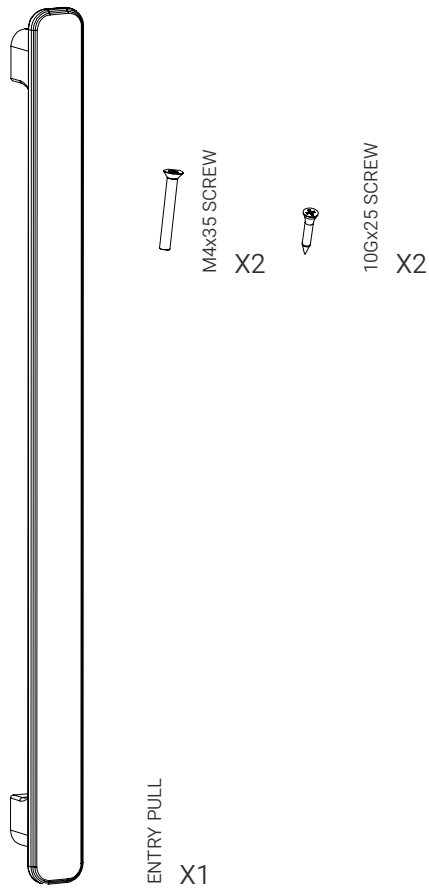


2. Drilling Dimensions




The handles distance from edge of door is to be determined by installer

Pre-Drill a 3mm pilot hole 5-8mm into the door before installing 10G Screw



3

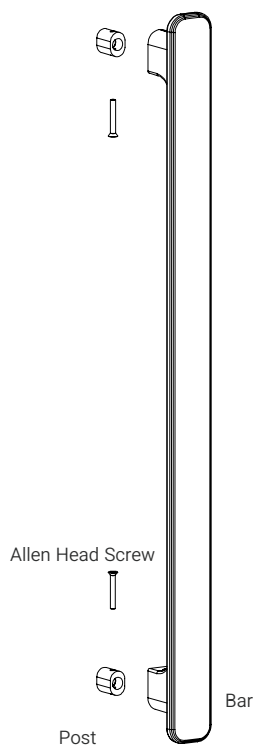

Installation Instructions


Momo Aspen Solid Brass Entrance Pull Handle, Single Sided Installation

4.


Place 10Gx25 screw into the entry pull post and screw into the pre-drilled hole

Repeat and secure the other side so they are now fixed to the door

Ensure the holes on top of the post are inline vertically

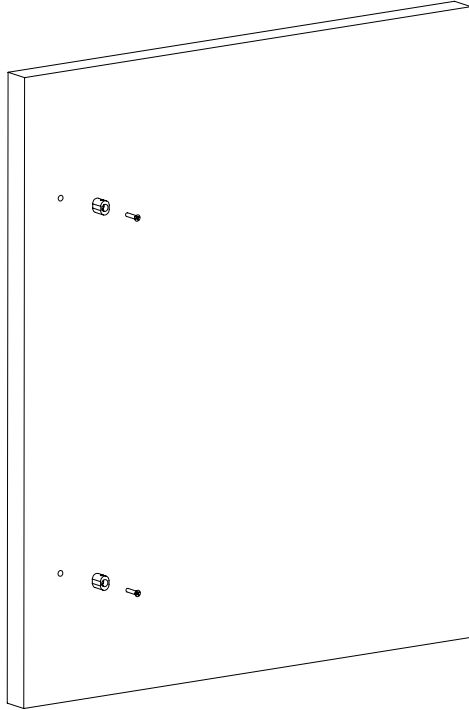

Carefully install the Entry Pull bar over the posts

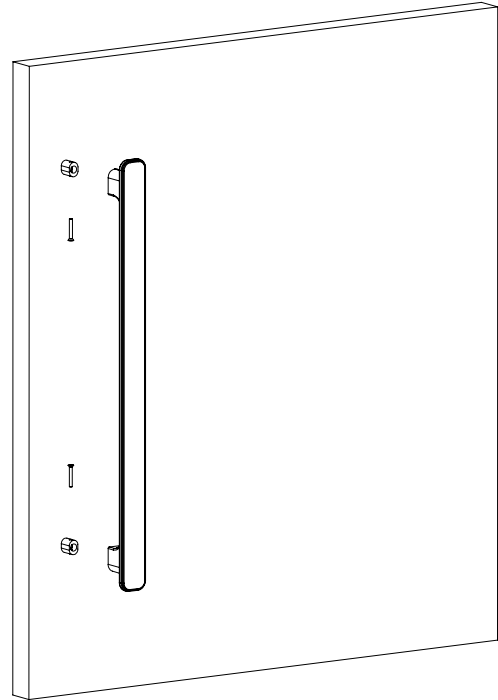

5.

Secure the bar to the posts with the M4x35 Allen Head screw

