
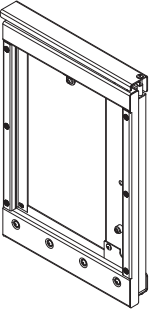




ITEMS PART			
NO	PART DRAWING		ADET PCS.
1			1
2			1
3			1
4	 3.	4x20	11
5	 3.	4x25	3
6		M5x10	2

A-1

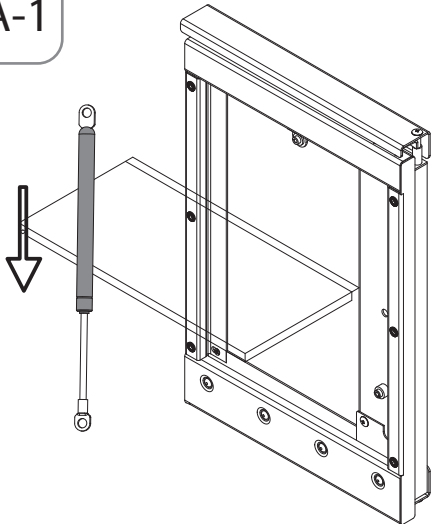


RIGHT SIDE SHOCK ABSORBER POSITION



A-2

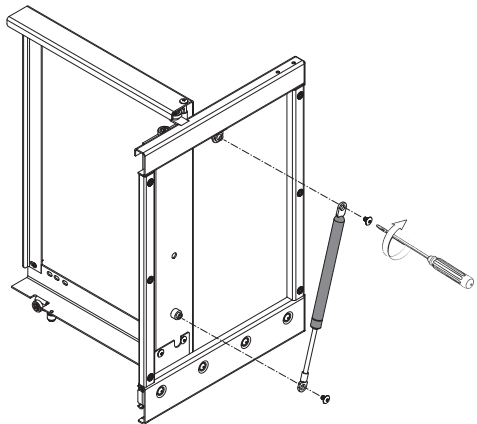




B-1

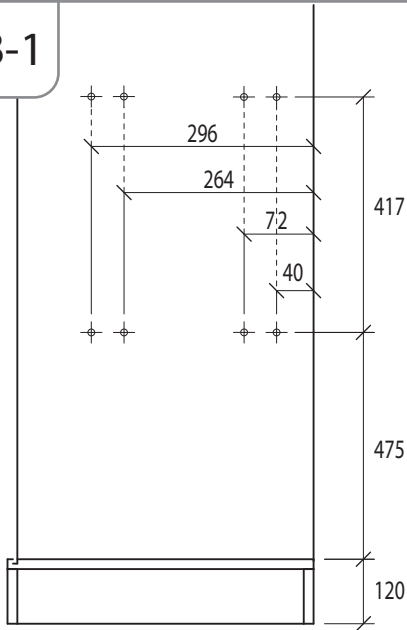


B-2



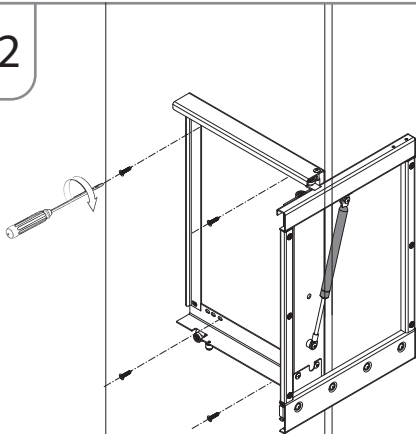


C-1

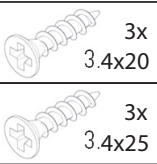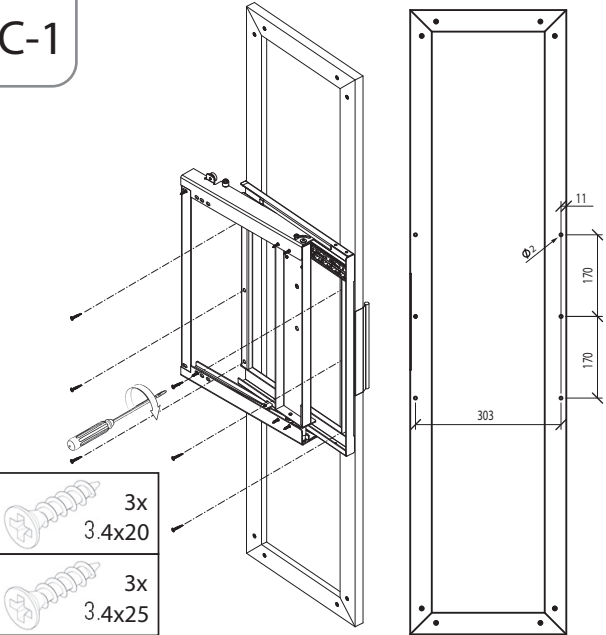


C-2

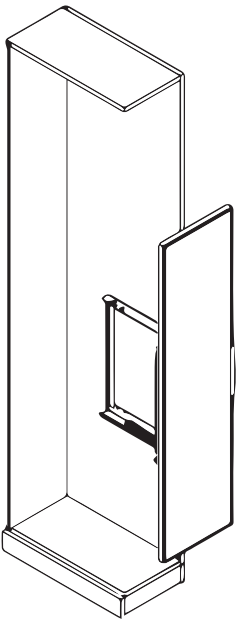

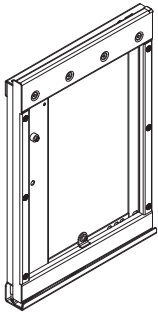
ITEMS PART			
NO	PART DRAWING		ADET PCS.
1			1
2			1
3			1
4	 3.	4x20	11
5	 3.	4x25	3
6		M5x10	2

A-1

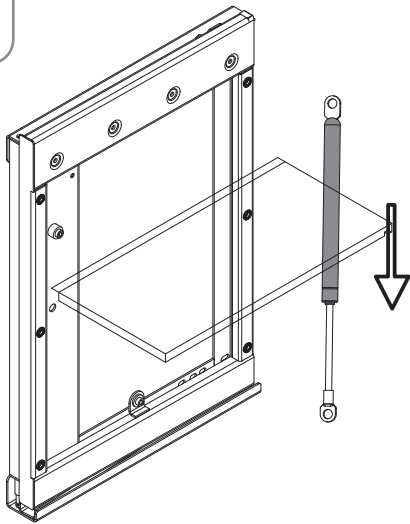


LEFT SIDE SHOCK ABSORBER POSITION

A-2


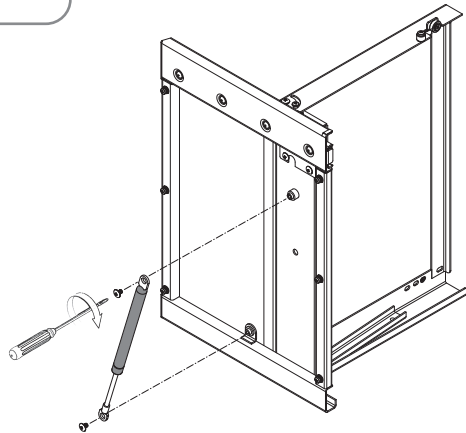


2x
M5x10

B-1

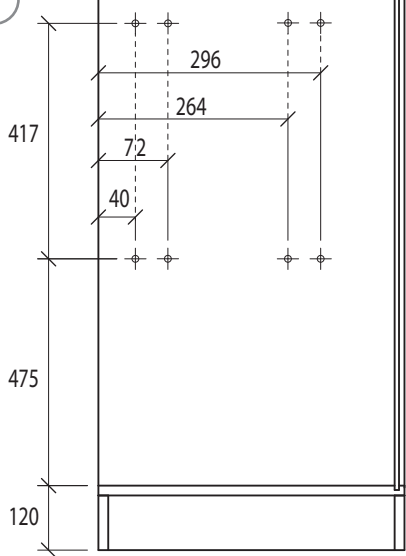


B-2

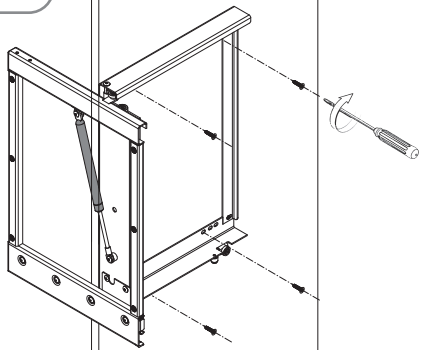

8x
3.4x20

C-1

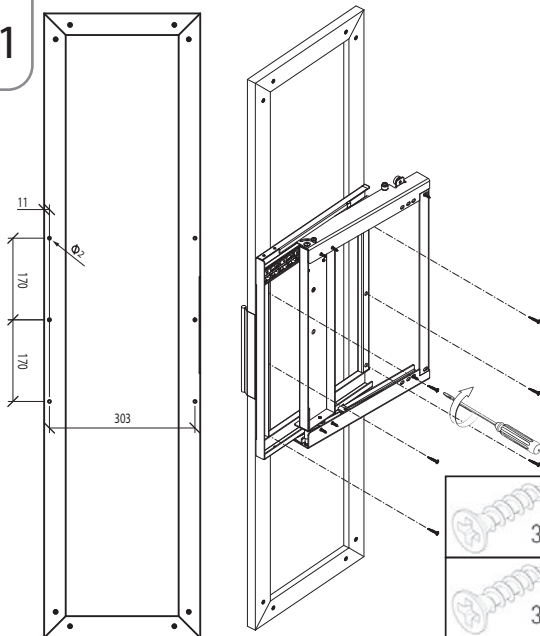

3x
3.4x20



3x
3.4x25

C-2

