

32036 Adapter Kit

Installation Instructions

32036 ADAPTER KIT

Plug-In Harness Installation

Follow the Isolation Module Installation Instructions included with the harness kit until connecting to the vehicle lighting connectors.

Plug-In Adapter Installation


1. Disconnect the vehicle driver-side male and female front lighting connector.

NOTE: Use dielectric grease on all electrical connections to prevent corrosion. Fill receptacles and lightly coat ring terminals and blades before assembly.

2. Connect the plug-in adapter black male and female connectors to the plug-in harness male and female connectors.
3. Connect the plug-in adapter black male and female connectors to the vehicle male and female vehicle lighting connectors.
4. Repeat on the passenger's side.
5. After completely checking all vehicle and plow lighting functions, secure harnesses with cable ties away from any sharp edges and hot or moving parts.

TYPICAL 2-PLUG, 3-PORT MODULE SYSTEM DIAGRAM

NOTE: On 2-plug electrical systems, plug covers shall be used whenever snowplow is disconnected.

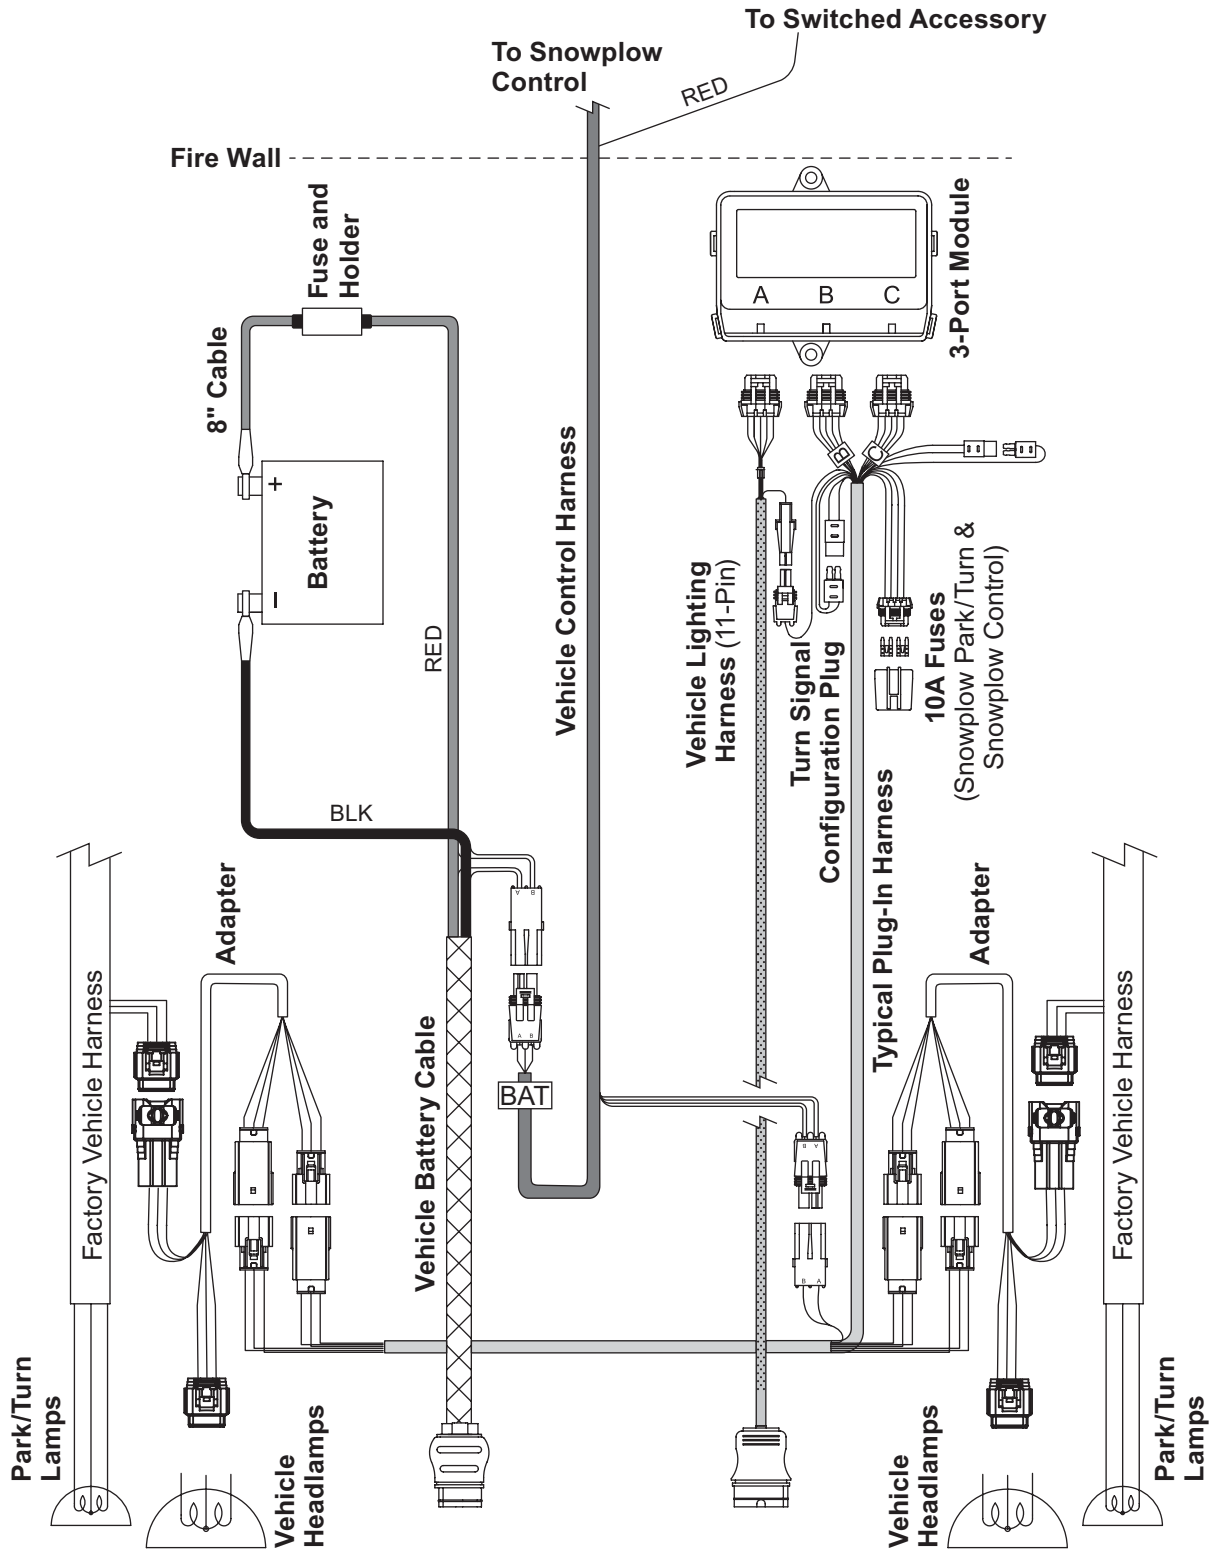

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.
