


5121-G1 / 80162

Installation Instruction

- | | | |
|---|---|--|
| ① M12 x 105 bolt, washer, nut
 x 16 | ② M12 x 100 bolt, washer, nut
 x 16 | ③ M10 x 20 bolt, washer (big)
 x 6 |
|---|---|--|

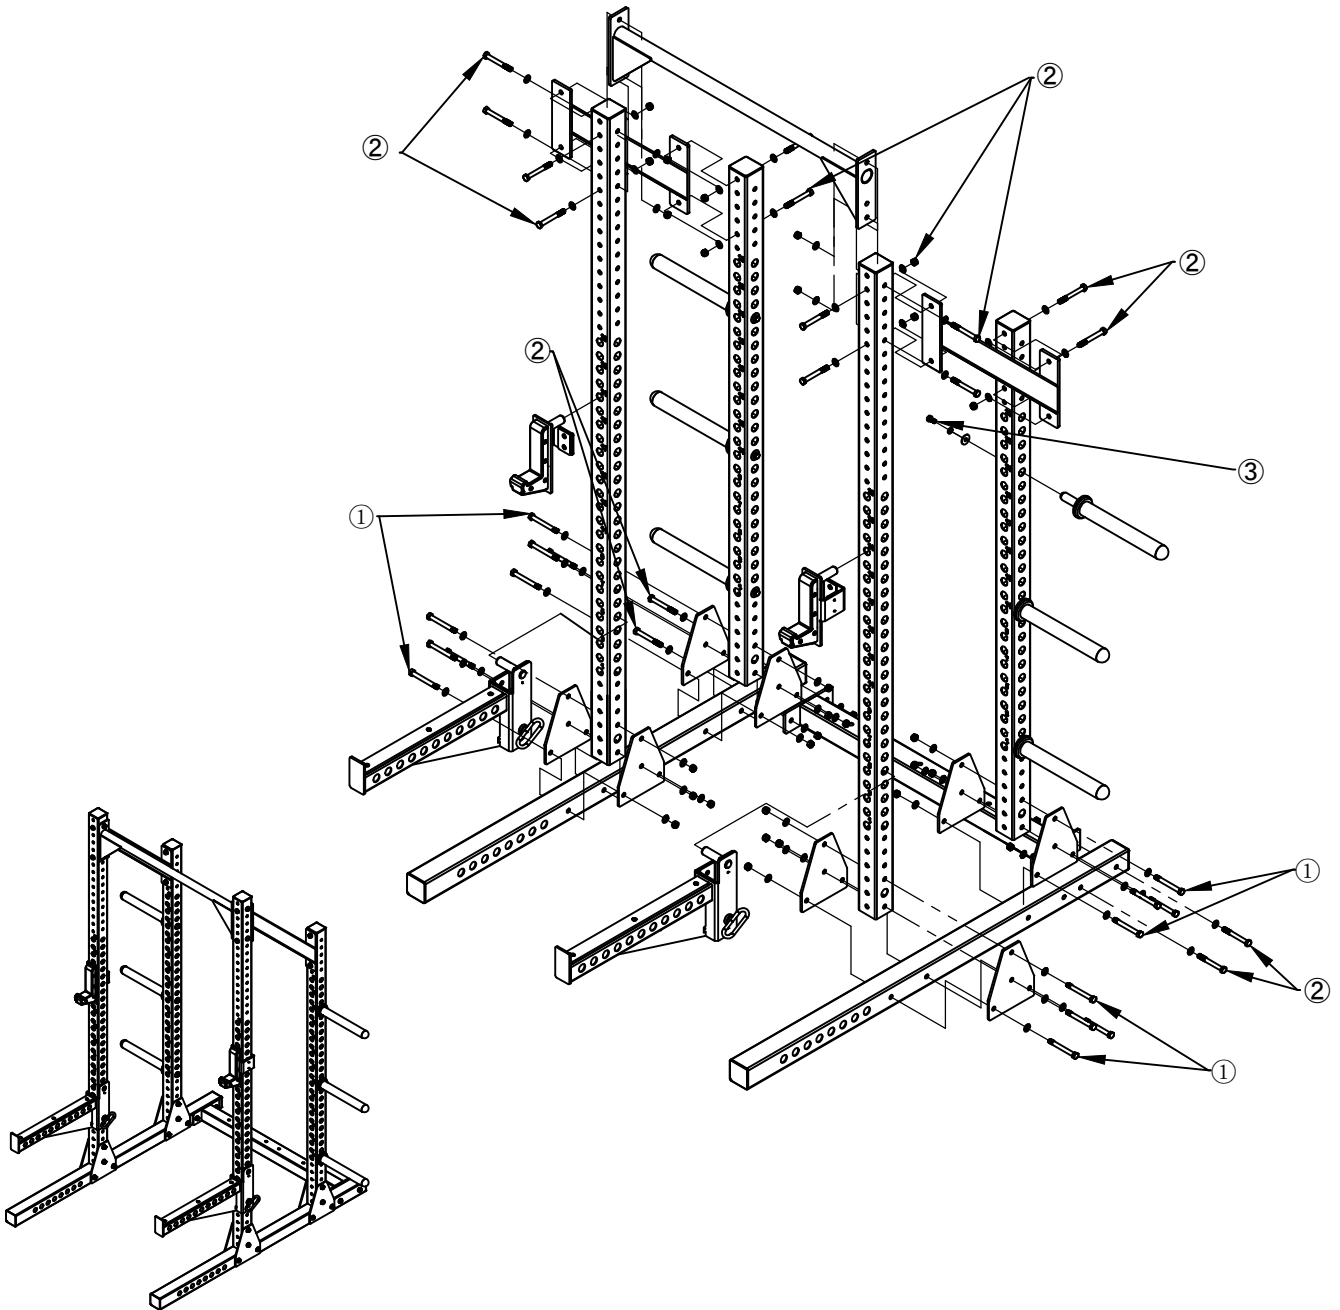

Millimeters



Inches