

Pro Vision Q200

 radius

Install Guide

 vision

What's included


Camera



Wrench



Hardwire cable

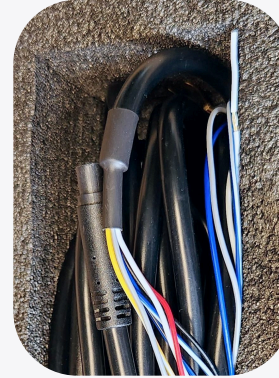

OBD cable



Step 1

Prepare mounting location

- A. Slightly loosen the camera mount using the included wrench to allow rotation of the camera.
- B. Without removing the peel from the adhesive, hold the camera to the windshield in the desired location.
- C. Clean the windshield in the desired mounting location.

Step 2

Mount the camera

- A. Remove the peel from the adhesive and mount on the cleaned portion of the windshield.
- B. Rotate the camera to be horizontal and tighten the mount to prevent further rotation.

Step 3

Power the harness

Determine whether you have the hardwire harness or the OBD harness.

Hardwire harness

1. Find a constant power source, ignition power source and ground (fuse taps are recommended).
2. Wire the **red wire** to a constant power source.
3. Wire the **white wire** to an ignition power source.
4. Connect the **black wire** to a ground location.
5. Run the power cable up to the camera.

OBD harness

Plug the OBD harness into the OBD port and run the power cable up to the camera.

NOTE: Please route the cabling outside of the driver's view.

Additional questions?

Contact us at prosupportna@radius.com or 1-888-278-9781