
DXV Oak Hill® Wall Mounted Accessories

Robe Hook - Model D35155210 Towel Ring - Model D35155190 Towel Bar 18" - Model D35155180 Towel Bar 24" - Model D35155240 Tissue Holder – Model D35155235

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

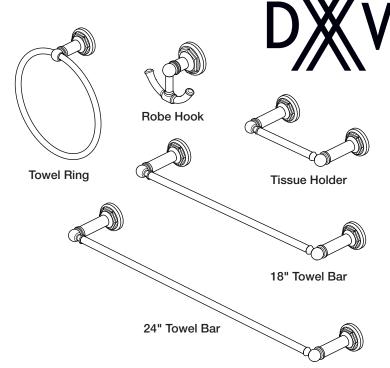


RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing, supply stores. It is essential that the tools and materials be on hand before work is begun.










3"

Tissue Holder

ROUGHING-IN DIMENSIONS: • For reference

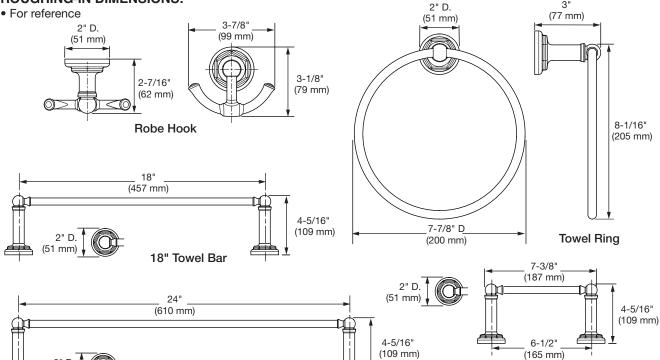

ഗ

Ш

S

Ш

 α


24" Towel Bar

INSTALL WALL BRACKET

- The WALL MOUNTED ACCESSORIES (1) works best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the WALL MOUNTED ACCESSORIES (1) are to be installed on a tile or plaster wall the ANCHORS (4) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. *IMPORTANT: The *center line for the MOUNTING PLATE (3) must be level or the wall accessory will not mount level.* Using the MOUNTING PLATE (3) as a template mark the three spots for the ANCHORS (4). If MOUNTING PLATE (3) is secured to a stud or cross brace drill small pilot holes for SCREWS (2).
- For installations on drywall or tiled walls: Use ANCHORS (4) and SCREWS (2) for securing MOUNTING PLATE (3) to finished wall. Drill two 1/4" dia. holes a minimum of 1-3/4" deep. Insert the two ANCHORS (4) flush with face of the finished wall.
- Secure MOUNTING PLATE (3) to wall with SCREWS (2).


2 INSTALL ACCESSORY

• Install WALL MOUNTED ACCESSORY (1) onto installed MOUNTING PLATE (3). Push WALL MOUNTED ACCESSORY (1) flush against finished wall and tighten SET SCREW (5) with HEX WRENCH (6) supplied with accessory.

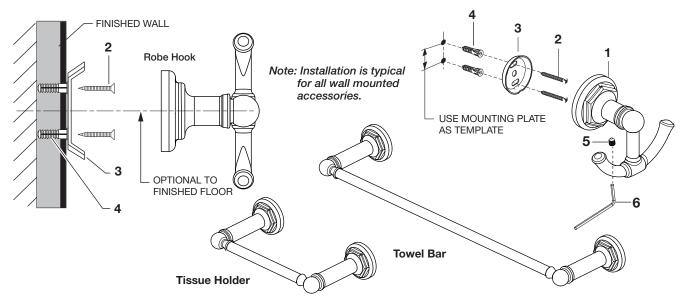

3 INSTALL TOWEL BAR

- See detail for the center to center dimension of TOWEL BARS (1). For installation of the MOUNTING PLATE see step 1.
- Note: The center line of MOUNTING PLATES (3) must be level.
- Install TOWEL BAR (1) onto installed MOUNTING PLATES (3). Push TOWEL BAR (1) flush against finished wall and tighten SET SCREWS (5) with HEX WRENCH (6) supplied with accessory to secure to wall.

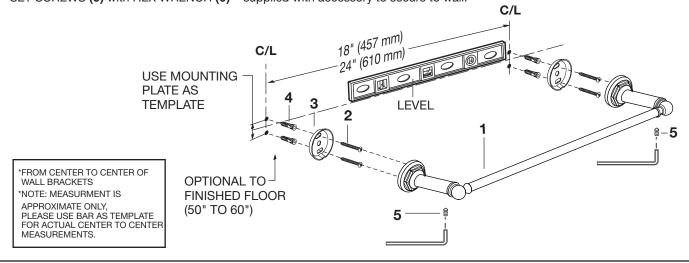

M985090 (6/20)




DXV Oak Hill®


Wall-Mount Accessories

MODEL NUMBERS

Robe Hook - D35155210 Towel Ring - D35155190 Towel Bar 18" - D35155180 Towel Bar 24" - D35155240 Tissue Holder - D35155235




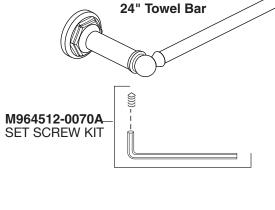



427

Replace the "YYY" with

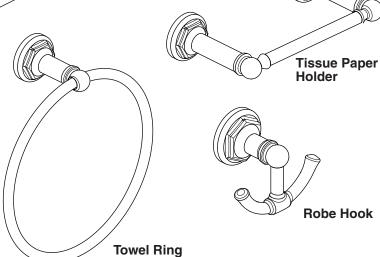

In the United States:

SATIN BRASS

DXV

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

M964248-0070AMOUNTING KIT

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico:

DXV Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx