


HAND SHOWER SET- WITH SLIDE BAR

INSTALLATION INSTRUCTIONS

Model No: 280L, 280D, 280E, 280F

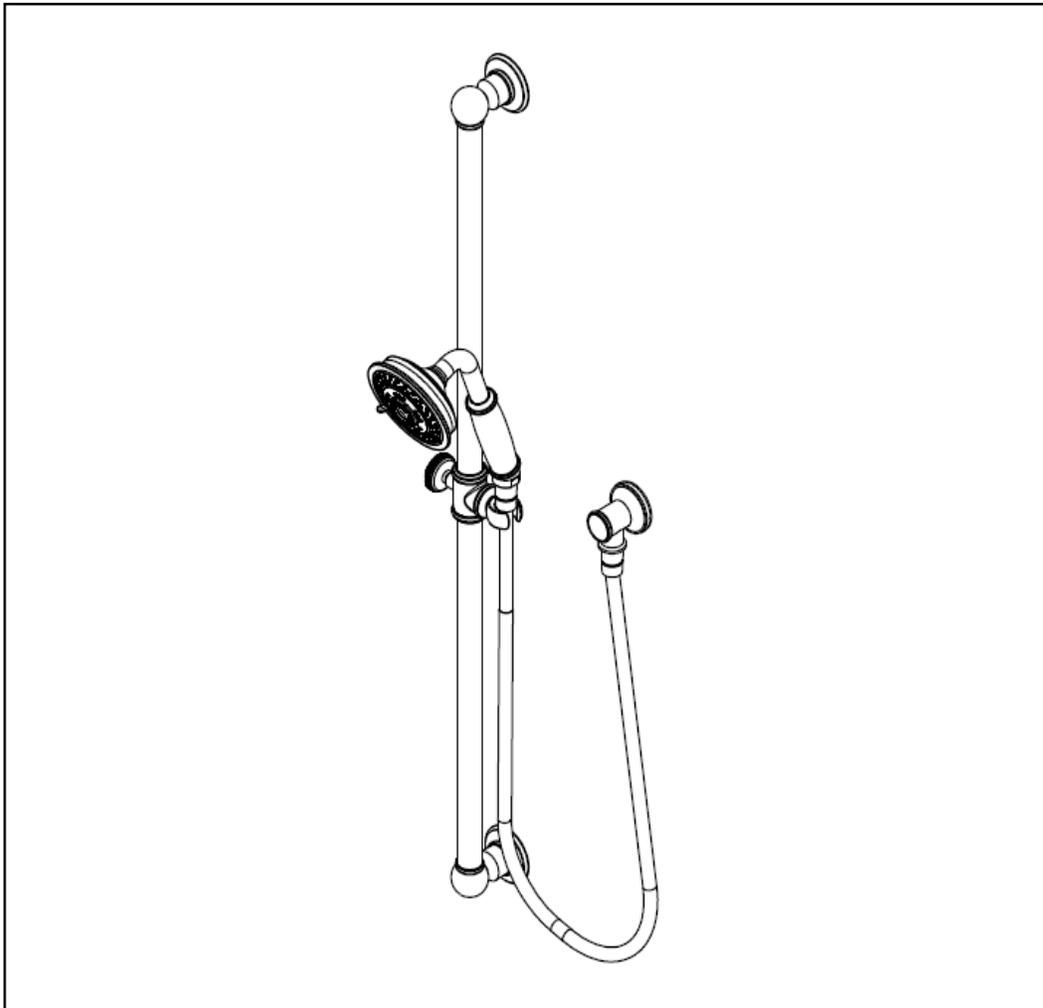

NEWPORT BRASS

Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207



WWW.NEWPORTBRASS.COM

We recommend Installation of this product by a Professional Plumbing Contractor

Note: The use of petroleum based plumber's putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials. All trim must be installed on finished wall surface.


Installation of Slide Bar Assembly

- Slide and lock HOLDER ASSEMBLY (7) onto SLIDE BAR (8). Lock in place by tightening holder knob.
- Assemble END POSTS (5) to each end of SLIDE BAR (8) per 35-1/2" dimension in Figure 1.
- Secure assembly in place with cone point SETSCREWS (9). See Figure 2.

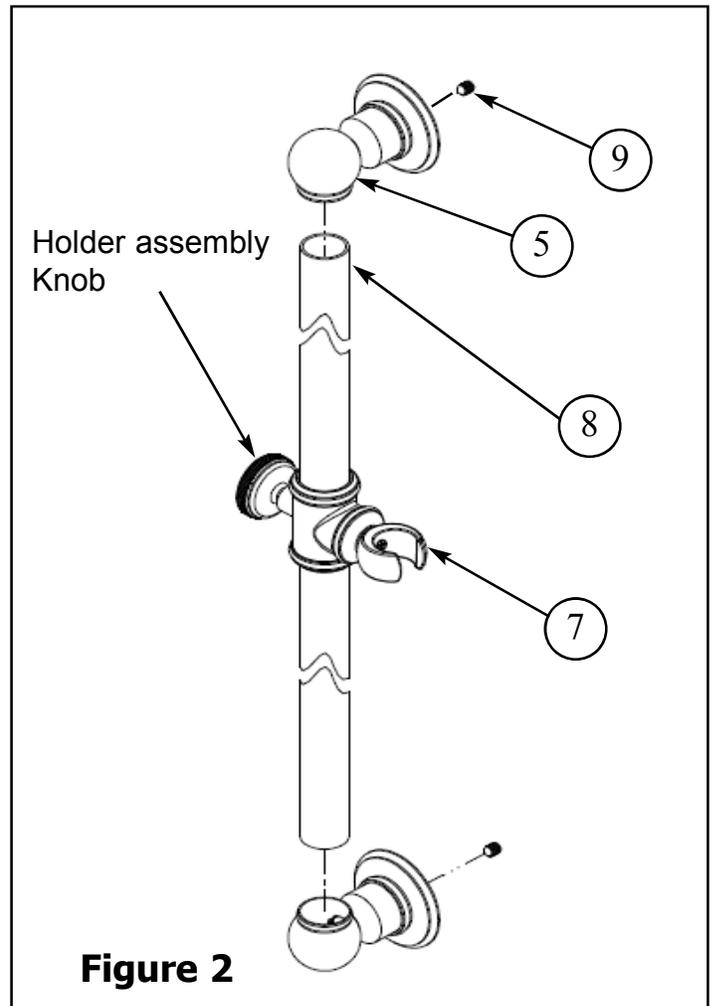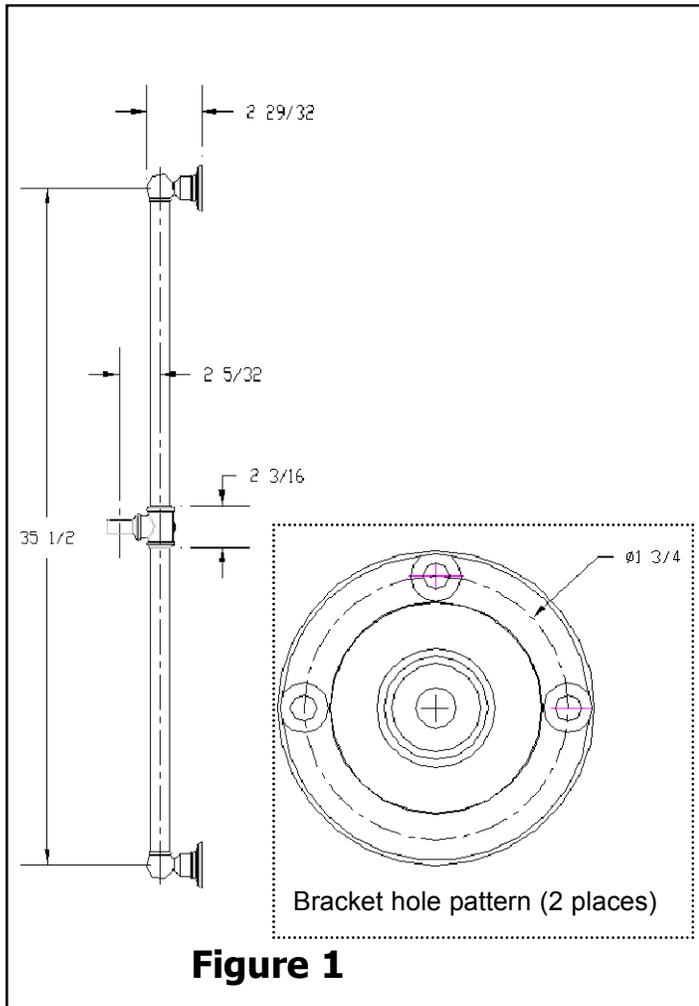

Installation of Slide Bar Assembly

- Locate the desired position of slide bar on finished wall. See Figure 1.
- Mark wall and drill 5/16" holes for WALL ANCHORS (1) to dimension shown in Figure 1.
- Place BRACKETS (2) over wall ANCHORS (1) and secure with SCREWS (3).
- Slide ESCUTCHEON (4) onto END POST (5), and place END POST (5) into the lower BRACKET (2) and secure with SETSCREWS (6).
- Slide ESCUTCHEON (4) back against finished wall surface.
- Insert SLIDE BAR (8) into the secured END POST (5) and repeat the above steps to the other end of SLIDE BAR (8) as shown in Figure 3.

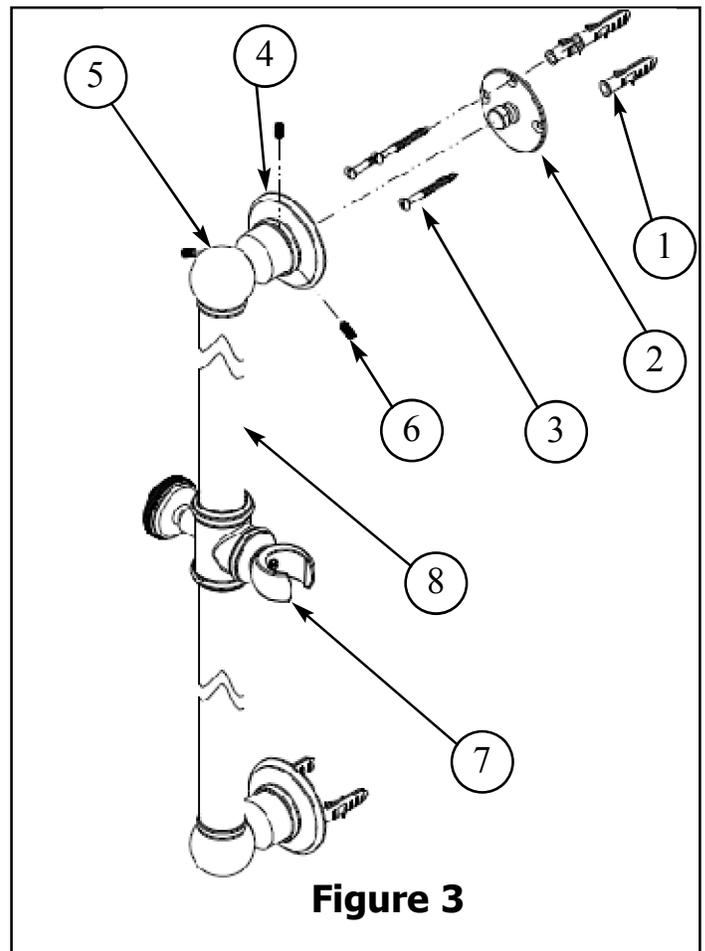

Supply Elbow Installation: See Figure 4.

- Based on finished wall thickness, installer must use an appropriate length 1/2" NPT NIPPLE (1), not included, for hand SHOWER (8) installation.
- Apply thread sealant to both ends of the NIPPLE (1) and thread into FITTING (2) behind finished wall.
- Attach supply ELBOW (3) onto other end of NIPPLE (1).

Hand Shower and Hose Installation:

See Figure 5.

- Place rubber WASHER (10) into both ends of HOSE (9).
- Attach longer conical end of HOSE (9) onto hand SHOWER (8). Note: This end of HOSE (9) has swivel joint to prevent coiling of HOSE (9).
- Attach the other end of HOSE (9) onto supply ELBOW (3). See Figure 1.
- Place hand SHOWER (8) into HOLDER (6).

