


# INSTALLATION INSTRUCTIONS

## DRAIN ASSEMBLY

### MODEL No's: I22 (Brass) I23 (Poly)



Recommended installation by a Professional Plumbing Contractor  
Fits 3 1/2" diameter drain hole.

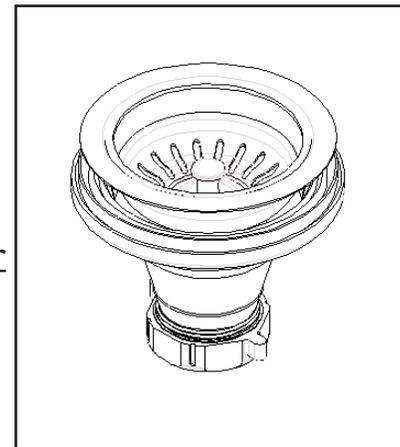

- Disconnect and remove existing flange / strainer assembly from drain pipe.
- Dis-assemble BODY ASSEMBLY (2) by removing BOLT (3).
- Place DRAIN BODY(4) and FOAM GASKET (5), (brass version only, non petroleum plumbers putty may be used in place of foam gasket), in sink hole.
- From underside of sink hole, place RUBBER GASKET (6) and DRAIN HOUSING (7). Secure to DRAIN BODY (4) with BOLT (3).
- Attach DRAIN HOUSING (7) to existing tail-piece drain pipes with 1 1/2" LOCK NUT(9) and WASHER (8) provided.
- Place BASKET ASSEMBLY (1), (I22-4 or I23-4) into DRAIN BODY (4). To seal, force basket downward. To open, pull basket upward.
- Run water in sink, open / close basket and inspect for leaks. Make adjustments as necessary.

