



Viega PureFlow Crimp Tee Zero Lead PolyAlloy - Model V5218

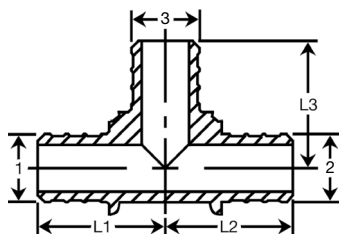


Part No.	Size (in)	L1 (in)	L2 (in)	L3 (in)
	1 2 3			
43500	$\frac{3}{8} \times \frac{3}{8} \times \frac{3}{8}$	1.16	1.16	1.16
43520	$\frac{1}{2} \times \frac{1}{2} \times \frac{1}{2}$	1.15	1.15	1.15
43334	$\frac{1}{2} \times \frac{1}{2} \times \frac{3}{4}$	1.25	1.25	1.15
43540	$\frac{3}{4} \times \frac{3}{4} \times \frac{3}{4}$	1.25	1.25	1.25
43433	$\frac{3}{4} \times \frac{1}{2} \times \frac{1}{2}$	1.25	1.15	1.25
43434	$\frac{3}{4} \times \frac{1}{2} \times \frac{3}{4}$	1.25	1.25	1.25
43443	$\frac{3}{4} \times \frac{3}{4} \times \frac{1}{2}$	1.15	1.15	1.25
43445	$\frac{3}{4} \times \frac{3}{4} \times 1$	1.30	1.30	1.34
43544	$1 \times \frac{3}{4} \times \frac{3}{4}$	1.37	1.36	1.36
43545	$1 \times \frac{3}{4} \times 1$	1.54	1.39	1.54
43553	$1 \times 1 \times \frac{1}{2}$	1.33	1.33	1.32
43554	$1 \times 1 \times \frac{3}{4}$	1.33	1.33	1.26
43560	$1 \times 1 \times 1$	1.53	1.53	1.53

Viega PureFlow Crimp Zero Lead Coupling PolyAlloy - Model V5215

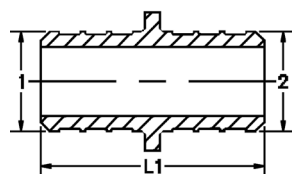


Part No.	Size (in)	L (in)
	1 2	
43402	$\frac{3}{8} \times \frac{3}{8}$	1.52
43403	$\frac{1}{2} \times \frac{1}{2}$	1.50
43332	$\frac{1}{2} \times \frac{3}{8}$	1.52
43343	$\frac{3}{4} \times \frac{1}{2}$	1.50
43353	$1 \times \frac{1}{2}$	1.70
43404	$\frac{3}{4} \times \frac{3}{4}$	1.50
43354	$1 \times \frac{3}{4}$	1.70
43355	1×1	1.82

Viega PureFlow Crimp Test Plug Zero Lead PolyAlloy - Model V5058

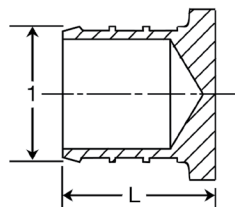

Part No.	Size (in)	L (in)
	1	
43702	$\frac{3}{8}$	0.76
43723	$\frac{1}{2}$	0.76
43744	$\frac{3}{4}$	0.95
43765	1	1.13

Viega PureFlow Crimp Valve Zero Lead PolyAlloy ¼ Turn - Model V5236

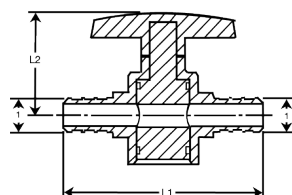

Part No.	Size (in)	L1 (in)	L2 (in)
	1		
43030	$\frac{1}{2}$	2.83	1.45
43040	$\frac{3}{4}$	3.00	1.45