



Viega PureFlow Crimp 90° Elbow Zero Lead Copper Crimp x FTG - Model V5020

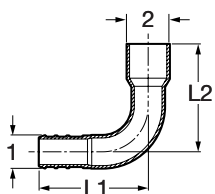


Part No.	Size (in) 1 2	L1 (in)	L2 (in)
44302	$\frac{3}{8}$ x $\frac{1}{2}$ FTG	1.65	1.56
44320	$\frac{1}{2}$ x $\frac{1}{2}$ FTG	1.44	1.49
44340	$\frac{3}{4}$ x $\frac{3}{4}$ FTG	1.94	1.87

Viega PureFlow Crimp Tee Zero Lead Brass - Model V5018ZL

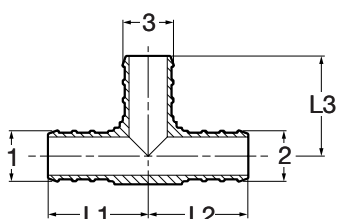


Part No.	Size (in) 1 2 3	L1 (in)	L2 (in)	L3 (in)
46500	$\frac{3}{8}$ x $\frac{3}{8}$ x $\frac{3}{8}$	0.89	0.89	0.88
46520	$\frac{1}{2}$ x $\frac{1}{2}$ x $\frac{1}{2}$	0.95	0.95	0.88
46524	$\frac{1}{2}$ x $\frac{1}{2}$ x $\frac{3}{4}$	1.07	1.07	1.01
46540	$\frac{3}{4}$ x $\frac{3}{4}$ x $\frac{3}{4}$	1.07	1.07	1.00
46433	$\frac{3}{4}$ x $\frac{1}{2}$ x $\frac{1}{2}$	1.20	1.20	1.10
46435	$\frac{3}{4}$ x $\frac{1}{2}$ x $\frac{3}{4}$	1.07	1.12	1.01
46443	$\frac{3}{4}$ x $\frac{3}{4}$ x $\frac{1}{2}$	1.07	1.07	1.01
46445	$\frac{3}{4}$ x $\frac{3}{4}$ x 1	1.21	1.21	1.25
46544	$\frac{3}{4}$ x 1 x $\frac{3}{4}$	1.20	1.39	1.10
46545	$\frac{3}{4}$ x 1 x 1	1.21	1.39	1.28
46553	1 x 1 x $\frac{1}{2}$	1.39	1.39	1.10
46554	1 x 1 x $\frac{3}{4}$	1.39	1.39	1.10
46560	1 x 1 x 1	1.36	1.36	1.36

Viega PureFlow Crimp Adapter Zero Lead Brass Crimp x MPT - Model V5011ZL

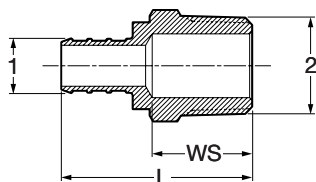

Part No.	Size (in) 1 2	L (in)	WS (in)
46302	$\frac{3}{8}$ x $\frac{1}{2}$ MPT	1.63	0.88
46321	$\frac{1}{2}$ x $\frac{1}{2}$ MPT	1.65	0.88
46324	$\frac{1}{2}$ x $\frac{3}{4}$ MPT	1.84	1.06
46342	$\frac{3}{4}$ x $\frac{1}{2}$ MPT	1.68	0.88
46340	$\frac{3}{4}$ x $\frac{3}{4}$ MPT	1.84	1.06
46446	$\frac{3}{4}$ x 1 MPT	2.07	1.38
46361	1 x $\frac{3}{4}$ MPT	2.02	1.06
46366	1 x 1 MPT	2.25	1.38

Viega PureFlow Crimp Adapter Zero Lead Brass Crimp x FPT - Model V5012ZL

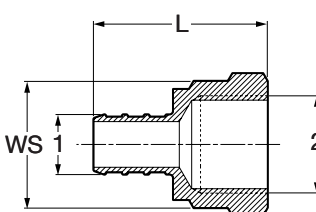

Part No.	Size (in) 1 2	L (in)	WS (in)
46323	$\frac{3}{8}$ x $\frac{1}{2}$ FPT	1.62	1.00
46333	$\frac{1}{2}$ x $\frac{1}{2}$ FPT	1.62	1.00
46334	$\frac{1}{2}$ x $\frac{3}{4}$ FPT	1.67	1.25
46344	$\frac{3}{4}$ x $\frac{3}{4}$ FPT	1.67	1.25
46345	$\frac{3}{4}$ x 1 FPT	1.89	1.50
46355	1 x 1 FPT	2.07	1.50