

# FASCINATION FX QUICK START GUIDE

## STEP 1 ATTACHING THE HOSE

### CONNECT HOSE TO MACHINE



INSERT HOSE IN MACHINE  
AND TURN  
COUNTERCLOCKWISE  
UNTIL IT LOCKS IN PLACE.



### CONNECT HOSE TO SPRAY GUN



AIR INTAKE



WHILE HOLDING THE END OF  
THE HOSE, PULL THE QUICK  
CONNECT SLEEVE BACK THEN  
ALIGN SPRAY GUN AIR INTAKE  
AND RELEASE.

## STEP 2 ADJUSTING YOUR SOLUTION DIAL

TURN FLUID KNOB CLOCKWISE UNTIL FULLY  
TIGHTENED.

**TIP:** WHEN MAKING ADJUSTMENTS HOLD THE  
SPRAY GUN WITH THE NOZZLE FACING YOU.

TURN FLUID KNOB COUNTER-CLOCKWISE  
UP TO 2 FULL TURNS.



FLUID KNOB


### PLEASE NOTE:

WE RECOMMEND TESTING WITH WATER FIRST  
BEFORE SPRAYING CLIENTS TO FINE TUNE THIS  
ADJUSTMENT FOR THE ATOMIZATION DESIRED.

## STEP 3 SETTING SPRAY PATTERN

TO ADJUST THE SPRAY PATTERN YOU WILL NEED TO  
TURN THE HORNS ON THE NOZZLE ONLY.

**PLEASE NOTE:** IF YOU ARE UNABLE TO TURN HORNS  
YOU MAY NEED TO LOOSEN CAP SLIGHTLY. IF THIS IS  
REQUIRED HOLD HORNS IN PLACE WHILE TIGHTENING  
CAP BACK TO AVOID HORN MOVEMENT.

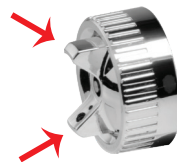

TO SPRAY IN A  
VERTICAL  
MOVEMENT

TO SPRAY IN A  
HORIZONTAL  
MOVEMENT

