



Wave 3.0 Spray Tan Overspray Extraction Booth



1: Place floor mat in desired location:



2: Remove protective film from brackets and support tubes.



3: Insert metal bracket into support frame tube (2 Tubes)

Align pre-drilled hole in the metal bracket with the pre-drilled opening on the support tube.

Tighten bracket and support tube.




4. Installing Back Support Bracket.

4A. Align the Back Support Bracket on the bottom of the support tube directly underneath the screw that was used to attach the metal bracket to the support tube.

4B. Insert bracket into support tube slot and lock into place.

4C. Repeat steps 4A and 4B for the second support tube.

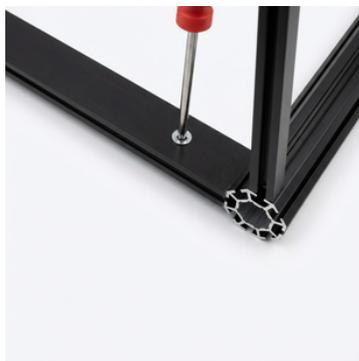

5. Installing Horizontal Bracket Connecting Support Tube

5A. Slide the horizontal bracket into the support tube slots until it is flush with the bottom of the support tubes.

Ensure that the bracket locks are facing the rear of the assembly.

5B. Lock bracket into place.



PLEASE REFERENCE PICTURE TO ENSURE PROPER ASSEMBLY



6. Installing Straight Bottom Bracket Into Support Tube.

6A. Slide the straight bottom bracket into the support tube one notch from the center of the support tube.

One notch to the left for the left side of the assembly and one notch to the right for the right side of the assembly.

6B. Lock the straight bottom bracket into place.

6C. Repeat for the remaining support tube.



7. Install Large Center Panel Into Support Tube.

7A. Take the larger rectangle panel and slid into the center notches of the support tube until the panel slips into the horizontal support bracket.



8. Install Horizontal Bracket Into Support Tubes.

Slide the horizontal bracket into the center of the support tubes and slip over the large center panel. Lock the bracket into place.



9. Install Fan Assembly Into Support Tubes.


9A. Orient the fan assembly with the power button on the top right .

9B. Align the edges of the fan assembly with the groove of the support tubes and slide into place.

9C. Fan assembly edge should slide into groove of the top of the horizontal bracket.



10. Install Horizontal Bracket and Lock Into Place (Same as previous steps).

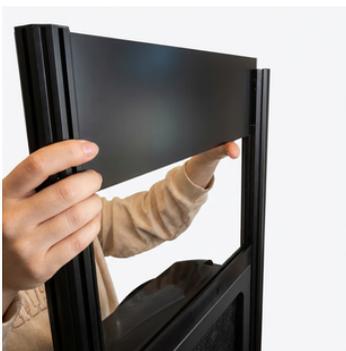

11. Install Small Panel Into Support Tube Assembly.



12. Install Horizontal Bracket and Lock Into Place (Same as previous steps)



Place onto floor mat.



13. Install Upper Support Tube.

13A Take the support tube and align the pre drilled hole to the pre drilled hole in the metal bracket.

13B Secure using the remaining bracket screws.

13C Repeat for the other side of the assembly.



14. Installing Second Fan Assembly.
14A. Repeat same process as in step 9.



15. Install Horizontal Bracket and Lock Into Place (Same as previous steps)



16. Install Small Panel Into Support Tube Assembly.



17. Install Horizontal Bracket and Lock Into Place (Same as previous steps)



18. Installing Third Fan Assembly.
18A. Repeat same steps as 14.



19. Install Horizontal Bracket and Lock Into Place (Same as previous steps)



20. Install Large Center Panel Into Support Tube.

20A. Take the larger rectangle panel and slid into the center notches of the support tube until the panel slips into the horizontal support bracket.



21. Install Horizontal Bracket and Lock Into Place (Same as previous steps)

At this point your booth should mirror the one shown.



22. Connecting Fans and Test.

22A. Connect each fan to the supplied power strip.

22B. Connect the power strip to the supplied remote power switch.

22C. Plug the power switch into the wall outlet.

22D. Ensure that all 3 of the fan assemblies are switched to position 2 (ON)

22 E. Disconnect the power and continue assembly.

NOTE: ALL THREE FANS SHOULD BE RUNNING. IF THERE IS AN ISSUE PLEASE CONTACT THE TANNING STORE FOR ASSISTANCE.



23. Installing Side Panels.

23A. Remove protective film from the panel. One side should be matte black and the other grey.

23B. With the black side facing out slide the panel into the groove on the straight bottom bracket and the lower support tube.



24. Install Edge Bracket.

24A. Install the edge bracket with the dow pin facing up..

24B. Slide the bottom of the edge bracket onto the locking mechanism of the straight bottom bracket.

24C. Align the bracket to where the panel rests inside of the groove.


24. D Lock the bottom of the edge bracket into place.



25. Install Straight Center Bracket (Should have grooves on the top and bottom of the bracket)

25A. Slide the locking mechanism of the straight center bracket into the support tube notch. The bracket should slip onto the top of panel.

25B. DO NOT LOCK THE STRAIGHT CENTER BRACKET INTO PLACE YET.

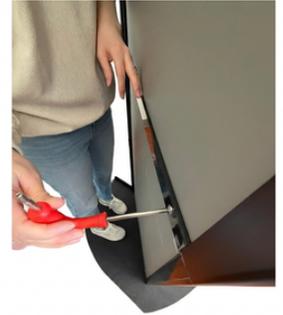

27. Installing The Upper Edge Bracket.

27A. Slide the female upper edge bracket (no dow pin) on top of the lower edge bracket and ensure that the panel rests within the groove.

27.B Now you can lock the straight center bracket into place



28. Install Top Horizontal Bracket and Lock Into Place.



QC CHECK:

Please reference picture that should mirror your assembly progress.
Repeat all of the steps beginning at 24 for the other side of the booth.



Completed Booth.