



491 W. Garfield Ave., Coldwater, MI 49036

Phone: 517-279-2135

Web/live chat: www.bds-suspension.com

E-mail: tech-bds@ridefox.com

Part#: 124027

Transfer Case Drop

1999-2004 Jeep Grand Cherokee WJ

READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS PRIOR TO INSTALLATION OF SYSTEM AND OPERATION OF VEHICLE.

SAFETY WARNING BDS Suspension Co. recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known.

INSTALLATION INSTRUCTIONS

1. Support the transfer case with a hydraulic jack.
2. Loosen but do not remove all eight transmission crossmember bolts (Fig 1).
3. Remove the four passenger's side crossmember bolts. Lower the crossmember just enough to be able to place the provided drop spacers (YJTC5) at the four mounting holes (Fig 2). Loosely attach the crossmember and spacers with two 10mm x 140mm and two 10mm x 100mm bolts and 3/8" USS washers (BP #726). The longer 140mm bolts go to the outside of the vehicle.
4. Repeat spacer installation on the driver's side.
5. With the spacers installed, remove the bolts one at a time and apply locite to the threads. Install the bolts and torque to 30 ft-lbs.

PARTS LIST

Part #	Qty	Description
YJTC5	8	Transfer Case Drop Spacer
726	1	Bolt Pack
Bolt Pack 726		
Qty	Description	
	4	10mm-1.50 x 140mm bolt class 10.9 clear zinc
	4	10mm-1.50 x 100mm bolt class 10.9 clear zinc
	8	3/8" USS flat washer clear zinc

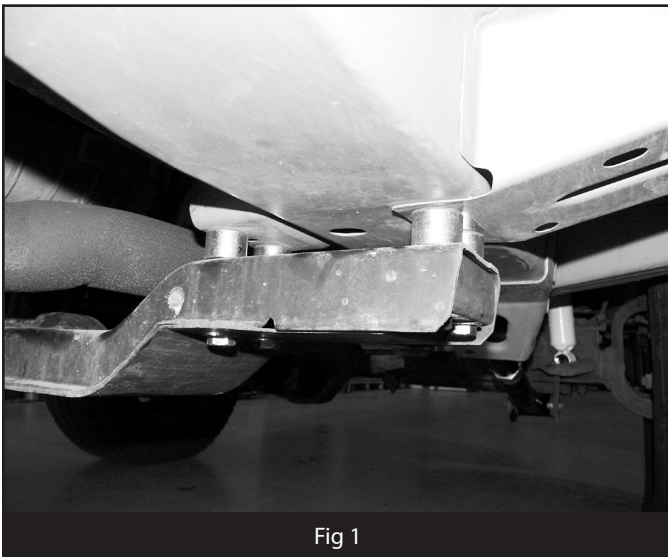


Fig 1



Fig 2