


SPEYEGUARD® FIXED PEEPHOLE COVER

INSTALLATION INSTRUCTIONS

TOOLS NEEDED: Phillips® Screwdriver, Nail Punch, Level


1 STEP ONE

Position base over existing peephole with mounting holes aligned horizontally

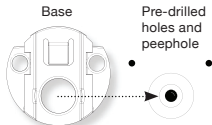


2 STEP TWO

Mount base onto door with screws

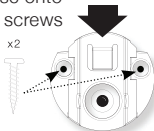


3 STEP THREE

Slide top down over base to allow snap to engage



4 STEP FOUR

Peephole cover is in closed position



For questions or comments, please contact:
sales@privacylogic.com | (877) 773-9348

PRIVACYLOGIC™

Version: 01012018