

DISAPPEARING MINI-BRACKET - ABS

INSTALLATION INSTRUCTIONS

FOR ENGINEERING

Fixture Installation Instructions:

To be ADA compliant, mount so the bottle pump is 48" from finished floor.

INSTALLATION KIT INCLUDES:

Reusable installation template, pre-applied 3M double-sided adhesive tape & key.

SUPPLIES NEEDED:

Universal cleaner/detergent, isopropyl alcohol, silicone sealant, clean/dry cloths, level, pencil, tape & gloves.

Mount using pre-installed 3M double-sided ADHESIVE TAPE.

*If mounting to a surface that has a gel coat finish, the mounting area should be treated with 3M VHB Tape Universal Primer UV, as per the instructions provided with primer.

*Refer to the Reusable Installation Template (included) for proper bracket alignment and spacing.

 These steps are CRITICAL for proper adhesion.



STEP 1: Locate a flat, leveled area for mounting bracket, away from a direct continuous stream of shower water (not wall-papered).



STEP 6: Align and insert bracket into die-cut opening of the Installation Template.



STEP 2: Clean surface with detergent to remove all soap film and dirt.



STEP 7: PRESS BRACKET FIRMLY (minimum of 15 pounds-force) **FOR 30 SECONDS** to secure to wall.



STEP 3: Wipe surface with a 50/50 mixture of isopropyl alcohol/water and pat dry.



STEP 8: After securing the bracket(s), remove the template and set aside for reuse.



STEP 4: Use Installation Template to identify bracket placement. Use a level to align, then place tape on all 4 corners to hold the Template to the wall in the desired position.



STEP 9: Using a silicone tube with a small nozzle, apply a thin bead of silicone around the perimeter of bracket to protect adhesive tape from water.



STEP 5: Locate the double-sided adhesive tape, pre-installed on the back of the bracket. Carefully remove the film cover. Be sure not to contaminate the adhesive surface.



STEP 10: Allow 24 hours for adhesive tape and silicone to cure before bottle installation.



DISAPPEARING MINI-BRACKET - ABS

INSTALLATION INSTRUCTIONS

FOR ENGINEERING

Fixture Installation Instructions: (CONTINUED)

Illustration 1: Reusable Installation Template (included)



Please note bracket center lines and bracket top edge are included to help align brackets to the wall.

← Leave 4" from any bathroom wall or any bathroom fixture. →

“IMPORTANT INFORMATION BEFORE INSTALLING DISPENSER BRACKET SYSTEM”

Please review all operation and installation instructions with your hotel engineering department and tile and shower wall supplier/manufacturer before installing dispenser bracket system.

In no event shall Guest Supply be liable for any damages of any sort arising out of the installation of the dispenser bracket system, whether direct, indirect, special, incidental, consequential or otherwise.

REMOVING a dispenser installed with 3M ADHESIVE TAPE.

Note: Do not use excessive force to remove the bracket as this may damage the wall.

First remove the silicone bead using a plastic caulk scraper.

A length of high-strength fishing line (or similar material) may be used to cut through the adhesive bond-line. Use liquid soap as a lubricant. If necessary, heat the dispenser with a hair dryer to soften the adhesive.

Alternatively, 2 soft plastic putty knives can be used to gently pry the edge away from the wall, slowly working your way around the perimeter of the dispenser. If necessary, heat the dispenser with a hair dryer to soften the adhesive.

Use a solvent to remove any remaining adhesive residue from the wall. Be sure the solvent is approved by the manufacturer of the wall substrate and will not cause damage to the wall.

DISAPPEARING MINI-BRACKET - ABS

OPERATION INSTRUCTIONS

FOR HOUSEKEEPING

Bottle Installation & Replacement:

*Wait at least 24 hours after bracket installation before installing bottles.

IMPORTANT

DO NOT USE abrasive cleaning chemicals, abrasive acidic cleaning chemicals or abrasive cleaning sponge or cloth.


Bracket Operation

STEP 1



Unlock the bracket by inserting the key and rotating to the COUNTERCLOCKWISE position.

NOTE!

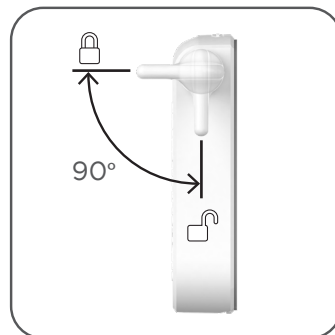

Note: The key rotates 90° between the locked and unlocked positions. Do not force the key to turn beyond this range.

STEP 2



Open the bottle pump by turning the spout COUNTERCLOCKWISE until it pops up.

STEP 3



Align the rib on the back of the bottle with the open channel of the bracket.

STEP 4



Slide the bottle downward into the bracket channel.

STEP 5



Lock the bracket by inserting the key and turning CLOCKWISE 90°.

STEP 6



The bottle is now securely locked inside the bracket.

DISAPPEARING MINI-BRACKET - ABS

CARE INSTRUCTIONS

These guest room accessories are handcrafted and require special care for long term enjoyment.

CAUTION: DO NOT USE

Abrasive cleaning chemicals

Acidic cleaning chemicals

Abrasive cleaning sponge / cloth

RECOMMENDED CLEANING INSTRUCTIONS

Use clean damp cloth with mild soap to gently wipe down the bracket, bottles & pump spouts.

Wipe with clean damp cloth to remove soap.

With a dry clean cloth, wipe off all cleaned areas to remove water spots.