

DISAPPEARING MINI-BRACKET INSTALLATION INSTRUCTIONS

FOR ENGINEERING

Fixture Installation Instructions:

To be ADA compliant, mount so the bottle pump is 48" from finished floor.

INSTALLATION KIT INCLUDES:

Reusable installation template, pre-applied 3M double-sided adhesive tape & key.

SUPPLIES NEEDED:

Universal cleaner/detergent, isopropyl alcohol, silicone sealant, clean/dry cloths, level, pencil, tape & gloves.

Mount using pre-installed 3M double-sided ADHESIVE TAPE.

*If mounting to a surface that has a gel coat finish, treat the mounting area with 3M Tape Primer 94, as per instructions provided with primer.

*Refer to the Reusable Installation Template (included) for proper bracket alignment and spacing.

! These steps are CRITICAL for proper adhesion.



STEP 1: Locate a flat, leveled area for mounting bracket, away from a direct continuous stream of shower water (not wall-papered).



STEP 2: Clean surface with detergent to remove all soap film and dirt.



STEP 3: Using a new clean cloth, wipe surface with a 1:1 mixture of USP isopropyl alcohol and water (mixed in a spray bottle). Pat dry.



STEP 4: Use Installation Template to identify bracket placement. Use a level to align, then place tape on all 4 corners to hold the Template to the wall in the desired position.



STEP 5: Locate the double-sided adhesive tape, pre-installed on the back of the bracket. Carefully remove the film cover. Be sure not to contaminate the adhesive surface.



STEP 6: Align and insert bracket into die-cut opening of the Installation Template.



STEP 7: PRESS BRACKET FIRMLY against the wall using the entire palm and leaning against the bracket (minimum of 15 pounds-force). The stance will look like a "push-up" against the wall.



Hold pressure **FOR 30 SECONDS** to secure to wall.



An installation tool is available (available separately) to assist in applying the correct pressure against the wall.

See Figure 2 (page 2) for instructions.



STEP 8: After securing the bracket(s), remove the template and set aside for reuse. Then open the bracket lid by inserting the key into the lock slot opening. Push the key inward until the lid pops open.




STEP 9: Using tube of clear or white silicone with a small nozzle, apply a thin bead of silicone around the perimeter of bracket to protect adhesive tape from water. Leave the locking lid open.

*There is a weep hole on bottom of bracket for water to drain. Do not allow silicone to block this hole.



STEP 10: Allow 24 hours for adhesive tape and silicone to cure before bottle installation.

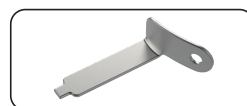

Save keys in a secure location for future use.

DISAPPEARING MINI-BRACKET INSTALLATION INSTRUCTIONS

FOR ENGINEERING


Fixture Installation Instructions: (CONTINUED)

“IMPORTANT INFORMATION BEFORE INSTALLING DISPENSER BRACKET SYSTEM”

Please review all operation and installation instructions with your hotel engineering department and tile and shower wall supplier/manufacturer before installing dispenser bracket system.

In no event shall Guest Supply be liable for any damages of any sort arising out of the installation of the dispenser bracket system, whether direct, indirect, special, incidental, consequential or otherwise.

Figure 1: Reusable Installation Template (included)

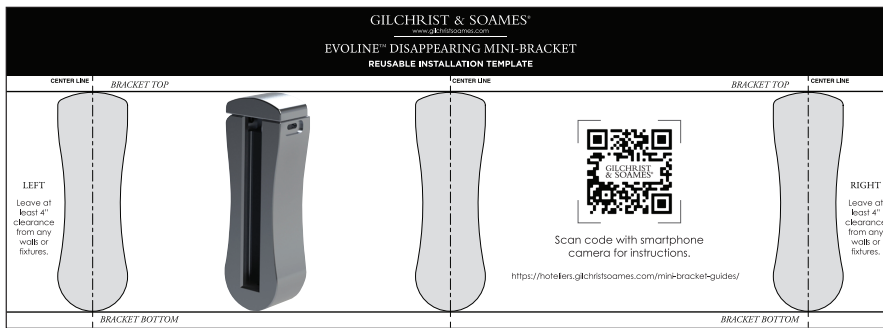

Please note bracket center lines and bracket top edge are included to help align brackets to the wall.

← Leave 4" from any bathroom wall or any bathroom fixture. →

Figure 2: Installation Tool

INSTALLATION TOOL (optional - available separately)
For 3M Adhesive-Mount Brackets:



For proper installation, it is critical to apply the correct amount of pressure against the bracket for 30 seconds for the adhesive to bond.

This installation tool is available (available separately) to assist in applying the correct pressure when installing the adhesive-mount Mini-Bracket.



STEP 1: First complete STEPS 1-6 on page 1.

With the bracket and template in place, position the installation tool over the bracket.



STEP 2: Press firmly against the installation tool until fully compressed and the edge of the cover is flat against the template.

Hold for 30 SECONDS!

Continue to STEP 8 on page 1.

REMOVING a dispenser installed with 3M ADHESIVE TAPE.

Note: Do not use excessive force to remove the bracket as this may damage the wall.

First remove the silicone bead using a plastic caulk scraper.

A length of high-strength fishing line (or similar material) may be used to cut through the adhesive bond-line. Use liquid soap as a lubricant. If necessary, heat the dispenser with a hair dryer to soften the adhesive.

Alternatively, 2 soft plastic putty knives can be used to gently pry the edge away from the wall, slowly working your way around the perimeter of the dispenser. If necessary, heat the dispenser with a hair dryer to soften the adhesive.

Use a solvent to remove any remaining adhesive residue from the wall. Be sure the solvent is approved by the manufacturer of the wall substrate and will not cause damage to the wall.

DISAPPEARING MINI-BRACKET OPERATION INSTRUCTIONS

FOR HOUSEKEEPING Bottle Installation & Replacement:

DO NOT USE abrasive cleaning chemicals, abrasive acidic cleaning chemicals or abrasive cleaning sponge or cloth.

IMPORTANT
WAIT AT LEAST 24 HOURS after bracket installation before installing bottles.


Bracket Operation



STEP 1
Align and insert the key into the lock slot opening, on right side of bracket.



STEP 5
Slide the bottle downward into the bracket channel.

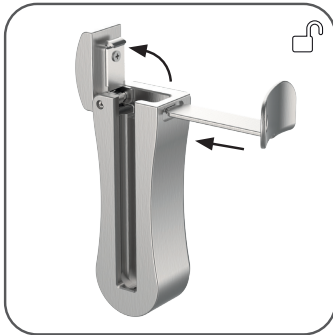

STEP 2
Push key inward to open top locking lid. The lid will spring open automatically.



STEP 6
Close the locking lid by pressing down until it clicks. The lid locks automatically.




STEP 3
Open the bottle pump by turning the spout COUNTERCLOCKWISE until it pops up.



STEP 7
The bottle is now securely locked inside the bracket.
*Remember to save the key in a secure location for future use.



STEP 4
Align the rib on the back of the bottle with the open channel of the bracket.

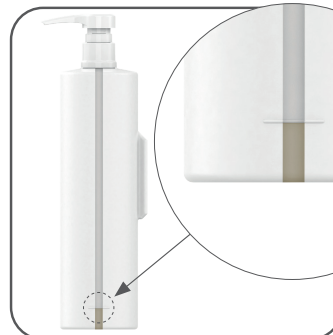

NOTE!
A low-fill line on the bottle indicates when the product is running low and the bottle should be replaced.

DISAPPEARING MINI-BRACKET CARE INSTRUCTIONS

These guest room accessories are handcrafted and require special care for long term enjoyment.

CAUTION: DO NOT USE

Abrasive cleaning chemicals

Acidic cleaning chemicals

Abrasive cleaning sponge / cloth

RECOMMENDED CLEANING INSTRUCTIONS



Use clean damp cloth with mild soap to gently wipe down the bracket, bottles & pump spouts.



Wipe with clean damp cloth to remove soap.



With a dry clean cloth, wipe off all cleaned areas to remove water spots.

Warranty available upon request.