



MOULDING

Products Catalog



KANSAS CITY, MISSOURI



ABOUT

Pacific Mutual Door

Pacific Mutual Door and Window is a premium supplier of distinctive mouldings, stair systems, hardware, windows and of course—doors.

We also custom make architectural millwork for new construction and historic restoration.

Pacific Mutual Door and Window was founded in 1912 in Tacoma, Washington, as a joint venture of eight millwork manufacturers to introduce Douglas Fir millwork products to the East Coast.

PMD in Kansas City is a vital resource of millwork products for contractors and remodelers throughout the metro area.

THE FINEST QUALITY

From the clean sophisticated lines of painted trim to the timeless quality of solid wood, mouldings are the final touches that enhance any room with a finish that expresses your personal style.

With hundreds of years of combined experience, we take enormous pride in creating the finest quality products.

CUSTOM MOULDINGS

If you wish to create a moulding that is not found in our collection, our workshop can produce custom tooling to precisely match sketched drawings, architectural blueprints, or existing wood samples.

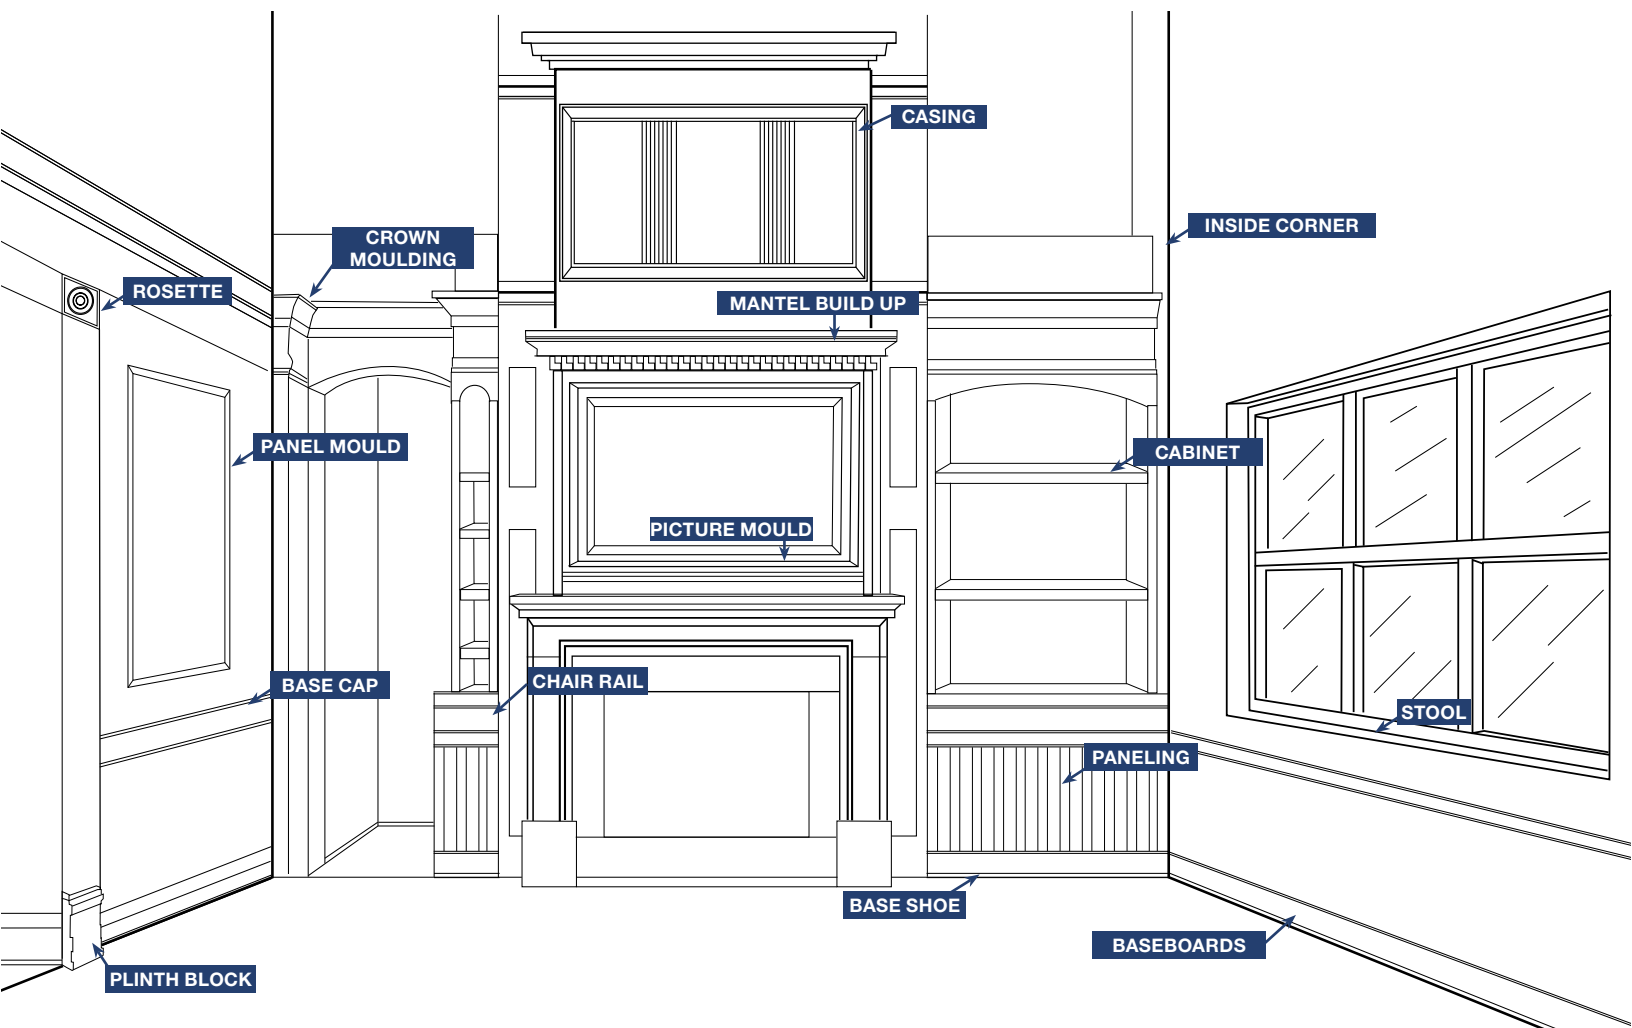


TABLE OF CONTENTS

TYPES OF MOULDINGS AND SPECIES	04
CASING	06
CROWN	08
BASE	10
COVE	12
BED MOULD	14
STOP	14
OUTSIDE CORNER	15
MANTLE MOULD	15
BRICK	15
T-ASTRAGAL	16
CAP	16
BACK BAND	16
STOOL	17
PICTURE	17
SCREEN & SHELF	17
BASE SHOE	18
CLOSET POLE	18
HALF ROUND	18
QUARTER ROUND	18
GLASS BEAD	19
HANDRAIL	19
COMPOSITE	20
CABINET & SCREEN	20
LATTICE	21
FLAT JAMBS	21



TYPES OF MOULDING




SPECIES & FINISHES



OK - RED OAK

Timeless, classic and longlasting - a staple of American interiors. Rich grain patterns. Easy to work with and takes stain and finish well.

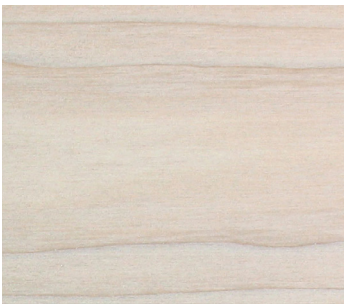


POP - POPLAR

Versatile wood with consistent texture. Its natural color varies and may change over time. Stains, paints and finishes extremely well.



SP - STAINABLE PINE

Pre-sanded surface is smooth and easy to stain, paint and/or clear finish

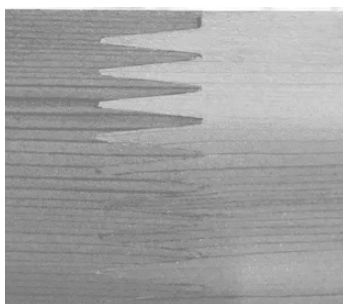

PR - PRIMED FJ

Finger-joints are used to join short pieces of wood together to form pieces of greater length

CASING

PRP444


Primed
11/16" X 3-1/4"



PANELING

SPP730C

Primed
11/16" x 1-5/8"

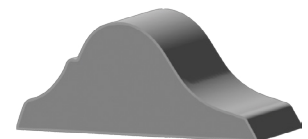

HANDRAIL

ST6042HM16


Hemlock
2-1/4"



COVE

PRP414


Primed
11/16" x 4-1/4"

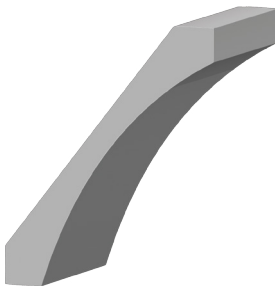

BASEBOARD

PRL620

Primed
7/16" x 4-1/4"



CASING

PR301





Primed
11/16" X 3-3/4"




CASING

CASING

Casings define the overall character of a room and are often the most visible part of the trim. They are used primarily to cover the gap between drywall and the door or window frame.

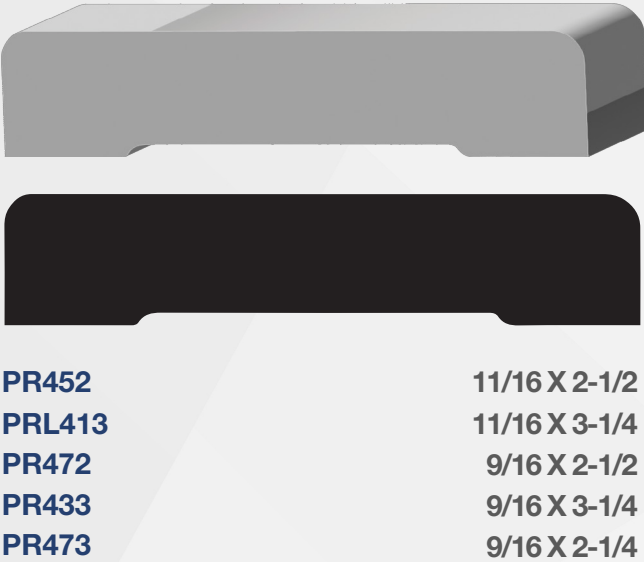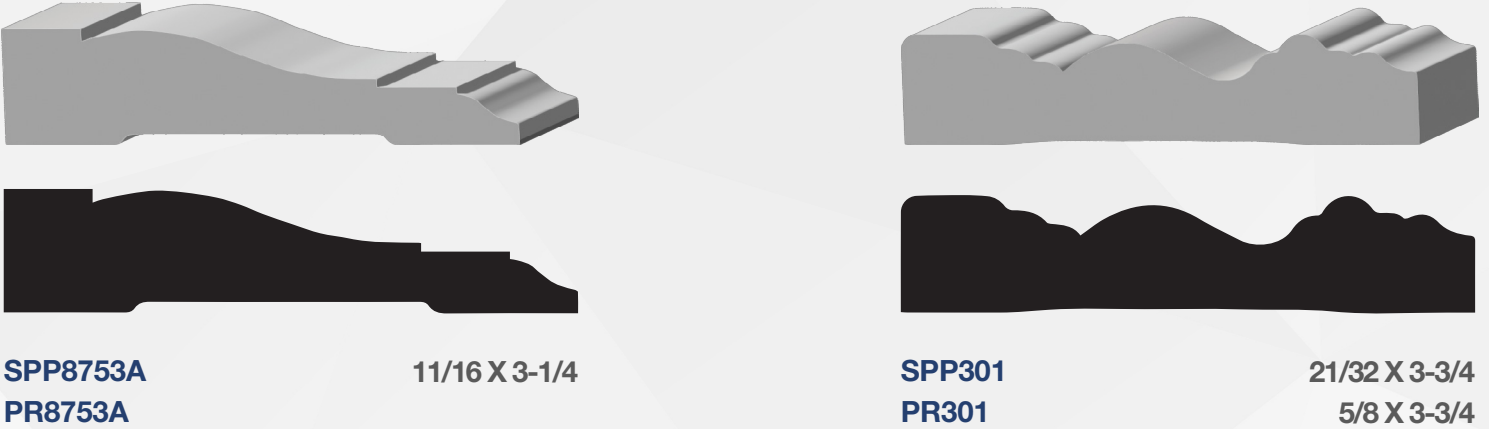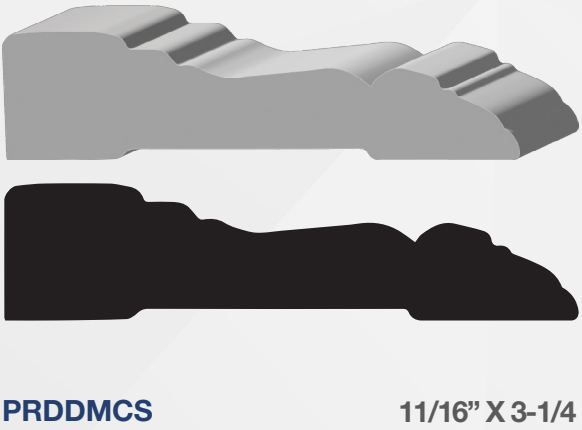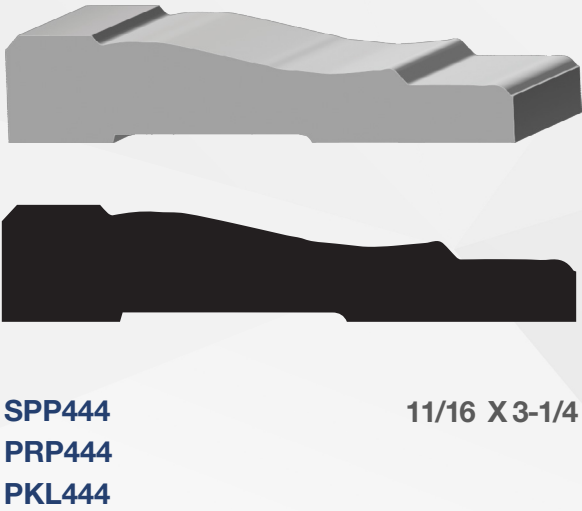

Crowns are placed along the wall at the ceiling. They come in a wide range of patterns and sizes. Crowns soften the transition from wall to ceiling while adding a distinctive look and charm.

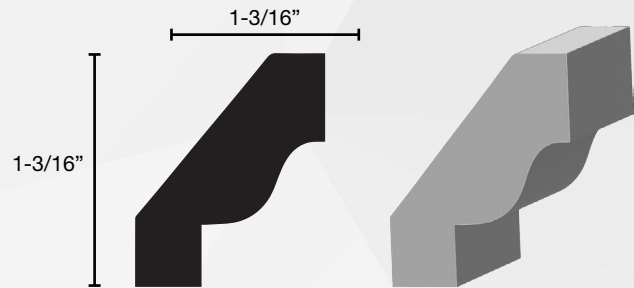


SPP8007
9/16 X 1-3/4



SPP8011
9/16 X 2-1/4



SPP8010
9/16 X 2-3/4

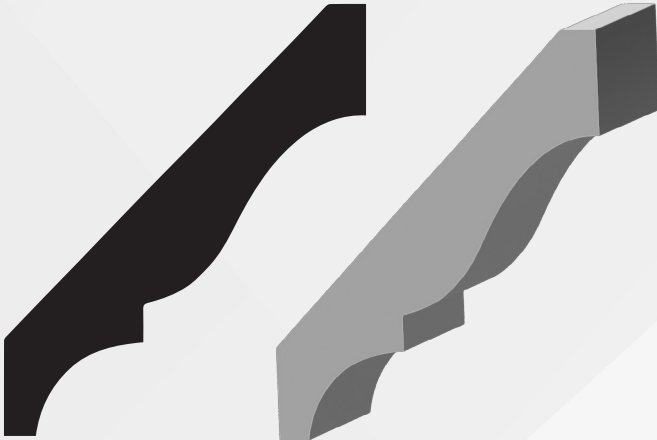


SPP8014
PR51
9/16 X 3-1/4



SPP8009
9/16 X 3-5/8



SPP8012
PR48
9/16 X 4-1/4

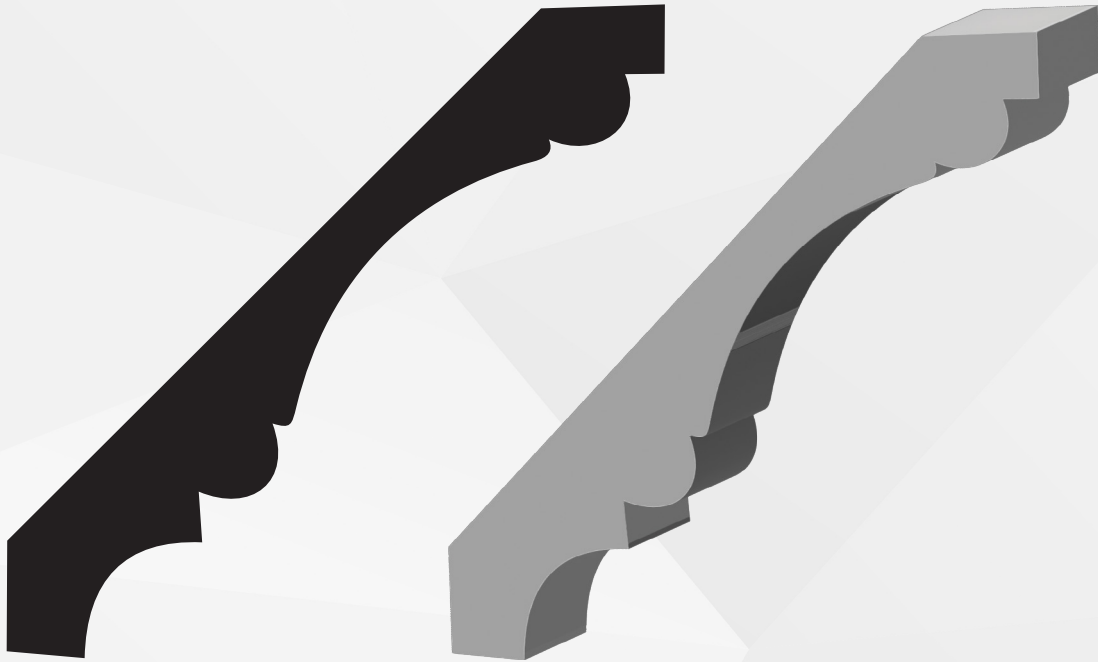


PRK414CR
3/4 X 4-1/4




PRK514CR
3/4 X 5-1/4


Baseboards are placed along the wall at the floor. They should be chosen to work in harmony with your casings to finish and tie the room together. Baseboards could be thinner than the casing.

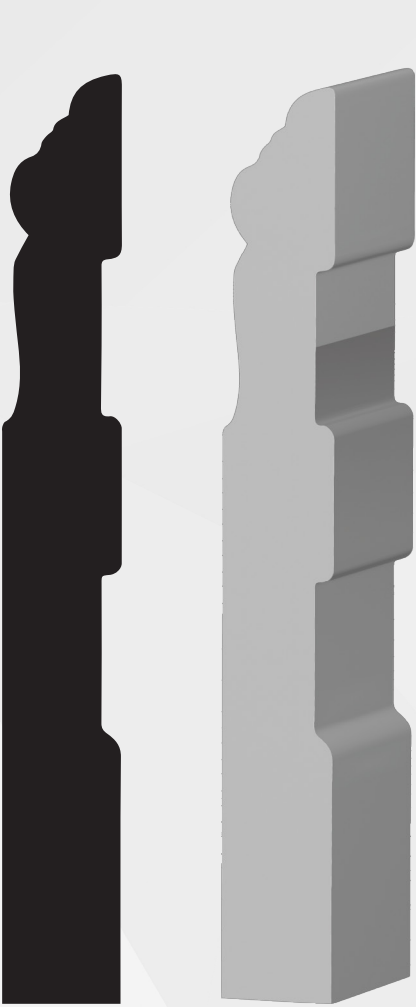


SPDDMB5 9/16 X 5-1/4

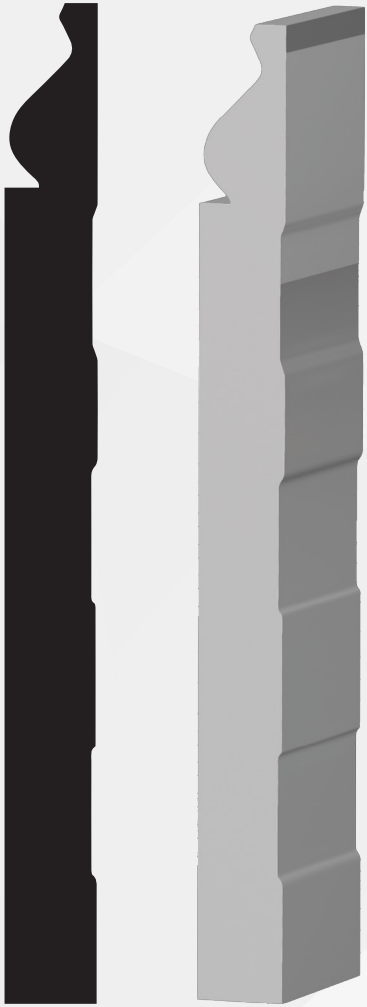


SPP8716 11/16 X 5-1/4
PRP8716 5/8 X 5-1/4
OKP280 5/8 X 5-1/4

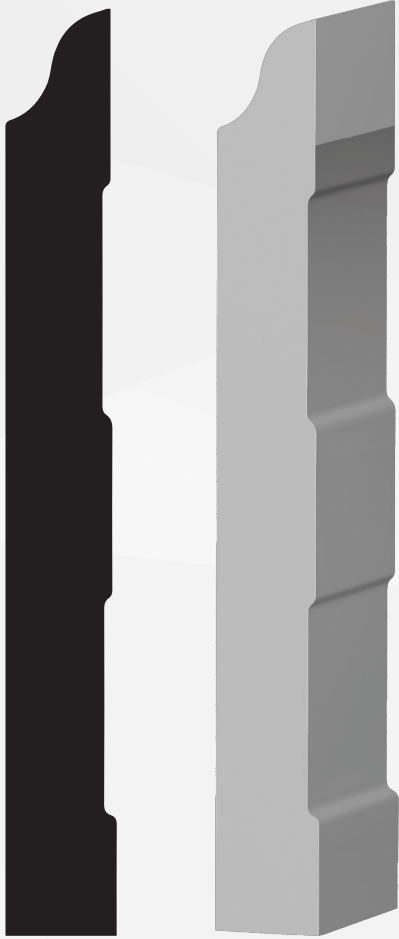

SPP8385 5/8 X 5-1/4
PR658 9/16 X 5-1/4

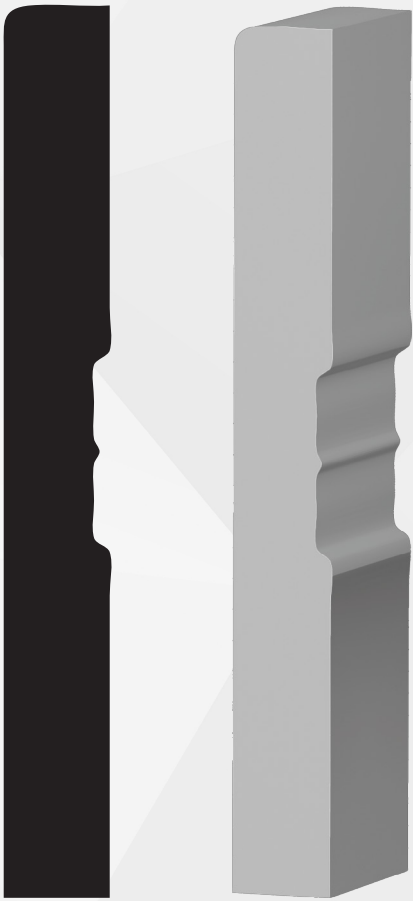


PRE1E51413 9/16 X 5-1/4
PRE1E414B 7/16 X 4-1/4

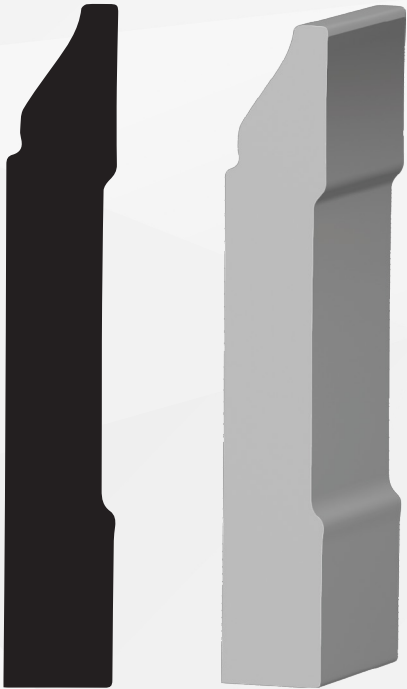


PRL620 7/16 X 4-1/4
PREIE314B 7/16 X 3-1/4



SPP8712R 1/2 X 3-1/4
OKP8712 7/16 X 3-1/4

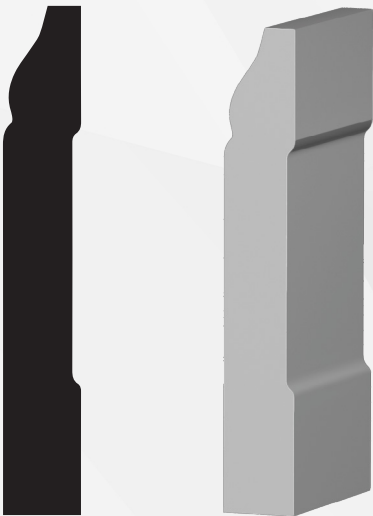

SPP8713 7/16 X 3
PRL634

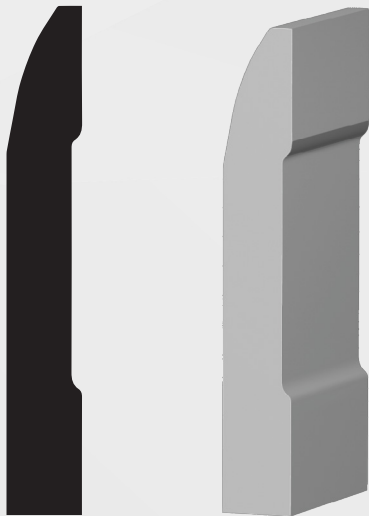

SPP11A 7/16 X 3




SPP15 1/2 X 3

COVE

Cove crown moulding can be used as inside corner guards. Cove base moulding can hide gaps between uneven floors and base moulding.



PRP414
11/16 X 4-1/4

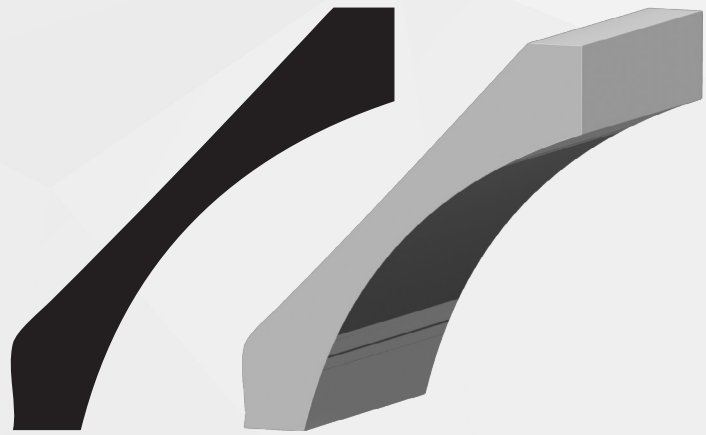

PRP314
9/16 X 3-1/4




SPP8025
9/16 X 2-1/4




SPP8024
9/16 X 1-3/4



SPP8043
1/2 X 1/2

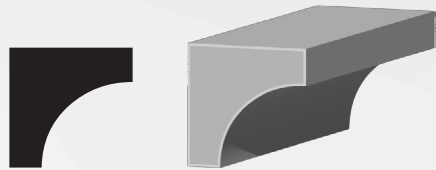


SPP8052
OKP8052
3/4 X 3/4

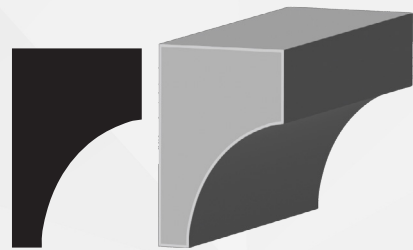

SPP8061
3/4 X 1-1/8

CHAIR RAIL


Chair rail is a type of moulding that is used in the middle of a wall. Originally, chair rail molding was installed in dining rooms at about chair height to protect the walls from being damaged by the backs of chairs.

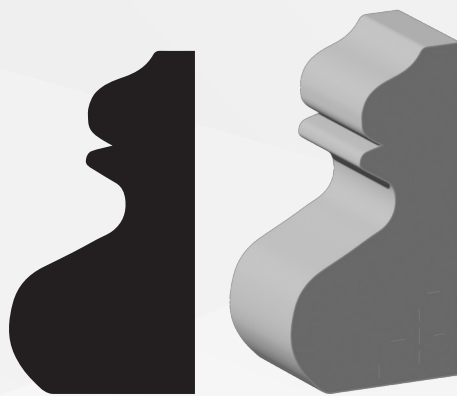


SPP2015
1-1/16 X 2




SPP390
11/16 X 2-5/8

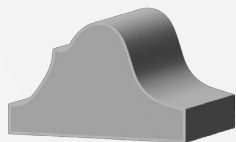


SPP730B
9/16 X 1-1/8
PR730B
5/8 X 1-1/8

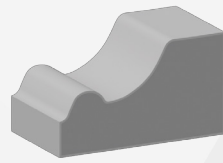


SPP13
11/16 X 1-5/16

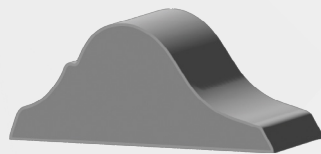


SPP730C
11/16 X 1-5/8

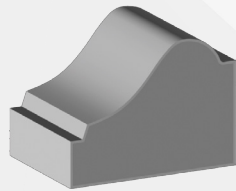


SPP1100
PR1100
OKP1100
3/4 X 1

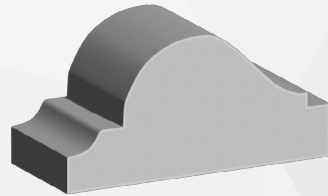

SPP729A
1-1/8 X 2

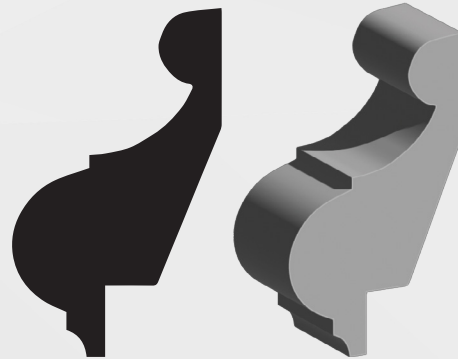

SPP721
3/4 X 2

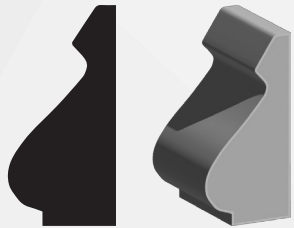

SPP163
PR163
OKP163
11/16 X 1-3/8

PANEL

BED MOULD

Bed moulding is a type of trim used to cover the joint between the wall and ceiling.



SPP8019
9/16 X 2-3/4



SPP8018
9/16 X 2-1/4




SPP8016
9/16 X 1-3/4


STOP

Stop moulding is used to stop doors from swinging through door frames and holds them in place.


For windows, stop moulding is used to stop sashes that swing in or out.

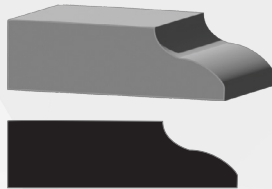


SPP8096
7/16 X 1-3/8

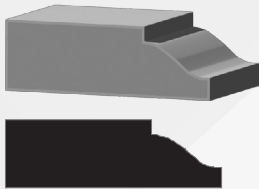


SPP8098
7/16 X 1-3/8

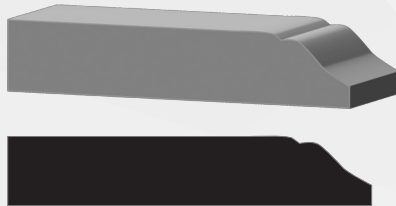


SPP933
7/16 X 2-1/4

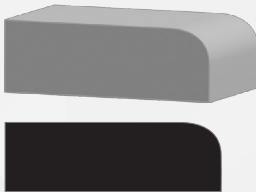

SPP8541
PRP8541
OKP8541
7/16 X 1-3/8

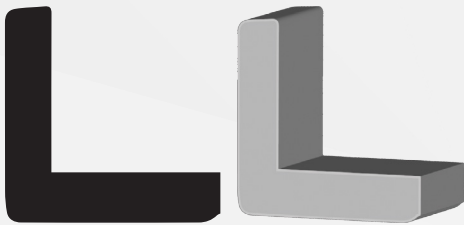

SPP8238
1-5/16

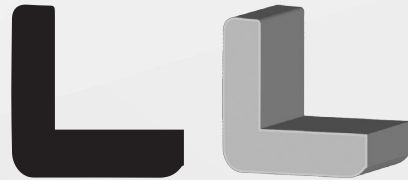


SPP8200
OKP2058
1-1/16



Outside corner moulding is cut at a 45-degree angle and juts out towards the room.

MANTLE MOULD


Mantle mould is commonly used as a decorative moulding on walls, tops of doors and windows, and fireplace mantles.

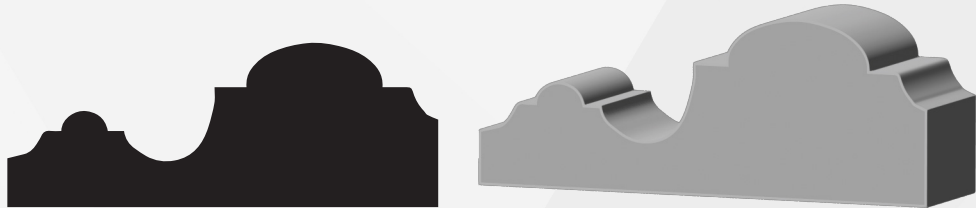


SPP225A
PR225A
1-1/8 X 2-3/4

BRICK

Brick moulding is a type of trim that's primarily used as the exterior casing around doors.

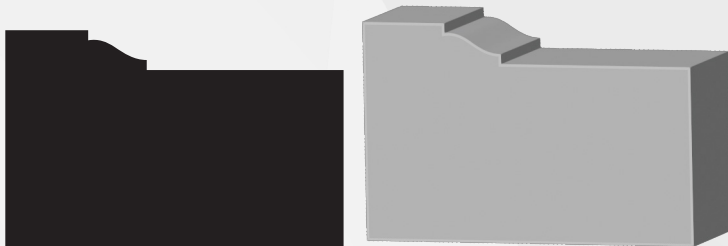

SPP908
1-1/4 X 2

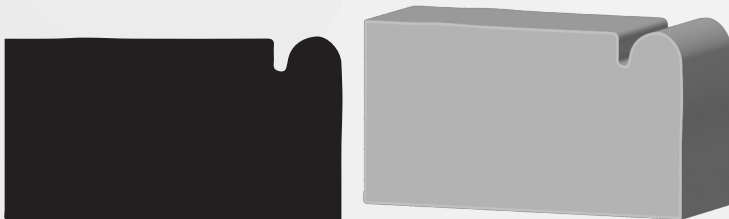

SPP8441
1-1/16 X 2

T-ASTRAGAL

T-Astragal moulding is installed with double or French doors. It keeps the second door from swinging through the opening.




CAP

A base cap is a decorative wood profile applied to the top of a baseboard to create an attractive, elegant look.


BACK BAND

Back band moulding is a type of trim that’s typically installed alongside baseboards or door and window casings.

Backband moulding adds thickness to existing moulding and trim and instantly boosts the architectural interest.

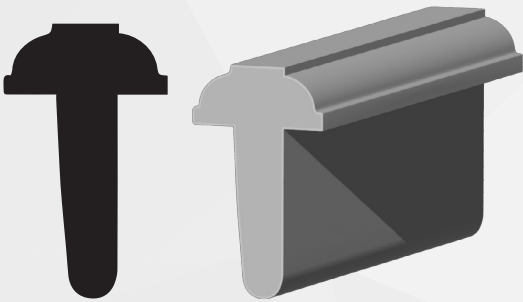


8-0
AVAILABLE FOR
1-3/8 & 1-3/4 DOORS

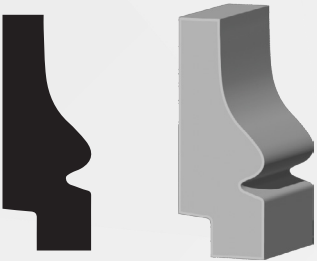

SPP24
9/16 X 1-3/8



SPP8378A
11/16 X 1-1/8

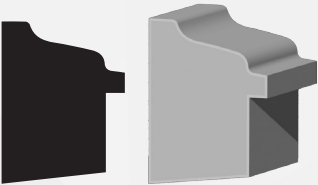

SPP8008
15/16 X 1-1/4


STOOL

The window stool is the part of the window that is visible and commonly called the window sill.



SPP8269A
1 X 3-1/4

PICTURE

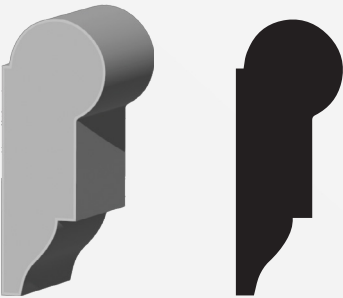

SPP8263
11/16 X 1-3/4



SPP8140
3/8 X 3/4



SPP8610
1/4 X 3/4

SCREEN & SHELF


A very versatile profile, screen mould fits a wide variety of needs and uses.

Screen mouldings are traditionally used to hold mesh screening into wood screens, they also work well as edge trim on various shelving or wood trim for wallpaper.

BASE SHOE



SPP8422
PR126
OKP8422
1/2 X 3/4

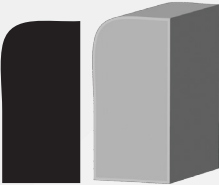

SPP8432E
PR8432E
1/2 X 3/4



SPP8570A
3/8 X 3/8




SPP8570
1/2 X 9/16
8-0 ONLY

CLOSET POLE



SPP8912
PRL233
1-1/4 X 1-1/4

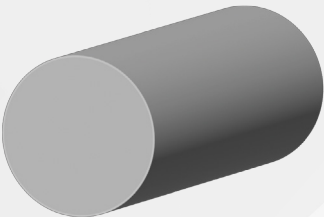

HALF ROUND



SPP8078
1/2 X 1



SPP8058
3/8



SPP8063
1/2



SPP8065
3/4

QUARTER ROUND




6010
OAK &
MAPLE



ST6042HM16
2-1/4
HEMLOCK ONLY



SPP6040
1-1/2 X 1-3/4

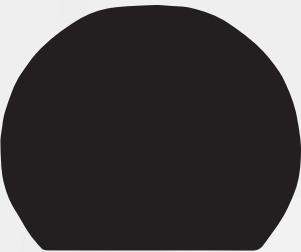


GLASS BEAD




HANDRAIL


COMPOSITE

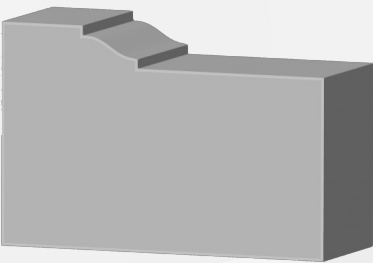

COHBM635
1-1/4 X 2

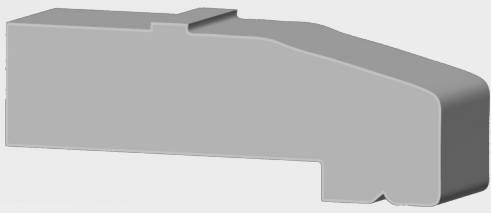

CPSUBC
1-1/4 X 2
14 FT. ONLY

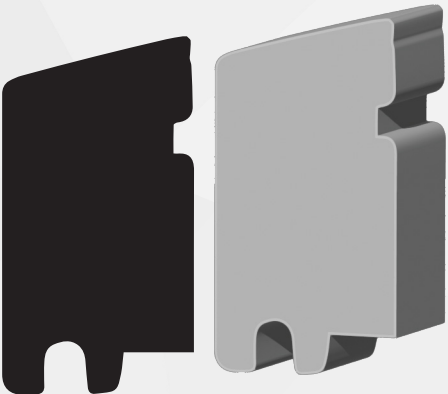


BN NOSING
1-1/4 X 2-1/4
14 FT. ONLY

CABINET & SCREEN



SPP8614
3/4 X 1-3/4

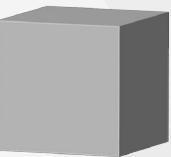


SPP239
3/4 X 3/4



SPP8613
1/2 X 2-3/4



LATTICE

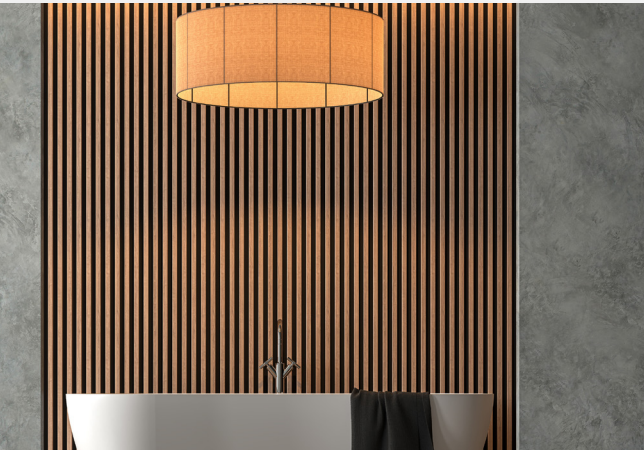

SPP8280
1/4 X 1-1/8



SPP8281
1/4 X 1-3/8



SPP8282
1/4 X 1-3/4



SPP110
1/4 X 2



SPP8282A
3/8 X 2-1/4



FLAT JAMBS



11/16 X 4-9/16
11/16 X 4-7/8
11/16 X 6-9/16
11/16 X 6-7/8

PRJF49
PRJF478
JFPR69
JFPR678



EXPLORE
MORE
PRODUCTS



HIGH-QUALITY
MILLWORK
LIVES HERE




CLICK
TO VIEW POSTER



CLICK
TO VIEW DOOR & WINDOW
CATALOG

Pacific Mutual Door can help you bring your ideas to life with custom millwork products. We offer a wide variety of options, including wood radius trim, curved stair rails, special starting steps, and round top doorways. Our team of experienced professionals can work with you to create the perfect solution for your project's needs.

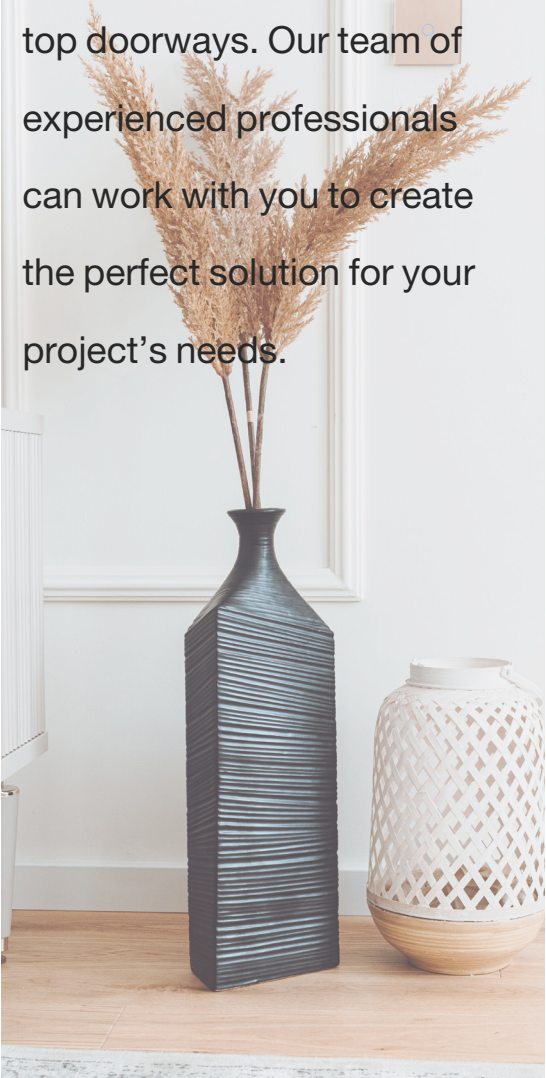



PACIFICMUTUALDOOR.COM



pmd **PACIFIC MUTUAL**
DOOR AND WINDOW

Sep. 2023

 816-531-0161

 1525 W 31st Street
Kansas City, MO 64108

 pmdorders@pamudo.com