



**FOR DRAMATIC ROOMS,
PICK OUR POCKETS**






OPEN UP ROOMS, CREATE MORE PRIVATE SPACE

Where a "traditional" door would use up too much space, pocket doors "fit right in" to solve room-planning problems. You get more usable space, more flexibility and better appearance.

Conventional Door

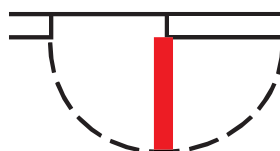

Johnson Pocket Door





Optional privacy locks fit pre-bored doors so door warranty stays intact. Optional edge pulls are easy to install.

Photo courtesy of CraftMaster®

SIMPLIFY ACCESS AND ENHANCE ENTRIES

Unlike an old-fashioned door-in-the-wall, Johnson's pocket door system *cannot stick or come off its track*. And, installation is surprisingly easy. Even a moderately skilled worker can install one in about 15 minutes, using just a few basic tools. When a square foot of housing can cost up to \$150,

a pocket door brings extra value by increasing the usable space around the doorway (8-10 extra square feet at a potential value of \$1,200 - \$1,500). That's space for a microwave stand, bookcase, decorative accessory and dozens of other uses.

Johnson's universal frame header



Johnson's Pocket Door Frame comes in a single, compact package with hardware and

easy-to-follow instructions - much easier to work with than a bulky, pre-assembled frame. Converging door kits also available.




Optional jamb kit brings a nicely finished look to entryways up to 3'0" wide x 6'8" high. Can be stained or painted.



Strong Stiffeners

Split jamb and stud uprights have full steel sides and backs to give maximum rigidity for wall material and to restrict accidental nail penetration. Slots allow easy nailing of trim stops.

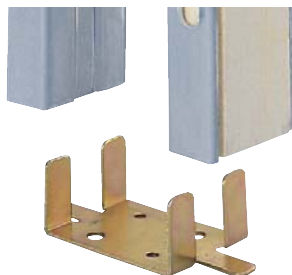


Self-Adjusting Floor Anchors

Long vertical fingers slide into split studs - allowing for floor-settling without disturbing horizontal alignment of header and track. Anchors can be nailed, screwed or cemented to floor.



Tricycle Hangers

Unique three wheel design ensures all wheels carry weight equally. Smooth rolling balanced wheels have minimum friction riding on convex track rails. "Flip-of-a-clip" separates wheels from doorplate for easy door removal.

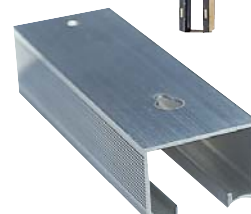

Removable Track

Box design prevents rollers from jumping track. Convex rails have one-point roller contact for the smoothest possible rolling and to trap friction-causing dust away from contact area. Track's keyhole slots allow easy removal without tearing out walls.

GUARANTEED QUALITY

How can Johnson give a Lifetime Guarantee to its pocket door systems? Unique design, quality components and ease-of-assembly all add up to smooth operation for years to come.

"One thing I like about Johnson Pocket Doors is I never have to go back and fix them."

Brian Brensier,
Art Stauffer Builders

Lifetime Guarantee

Johnson Hardware® will replace any item found defective in material or workmanship, regardless of its date of purchase. Send the defective part postage paid to:



L.E. Johnson Products
2100 Sterling Avenue, Elkhart, IN 46516

1500 SERIES POCKET DOOR FRAME

THE SECRET TO EASY INSTALLATION: THE JOHNSON HARDWARE® EXCLUSIVE DESIGN


Measure Door Width and Construct Rough Opening

Rough Opening Size Chart

For 1-1/8" to 1-3/4"** Doors	Rough Opening Width x Height
2'0" x 6'8"	49" x 84-1/2"
2'4" x 6'8"	57" x 84-1/2"
*2'6" x 6'8"	61" x 84-1/2"
2'8" x 6'8"	65" x 84-1/2"
*3'0" x 6'8"	73" x 84-1/2"

*All purpose-marked for cutting to other standard widths.


**1575 ppk3 1-3/4" adaptor required.

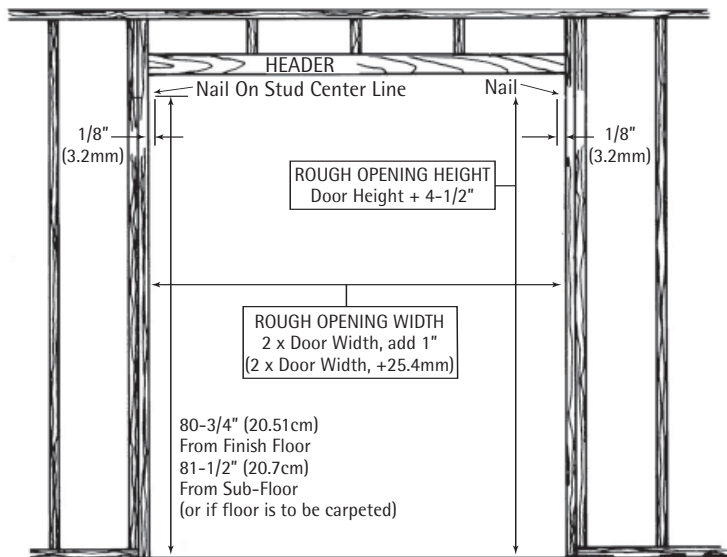

1


Header must be **SQUARE** and **PLUMB** with studs and **LEVEL**.

Mark each side of jamb and drive a flat head nail on centerline, leaving 1/8" (3.2mm) protruding. (Frame header end plates will rest on these nails.)

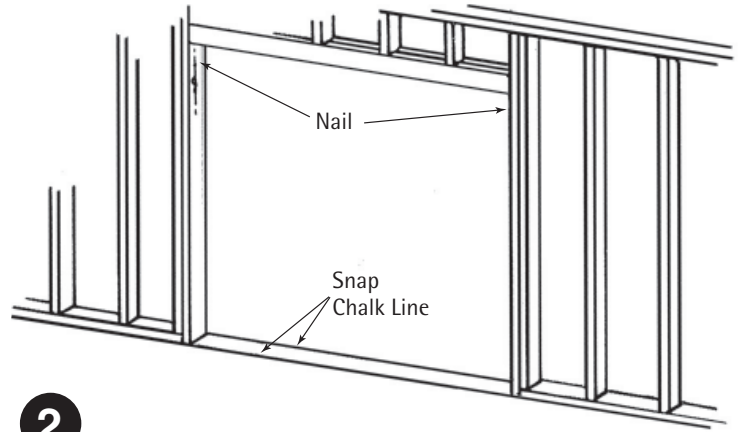

2

Snap two chalk lines on floor even with side jambs as shown.

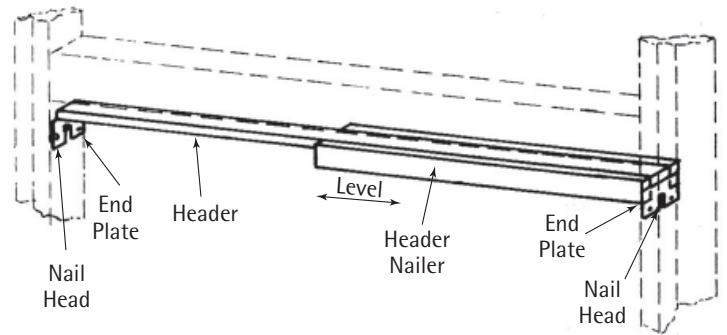


3

Slip slots in Frame Header End Plates over nails in side jambs.


1500 SERIES POCKET DOOR FRAME

THE SECRET TO EASY INSTALLATION: THE JOHNSON HARDWARE® EXCLUSIVE DESIGN

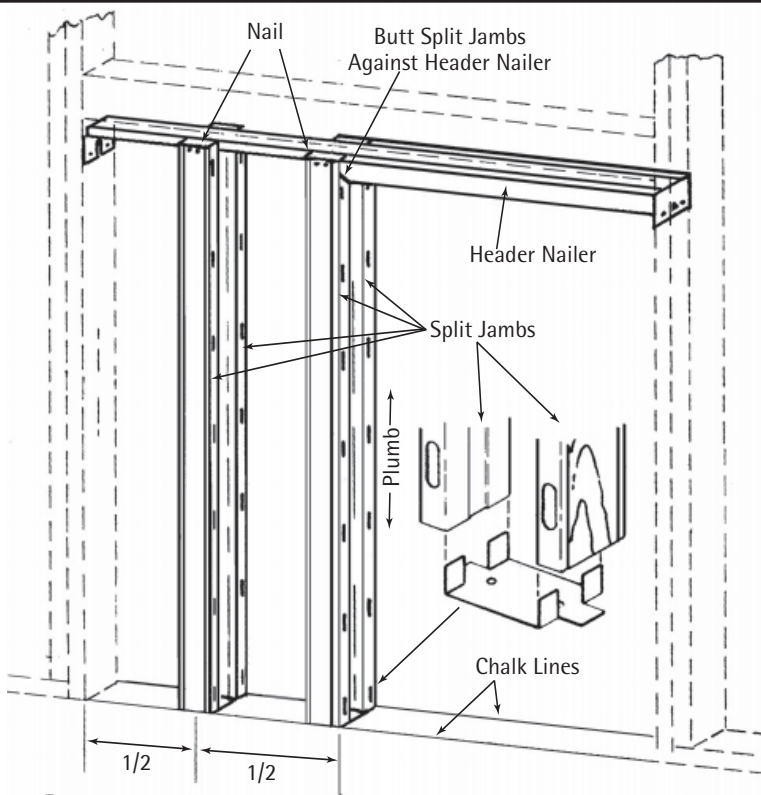


4

Slip fingers on Floor Plates into the reinforcing strips of Split Jambs as shown. Butt split jambs against header nailer strips and nail into place.

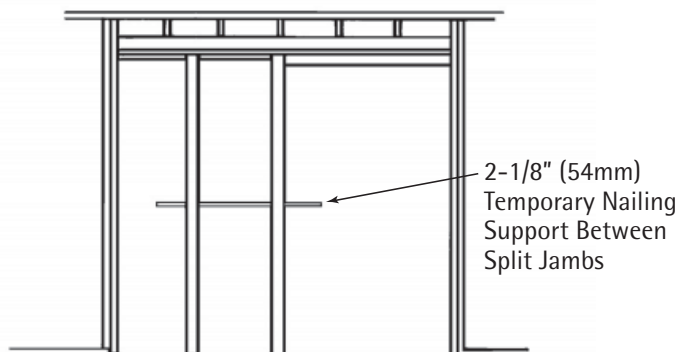


5

Apply desired wall materials over the pocket side and above the door opening. Wall materials are brought clear to the edges of the opening.

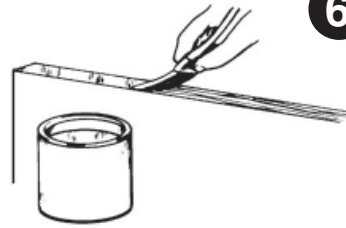



6

Seal all edges and face of door panel with choice of paint or sealing stain.

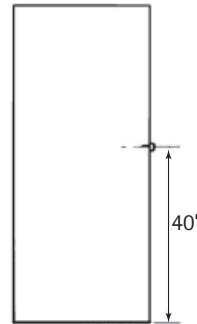


7

Fasten bumper on back edge of door, 40" from bottom edge.

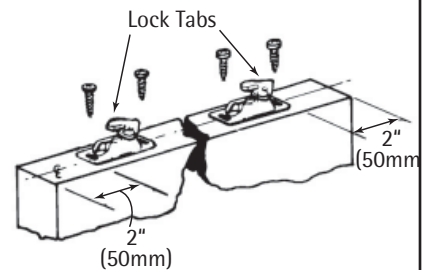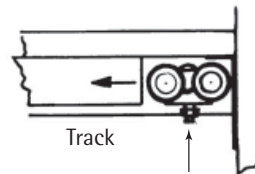

8

Insert hanger wheels into track through space between end plate and track. Fasten hanger plates in place.

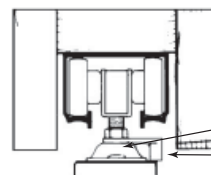


9

Hold door in opening and slip pivot pin into slot in plate. Lock in place with locking tab. Adjust hangers for height and plumb with jambs.


1500 SERIES POCKET DOOR FRAME

THE SECRET TO EASY INSTALLATION: THE JOHNSON HARDWARE® EXCLUSIVE DESIGN

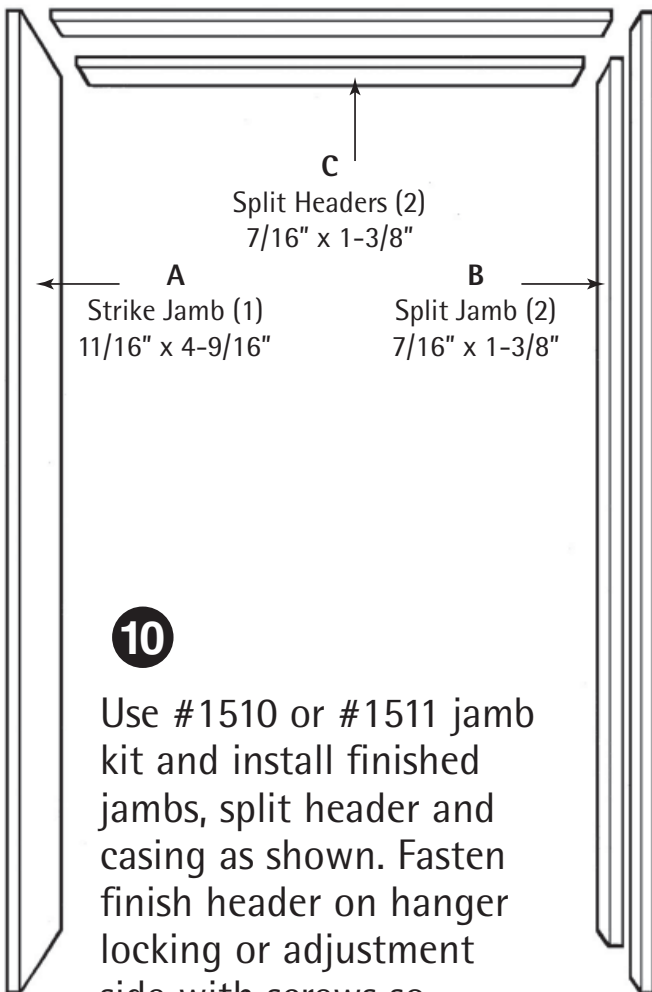

10

Use #1510 or #1511 jamb kit and install finished jambs, split header and casing as shown. Fasten finish header on hanger locking or adjustment side with screws so future door removal or hanger adjustments can be made easily.

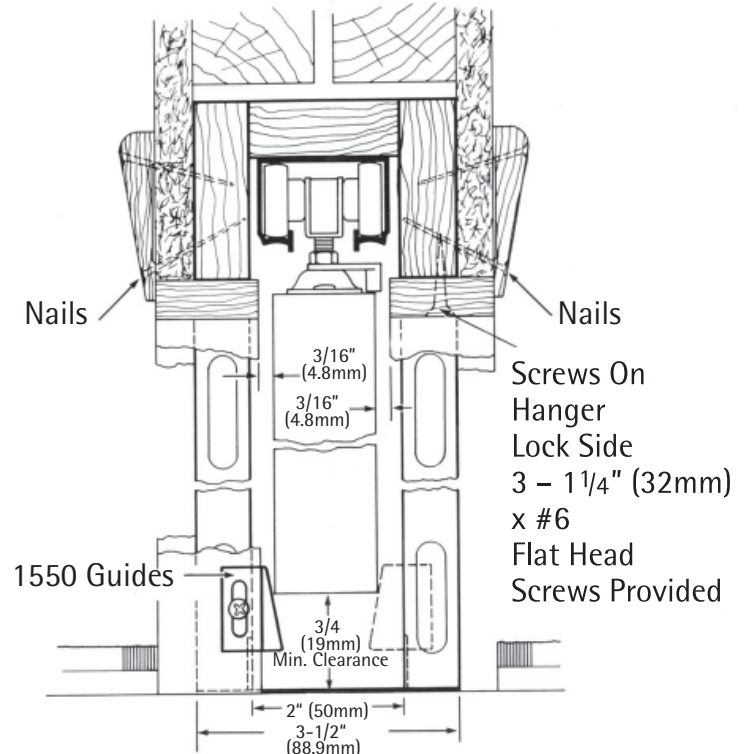

11

Fasten #1550 Guides on finished split jambs at door bottom so door is held in center of opening without binding.



12

Install #1521 Privacy Lock.


1500 SERIES POCKET DOOR FRAME

THE SECRET TO EASY INSTALLATION: THE JOHNSON HARDWARE® EXCLUSIVE DESIGN

Cutting Instructions— Johnson Hardware® Pocket Door Frame Header


2'6" (76.2cm) and 3'0" (91.4cm)
Universal Johnson Pocket Door Frames
are marked for cutting to shorter
lengths. See cutting instructions below.

1 Remove Adjustable End Bracket.

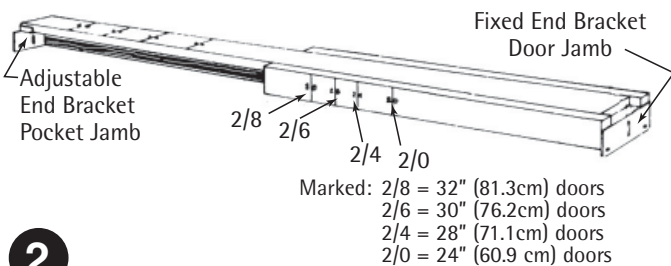


2

Cut through WOOD part of header only,
on desired door
size marking.

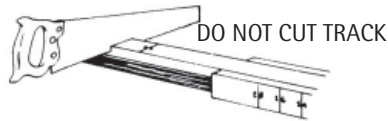

3

Turn Header over and cut Track 1 3/8"
(35mm) shorter than wood Header.

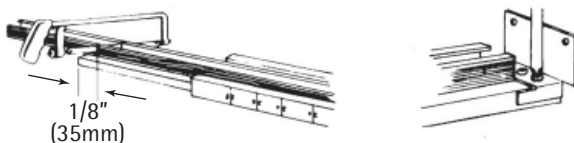

4

Replace Adjustable End Bracket on
new cut end of header.

5

Turn Header on side and cut 3/4"
(19mm) Head Trim Board ONLY at
proper mark. Remove cut off end
and discard.



6

Turn Header and cut off other side.

Pocket Door Accessories For The Perfect Finishing Touch



1521 SUNCREST
Pull, latch and lock all in one.
Keeps door closed when desired,
yet opens with a touch of a button.



150
EDGE PULL
Retractable Pull,
handy for pulling
door from pocket.



21
SUNCREST



40
RECTANGULAR




35
OVAL


A few of the extensive line of Johnson
pulls available from your dealer.



1575
1-3/4" ADAPTOR KIT
Greater clearance inside
Frames when using
1-3/4" (44.5mm) thick doors.

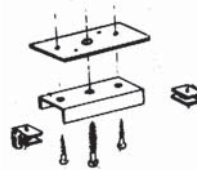

1555
CONVERGING
DOOR KIT
For connecting
2 Pocket Door
Frames together.

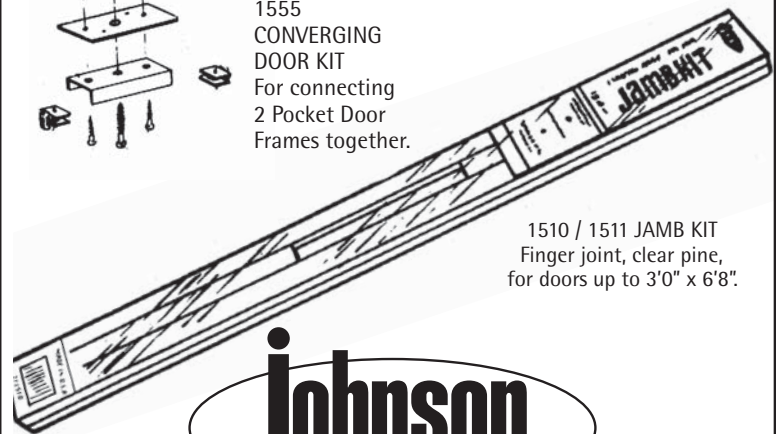

1510 / 1511 JAMB KIT
Finger joint, clear pine,
for doors up to 3'0" x 6'8".



Engineered Excellence

2100 Sterling Avenue • Elkhart, IN 46516

Phone: 1-574-293-5664

www.johnsonhardware.com



Engineered Excellence



WOOLF DISTRIBUTING

www.woolfdistributing.com

GREEN BAY, WI

551 Packerland Dr.

1-920-499-2117

Email:

woolfgb@woolfdistributing.com

Orders:

order-gb@woolfdistributing.com

PEORIA, IL

515 South Maxwell Rd.

1-309-697-1760

Email:

woolfpe@woolfdistributing.com

Orders:

order-pe@woolfdistributing.com

WOODSTOCK, IL

1625 West Lake Shore Dr.

woolf-ws@woolfdistributing.com

Building Materials: **1-815-477-9680**

order-ws@woolfdistributing.com

Millwork: **1-815-356-0438**

order-mw@woolfdistributing.com

Commercial: **1-815-527-9288**

commercialdoors@woolfdistributing.com