Acrylic Freestanding Screen Instructions


Make your space work.



Congratulations on your new HON Screens! Designed to help create physical space separation, we know great things will come from your new workspace.

Tools Needed:





(x2) Gloves

Included in this Box:



(x2) Large Acrylic Panels, (x2) Small Acrylic Panels



(x6) Connector Blocks, (x6) Gaskets, (x3) Top Caps

Now that you have your Tools and Materials - Let's Get Started!

We have to tell you that it's important for you to read all the way through the instructions and carefully review all illustrations prior to installing your new screens. By not reading these instructions, this may result in property damage or serious bodily harm. Once assembled, do not move the screens with office equipment on, or in place. This may lead to damage or injuries as well.

Pro-Tips from our Team of Experts:


• Two members recommended for install

Steps to Assemble:



Slide 1 slot of the connector block into the bottom slot of a large acrylic panel.













Tilt the large panels upward to lift one corner. Add connector block to the slot at the bottom of the large panel. Set the screen flat on the floor.








Place a small acrylic wing panel into the open slot on the connector block. Add a second connector block to connect the large panel to the wing panel. Repeat this step on the other side for the second wing panel.





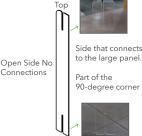

Bottom

Place 2 gaskets at each 90-degree top corner. Extend the gasket just beyond the slot for added stability. Add top cap to each corner and tap downward using a small rubber mallet.





Congratulations! You just set up your new screens. Now add your favorite accessories and snap a picture of your new workspace. Show us your newly created space and how you made your space work! @TheHONCompany #TheHONCompany #MakeYourSpaceWork