


# ASSEMBLY INSTRUCTION

# BAR MODULE

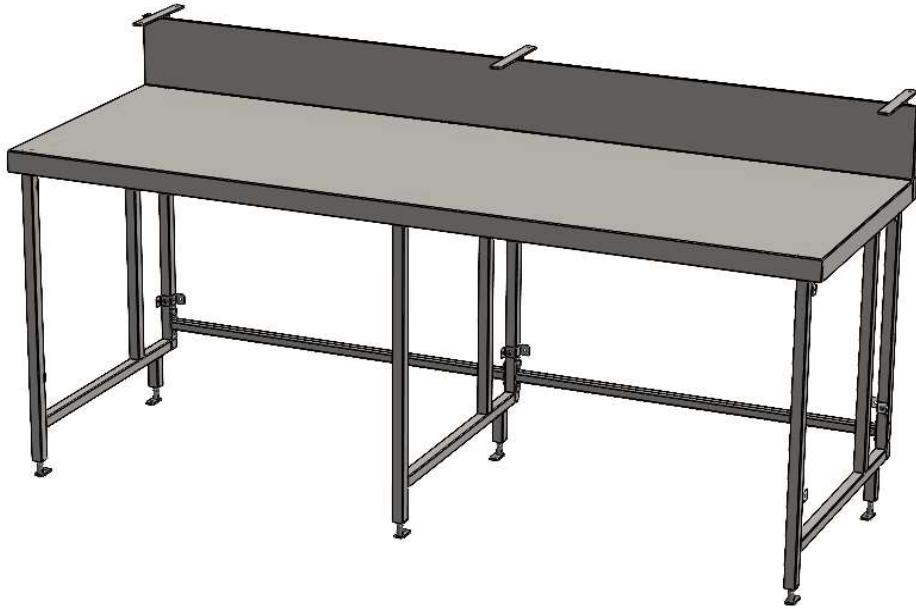


<b>600 SERIES :</b>	<b>700 SERIES :</b>
- 6-2100	- 7-2100
- 6-2400	- 7-2400

### TOOLS REQUIRED









13mm SPANNER

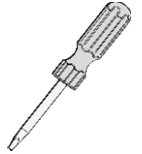

SCREWDRIVER




### CONTENT

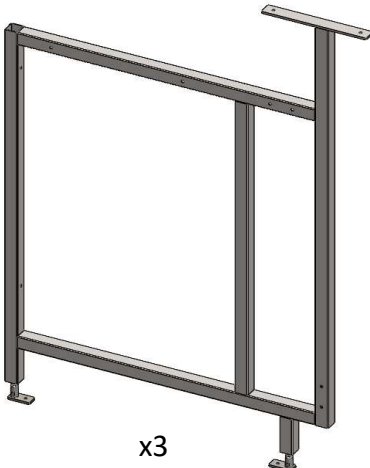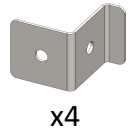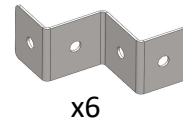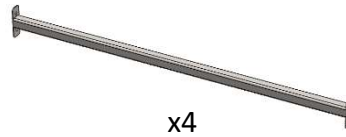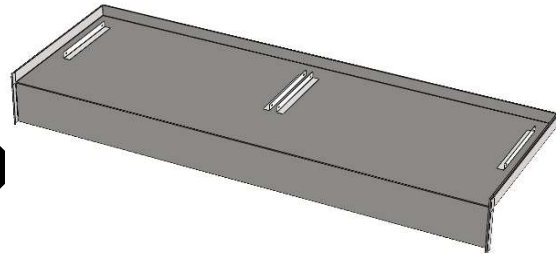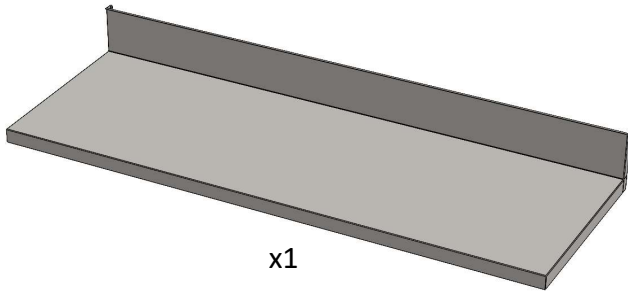


PTO

01

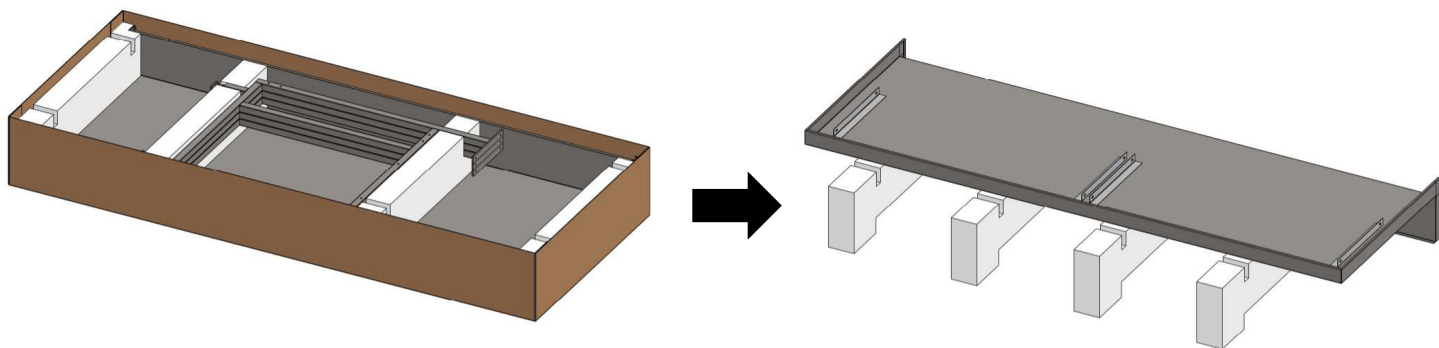

02

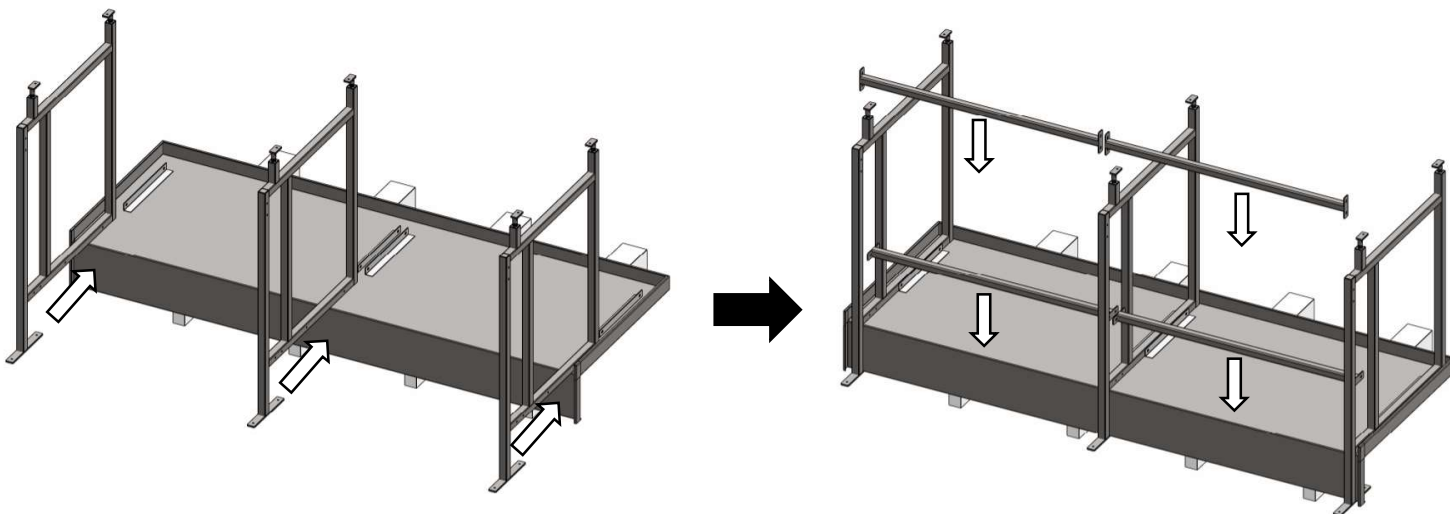

03

