


ASSEMBLY INSTRUCTION

MOBILE BAR MODULE

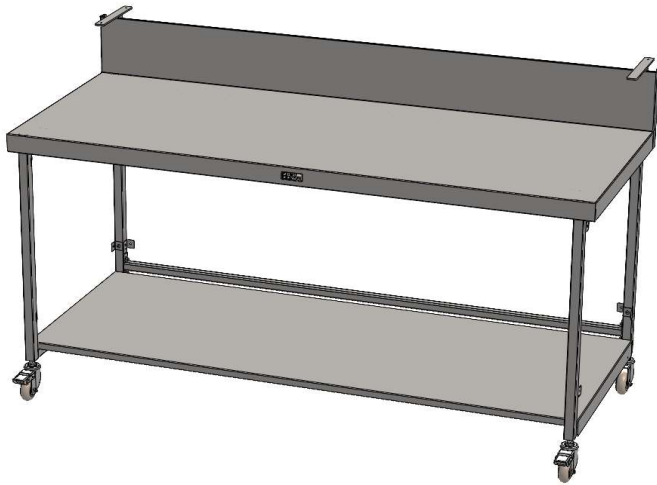

600 SERIES :

- 6-1200
- 6-1500
- 6-1800

700 SERIES :

- 7-1200
- 7-1500
- 7-1800

TOOLS REQUIRED





19mm SPANNER



13mm SPANNER




SCREWDRIVER

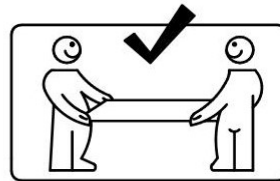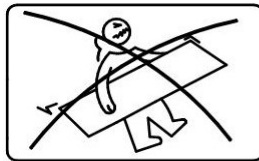


CONTENT




x1

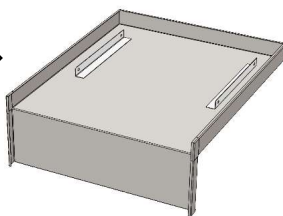


x1

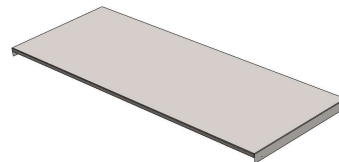


x2

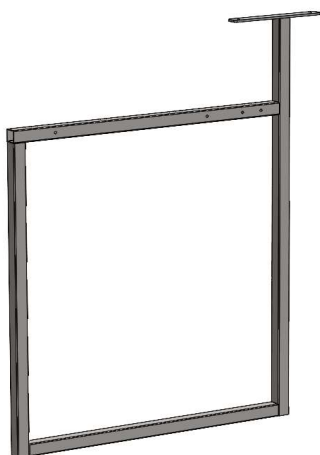


x2




x2



x2



x4



x4



M8x50mm(X4)



M8x15mm(X8)



M5x15mm(X8)



5/8" (X4)



M8(X16)



M5(X8)




M8(X16)




M8(X4)

PTO


01

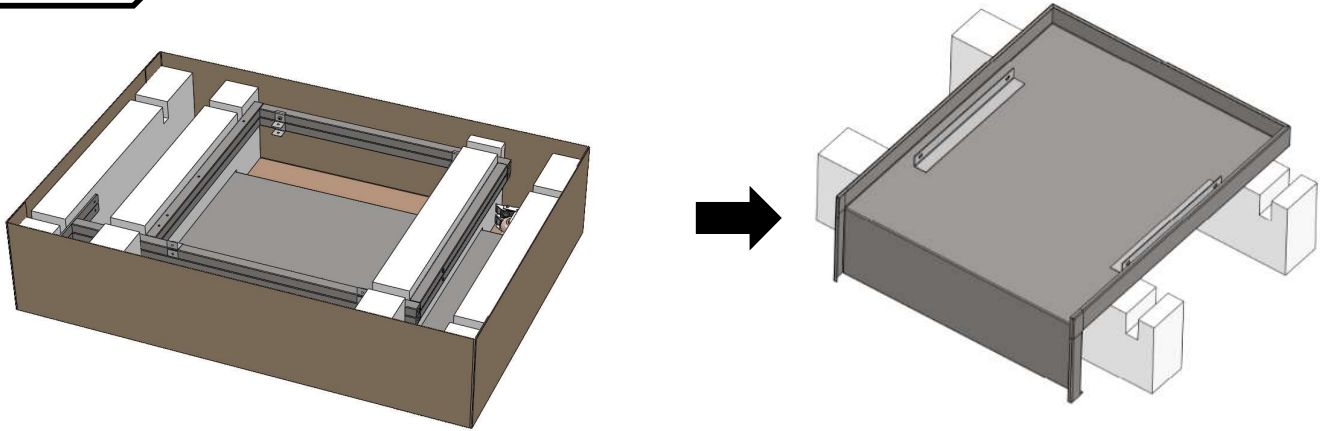

02

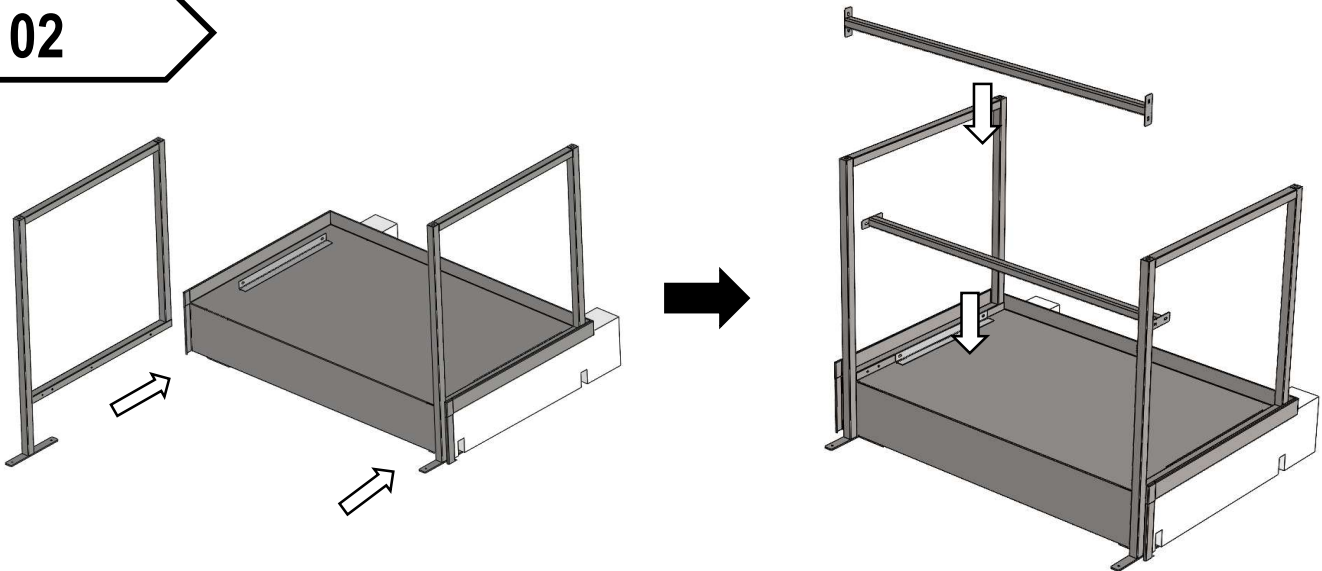

03

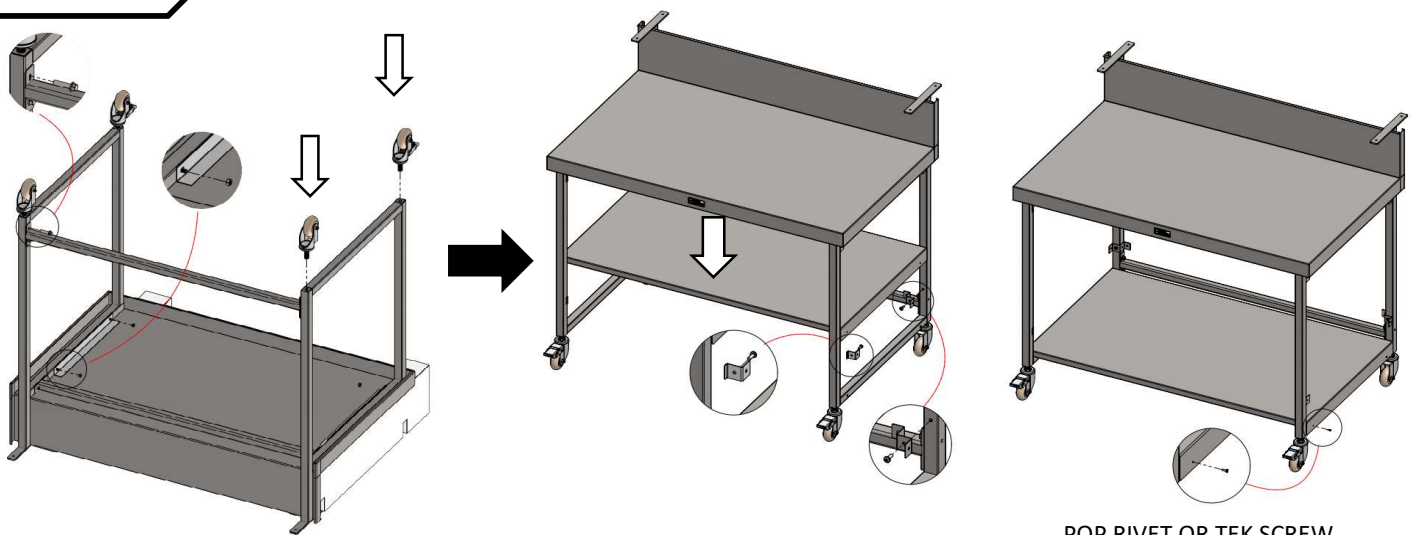

POP RIVET OR TEK SCREW