




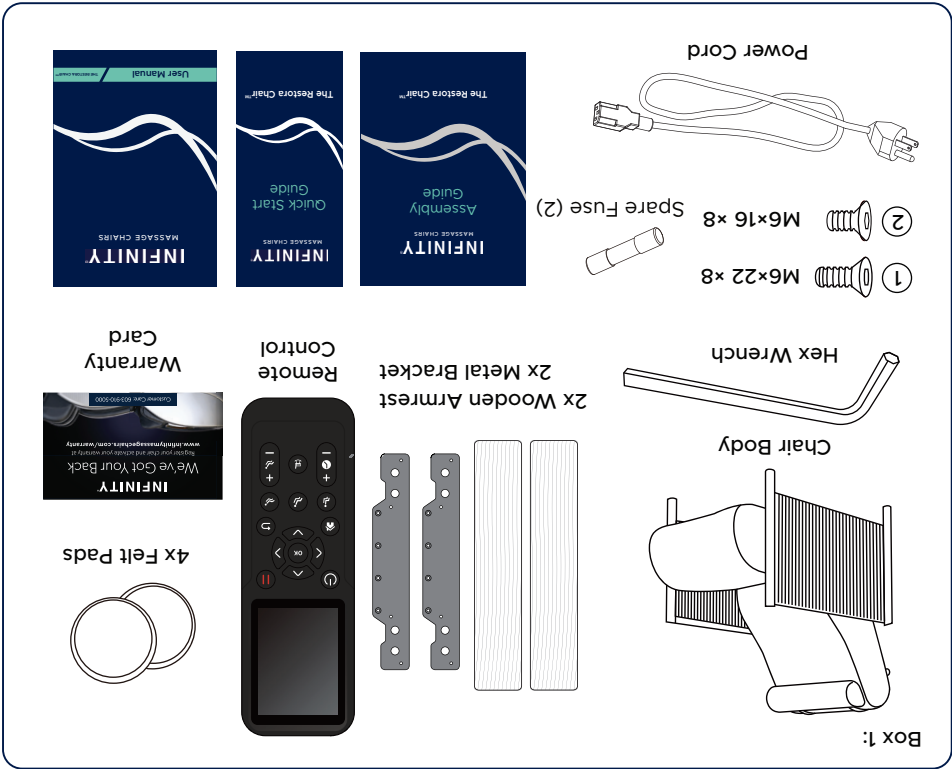


If anything is missing, please contact INFINITY at 603-910-5000. Do not return to the place of purchase.

Prior to assembly, carefully unpack all box contents. Check box to make sure all contents are accounted for.

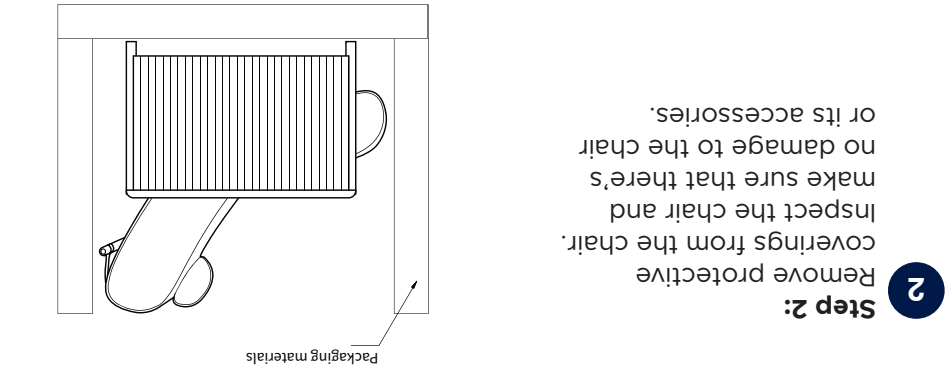

### Final Check:

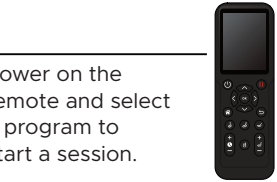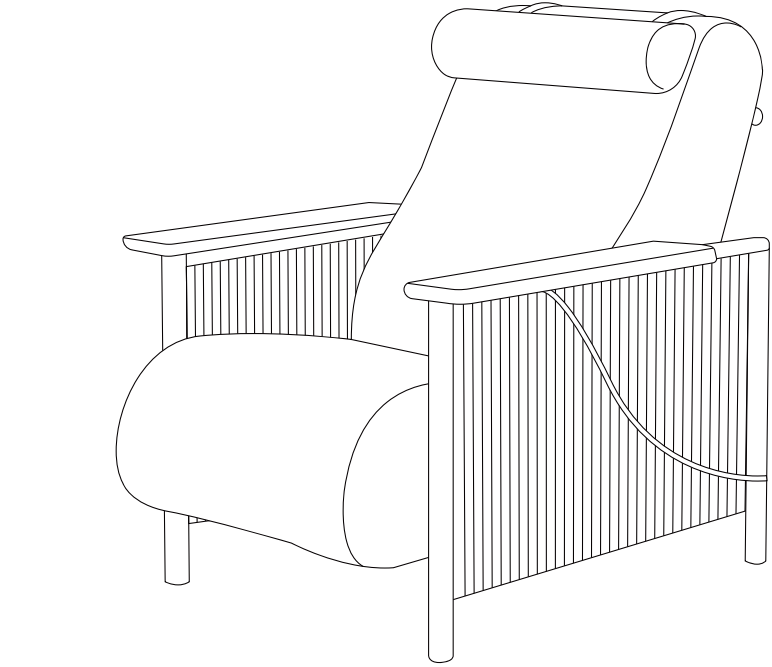

Power on the remote and select a program to start a session.

Review chair for smooth operation. If things are not operating correctly, review all assembly steps. Call Infinity support at 1-603-910-5000 if you need live US-based support.

*You are done; time for a Massage!*



SCAN CODE

Register your product at [www.infinitymassagechairs.com/warranty](http://www.infinitymassagechairs.com/warranty) to ensure it is in our system. This will simplify the warranty process should you ever need it.

Alternatively, **scan the QR code** to go directly to the URL above.

# INFINITY®


72 Stard Road, Seabrook, NH 03874  
(603) 910-5000  
[www.infinitymassagechairs.com](http://www.infinitymassagechairs.com)

Version 1.3




SCAN CODE

Before assembling your chair, watch an assembly video at: [www.infinitymassagechairs.com/assembly-tutorials](http://www.infinitymassagechairs.com/assembly-tutorials)  
Alternatively, **scan the QR code** to go directly to the URL above.

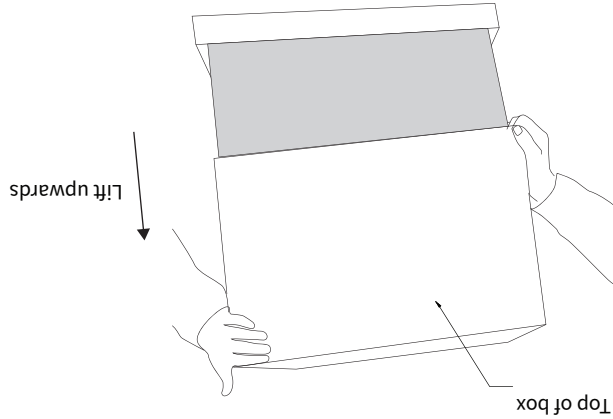

Step 1: Cut the tie straps, remove the box by lifting it upwards from the ground.

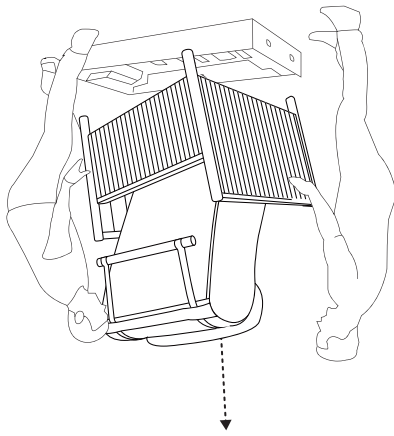

Step 3: With a partner, lift the massage chair out of the box and position on a flat surface.

# INFINITY®

MASSAGE CHAIRS


## Assembly Guide

### The Restora Chair™


# INFINITY

## MASSAGE CHAIRS

- 4 Step 4:** Open the accessories box and take out 2x Wooden Armrests, 2x Metal Brackets, 8x M6x22 Screws, 8x M6x16 Screws, Hex Wrench, 4x Felt Pads, Remote Control, and the Power Cord. Place the Power Cord and Remote Control to the side for now.

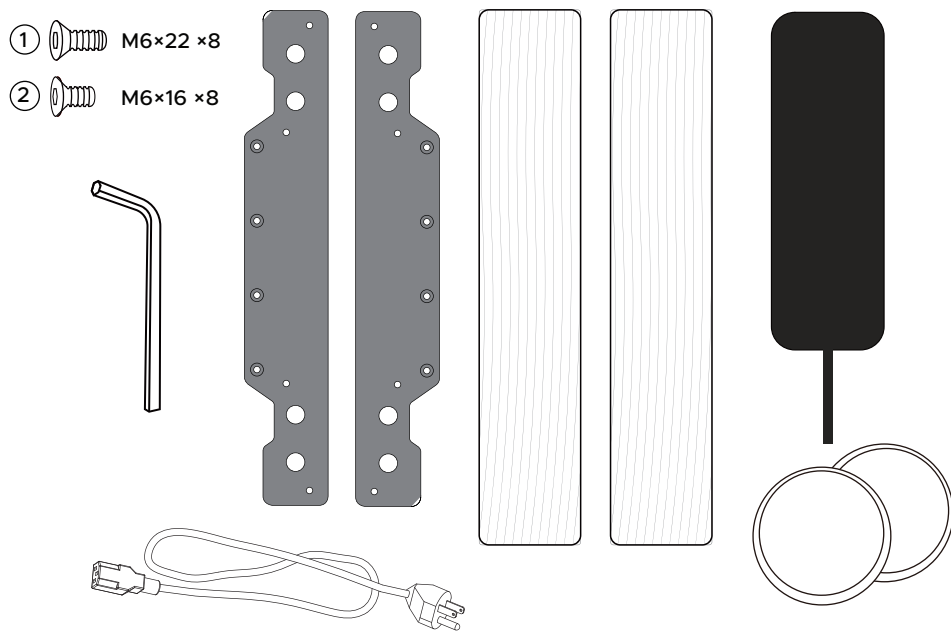


- 5 Step 5:** Align the left metal bracket with the left side of the chair arm, place 4 M6x22 screws into the holes and tighten with the Hex Wrench. Align the right metal bracket with the right side of the chair arm, place 4 M6x22 screws into the holes and tighten with the Hex Wrench.

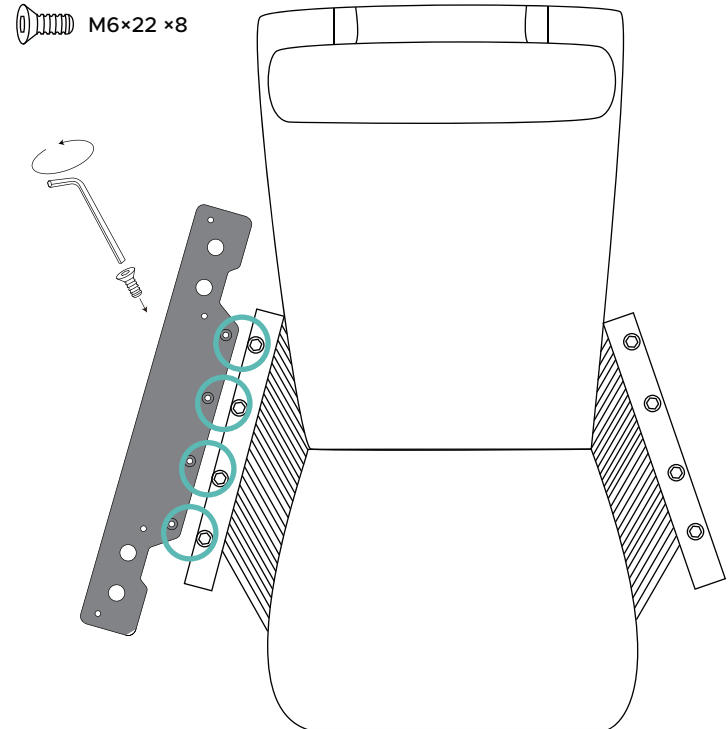

- 6 Step 6:** Align the left wooden armrest on top of the left metal bracket, insert 4 M6x16 screws into the holes and tighten with the Hex Wrench. Align the right wooden armrest on top of the right metal bracket, insert 4 M6x16 screws into the holes and tighten with the Hex Wrench.

M6×16 ×8

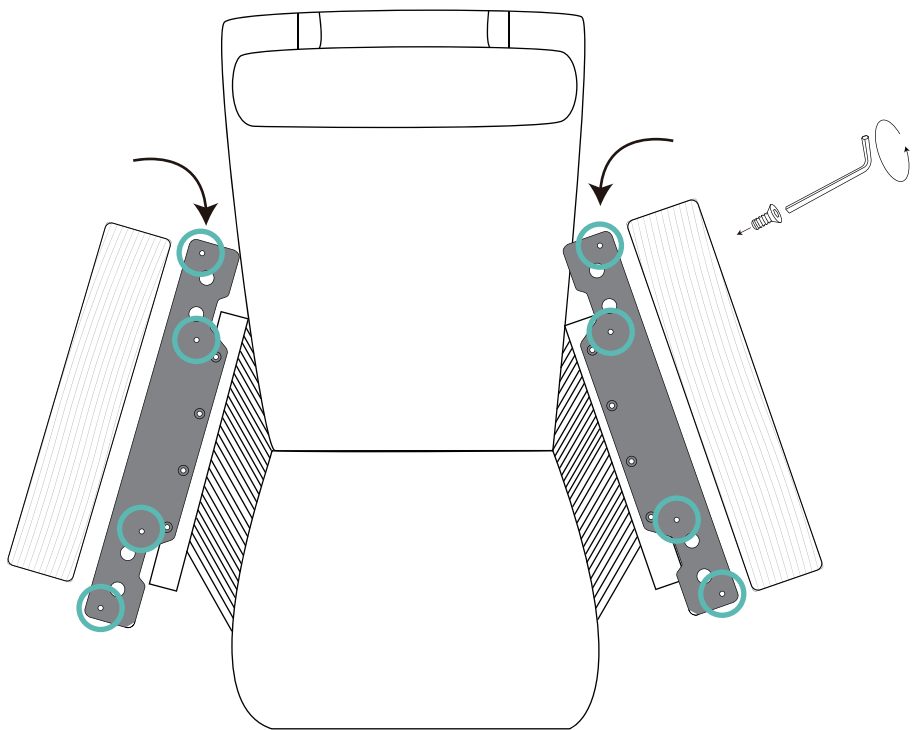

- 7 Step 7:** Locate the remote and place the backside underneath the left armrest (there are magnets on the remote), then attach the remote plug into the lower back receiver. Align the key and pins, gently push in, then screw the fastener ring to secure. Connect the chair's power cord into a grounded 120V electrical outlet and plug it into the back side of the base of the chair. Flip the main power switch on.

