

Assembly Instructions:


To purchase parts or accessories, please contact us at
www.spectrumfurniture.com
1-800-235-1262
Thank you for choosing Spectrum products!



(6) 037542
#8 x 5/8" PHSM Screw



(2) 059984
Snap-in Grommet

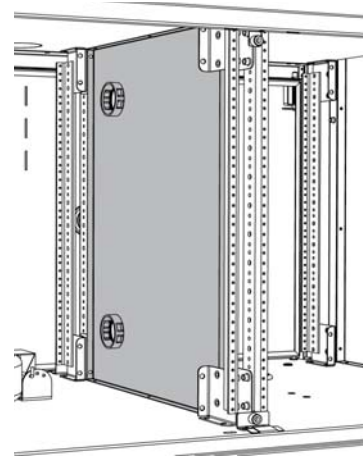

Media Director V2 Security Panel #55262

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damages or if you have any questions, please call 1-800-235-1262.

Tools Required:
Phillips screwdriver

1. Remove rack rail

- A. Removal of one rack rail is necessary to install the security panel.
Remove the (4) PHM mounting screws securing the set of brackets and rack rail. **Figure 1.**

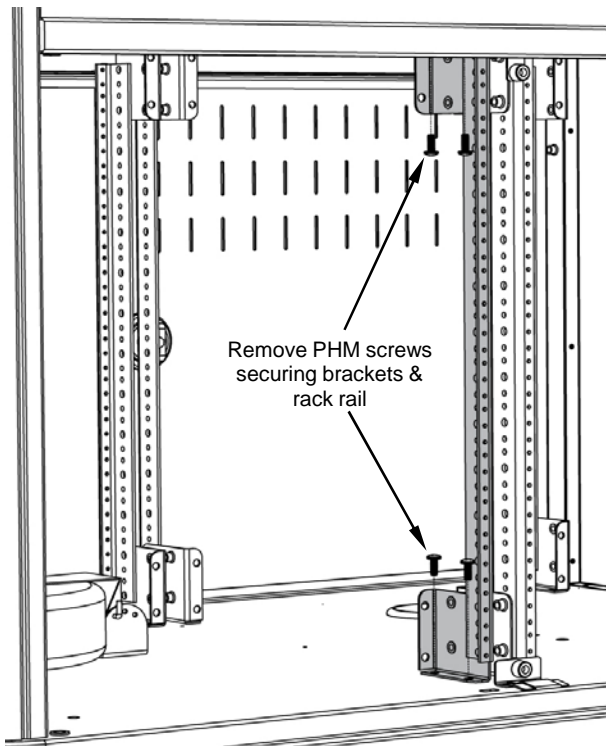


Figure 1

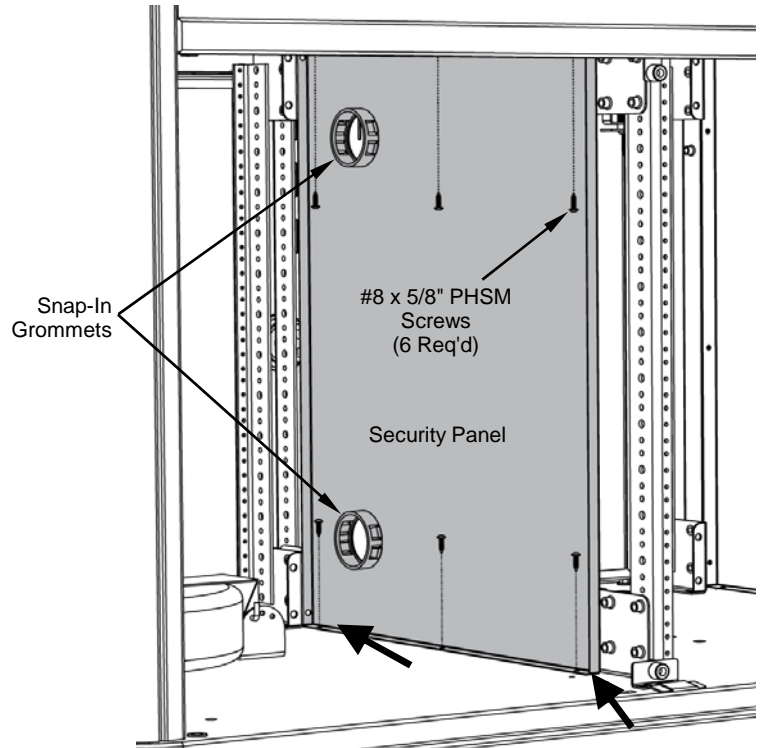


Figure 2

2. Attach security panel

- A. Position the Security Panel in the center of the lectern between the rack rails and align mounting holes. **Figure 2.**
B. Attach the panel with (6) #8 x 5/8" PHSM screws as shown and tighten securely.
C. Install the (2) snap-in grommets.
D. Replace the previously removed bracket/rack rail assembly and tighten the mounting screws securely.

SPECTRUM
INDUSTRIES INC.

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com