

Assembly Instructions

Touchboards




205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Important

Before you begin, please make sure all parts and proper quantities are included. Any parts damaged during shipment must be reported within 15 days of receipt. To report information regarding damage, to purchase parts or accessories, or if you have any questions, please contact us at:

www.spectrumfurniture.com
715-723-6750, 800-235-1262

Thank you for purchasing Spectrum products!

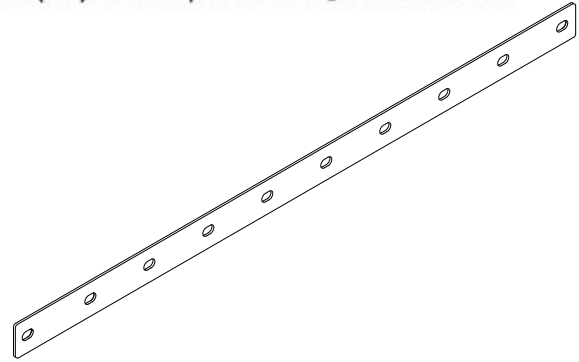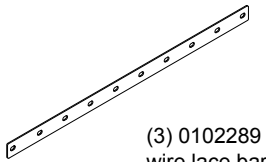

Rack-mount wire lace kit 95517

1. Attach wire lace bars

1. Attach the wire lace bars to the rack rail where necessary using the 10-32 x 5/8 screws. **Figure 1.**
2. Tighten securely.

2. Route and secure wires

1. Fasten cords and wires to the lace bars with zip ties.

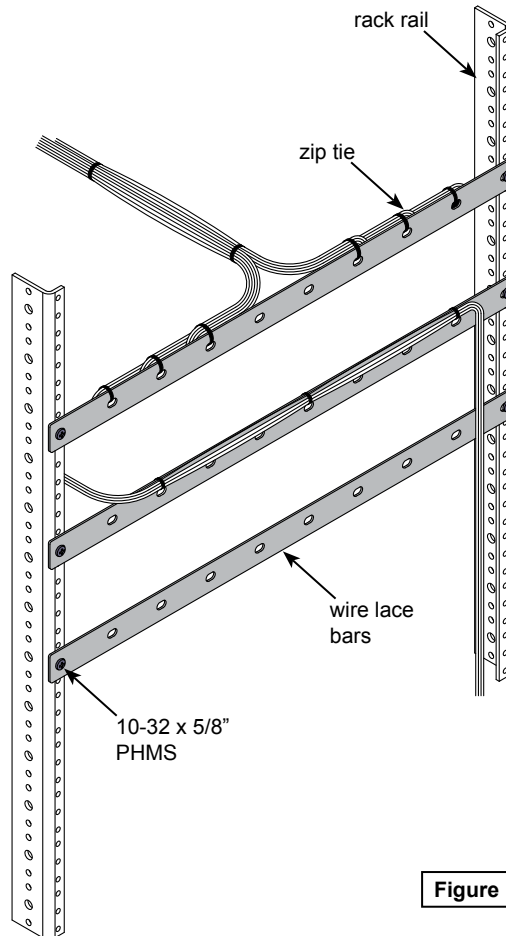


Figure 1