


Installation and Assembly: Laptop Arm

Model: ACC314

IMPORTANT! Read entire instruction sheet before you start assembly and installation.

Some parts may appear slightly different than illustrated.

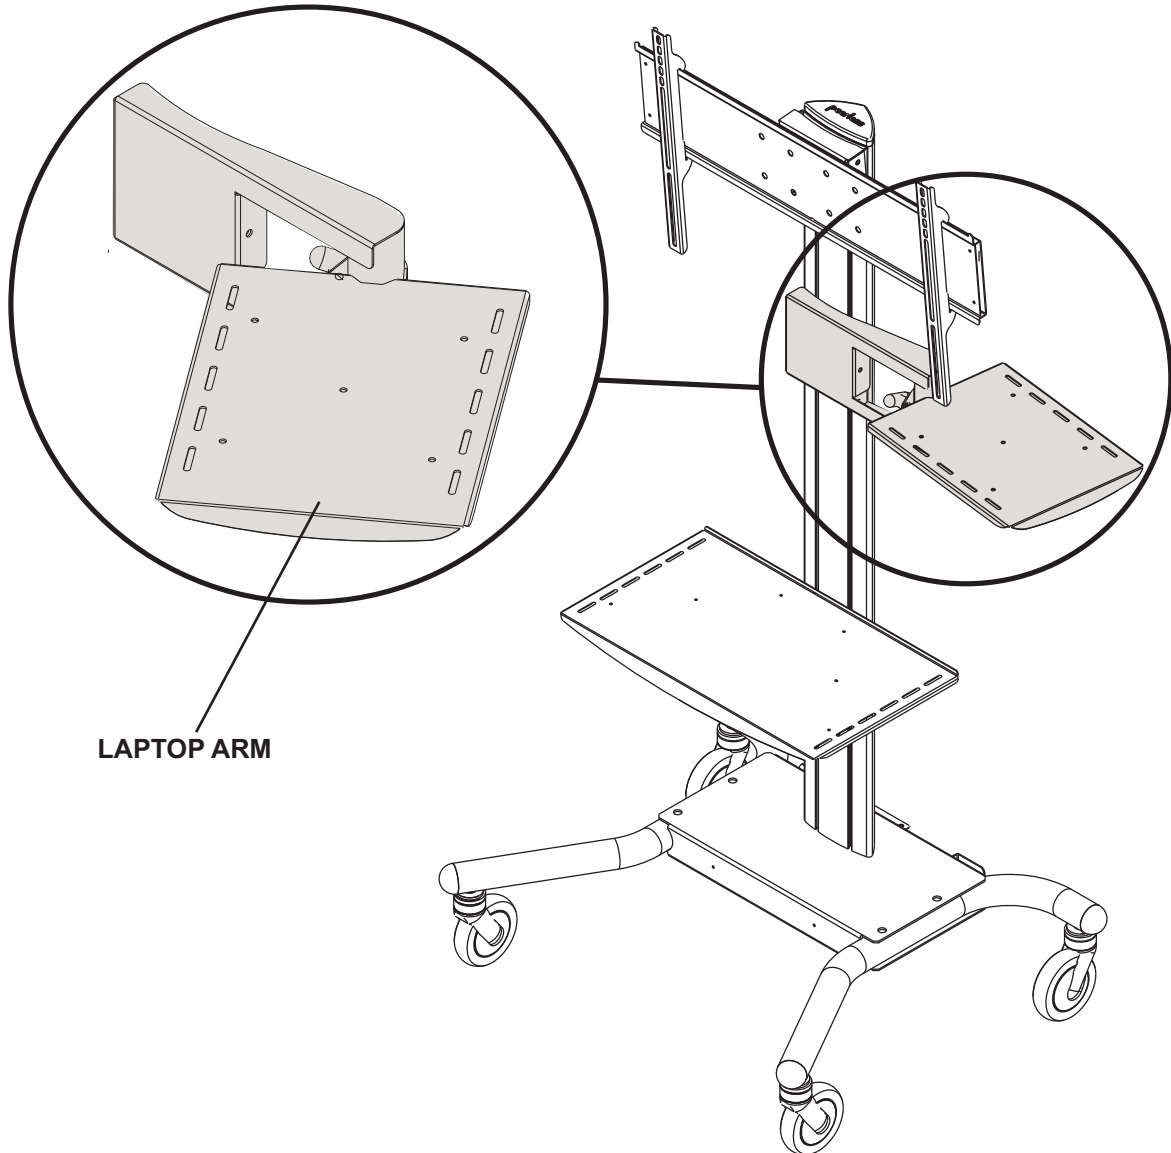



Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Before you begin, make sure all parts shown are included with your product.


Parts List

Description	Qty.	Part #
A laptop tray	1	009-1227
B laptop tray clamp	1	009-1020
C T-knob	1	590-1057
D 1/4" - 20 x 1 3/4" carriage bolt	1	520-1017
E plastic grommet	2	590-1074
F screen mount bracket	1	201-1156
G shelf support	1	009-1230
H 1/4 x 12 mm decorative screw	7	520-2325
I 1/4 - 20 mm square nut	4	530-1050
K button bumper	5	590-1209
L allen wrench	1	560-9646

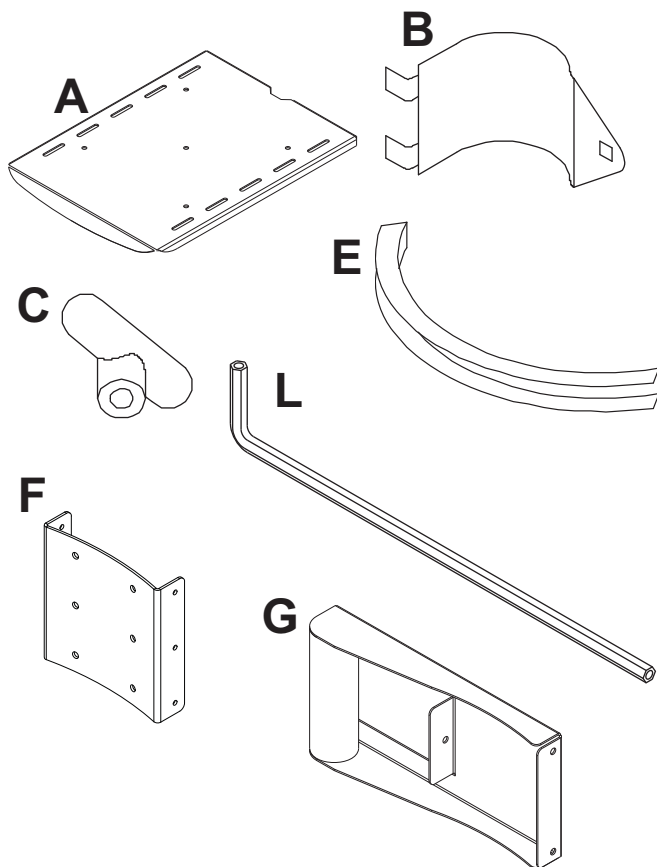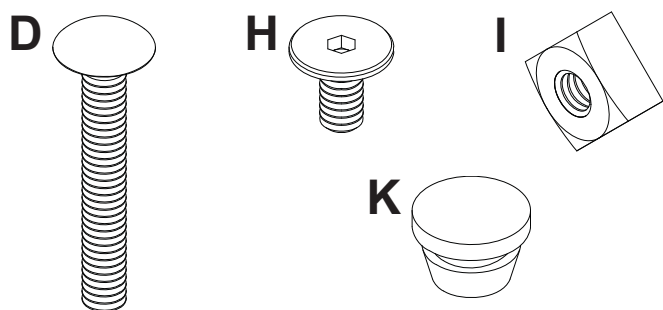


NOTE: If you are adding new shelf to an already assembled product, reverse steps up to the shelf installation step (removing screen and adapter plate from cart) following the main instruction sheet.



- 1** Loosely attach four 1/4-20 x 12mm screws (**H**) and 1/4-20 nuts (**I**) to screen mount bracket (**F**).

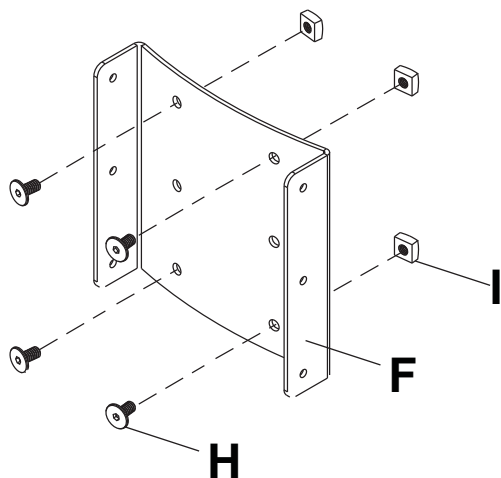


- 2** Slide screen mount bracket (**F**) onto upright so that 1/4-20 nuts (**I**) slide into slots of upright as shown in figure 2.1 and detail 1. Slide screen mount bracket to desired position, level, then tighten 1/4-20 x 12mm screws (**H**) using 4mm allen wrench (**L**).

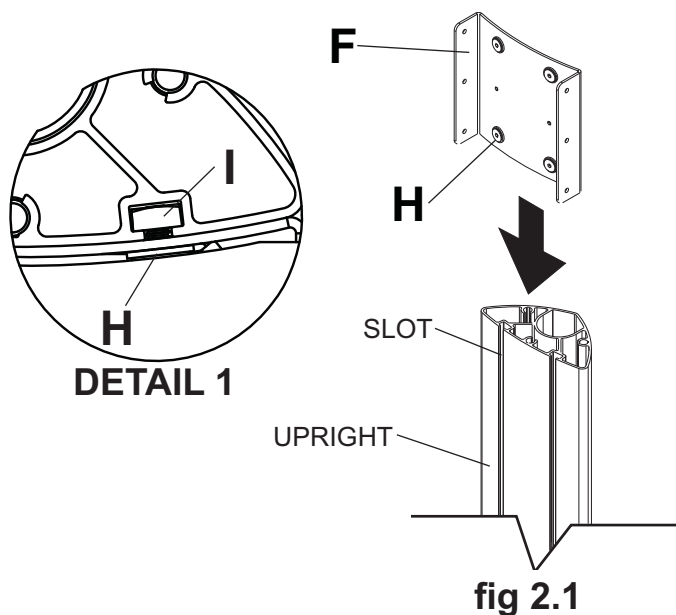

- 3** Attach self support (**G**) to screen bracket bracket (**F**) as shown in fig. 3.1. Insert three 1/4-20 x 12 mm screws (**H**) into screen mount bracket (**F**), leaving 1/8" of exposed thread as shown in fig. 3.2 and detail 2.

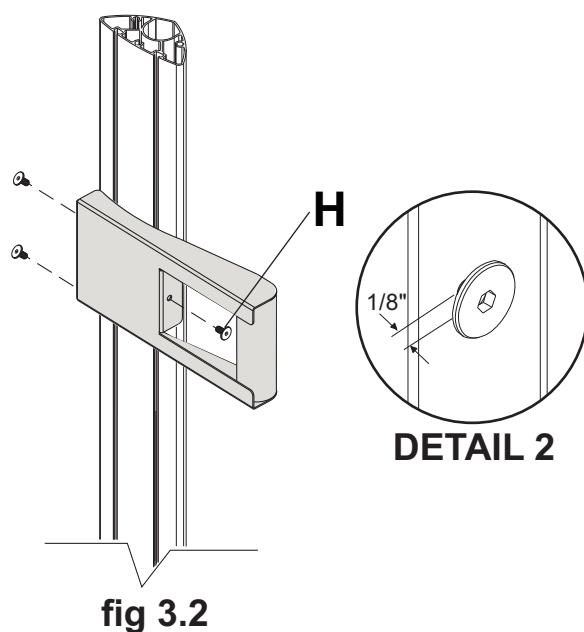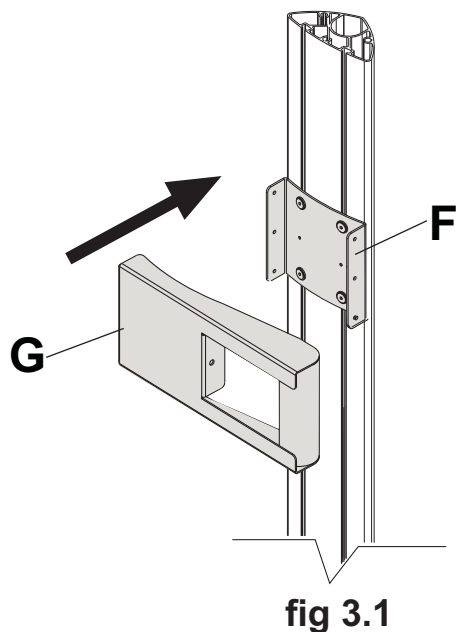

- 4** Attach two grommets (**E**) to back of laptop tray (**A**), and attach five button bumper (**K**) to the top of laptop tray (**A**) as shown below.

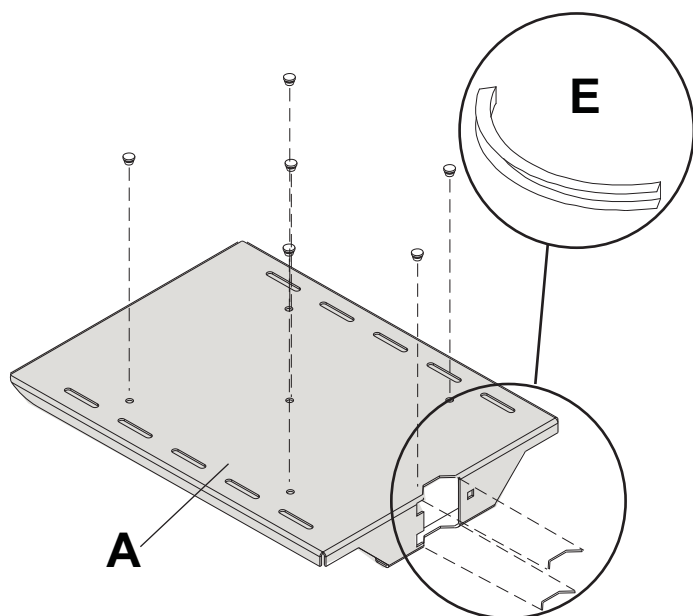

- 5** Attach laptop tray (**A**) to shelf support (**G**) using clamp (**B**), carriage bolt (**D**) and T-knob (**C**). Hook tabs of clamp (**A**) into slots of laptop tray (**A**) as shown in fig. 5.1, then secure clamp and tray around shelf using carriage bolt (**D**) and T-knob (**C**) as shown fig. 5.2.

