


AVTEQ

Easy Setup Guide



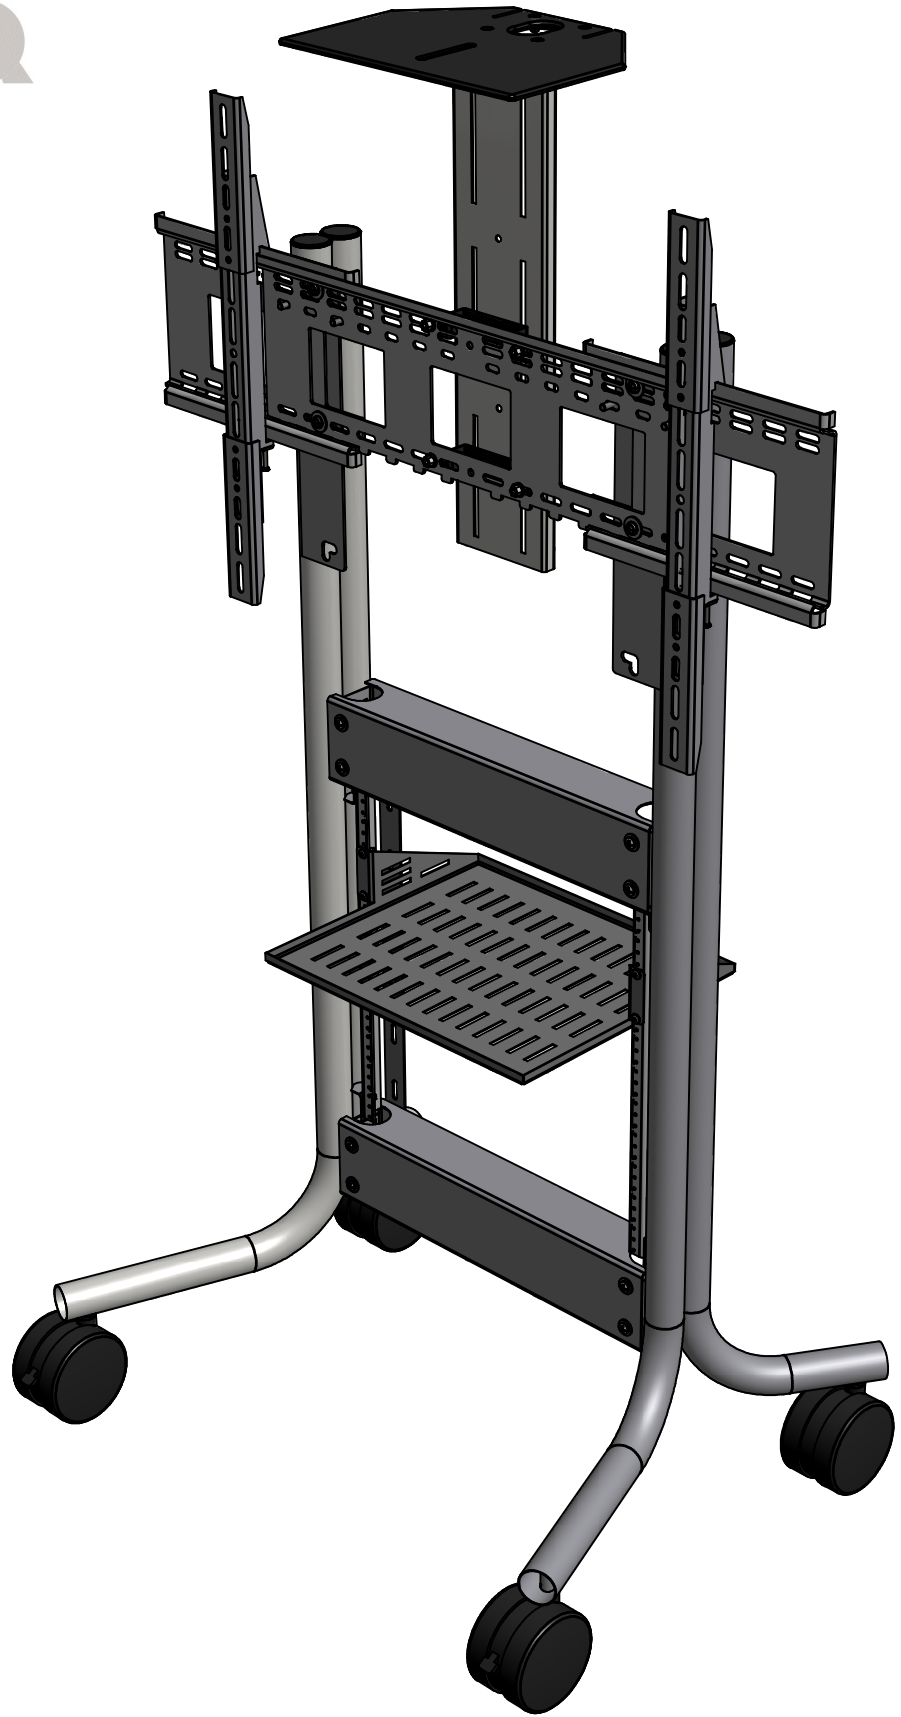


Touchboards


RPS 500

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com

Items Included

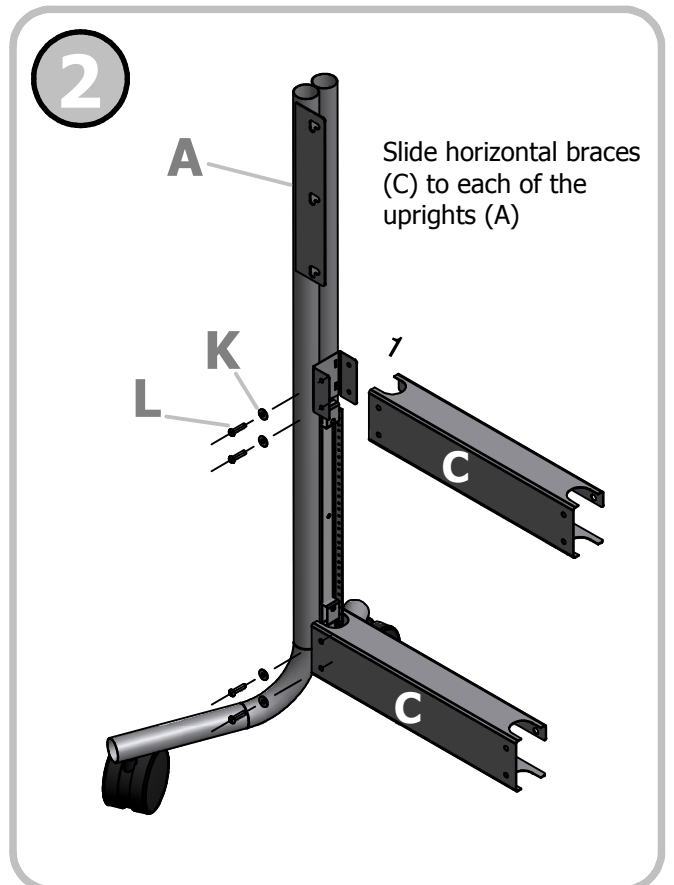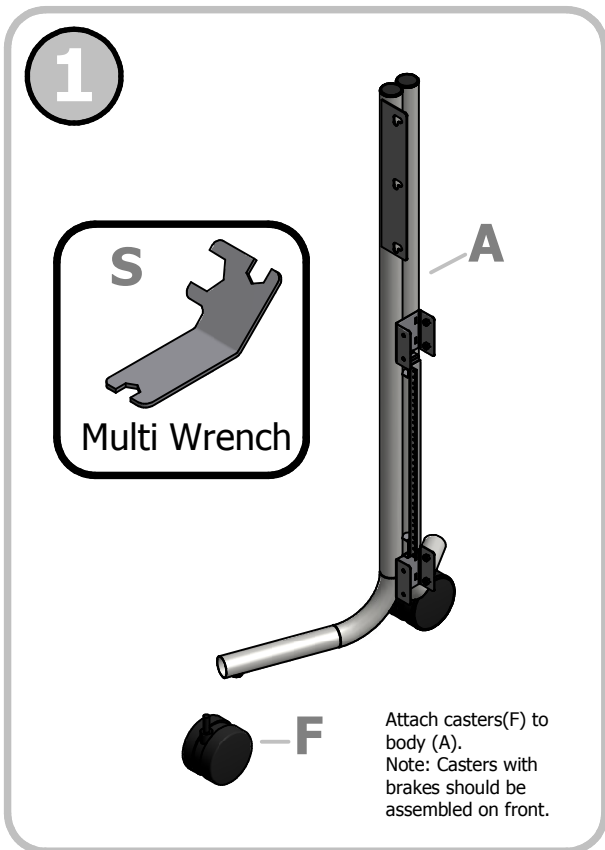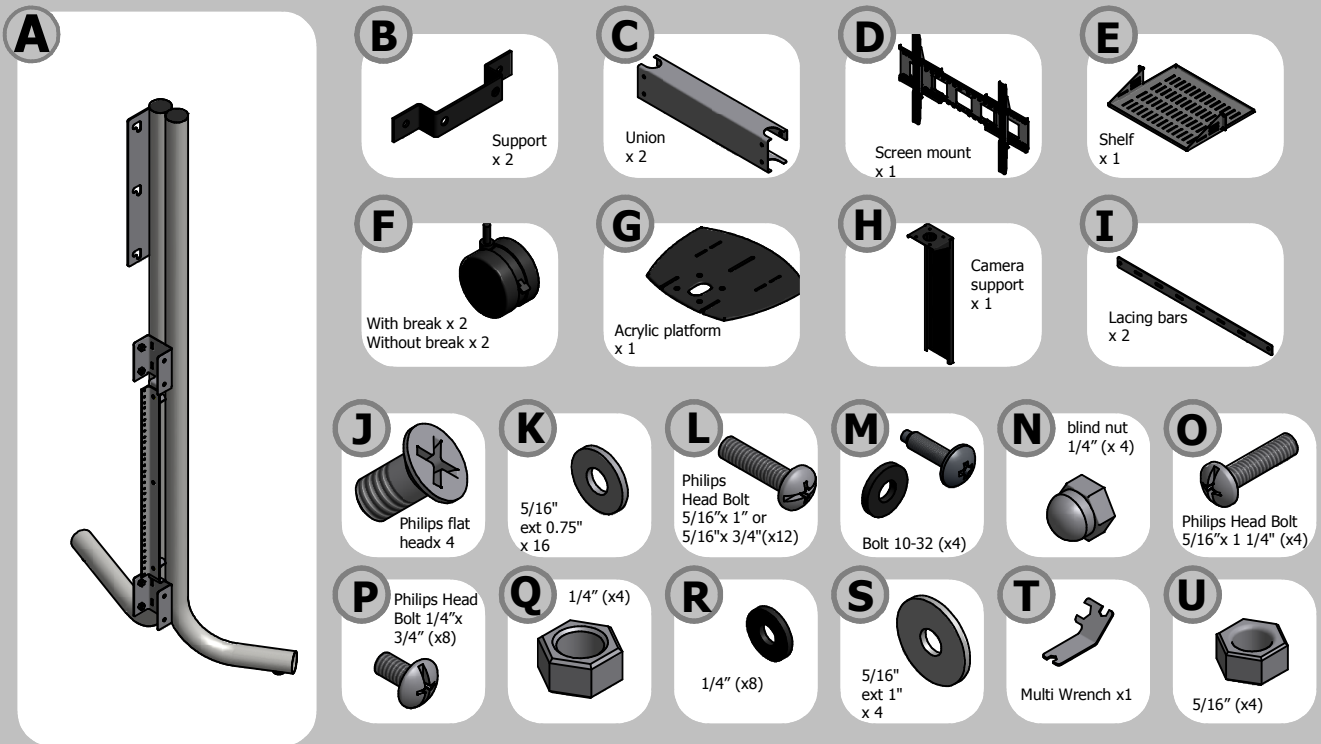


3

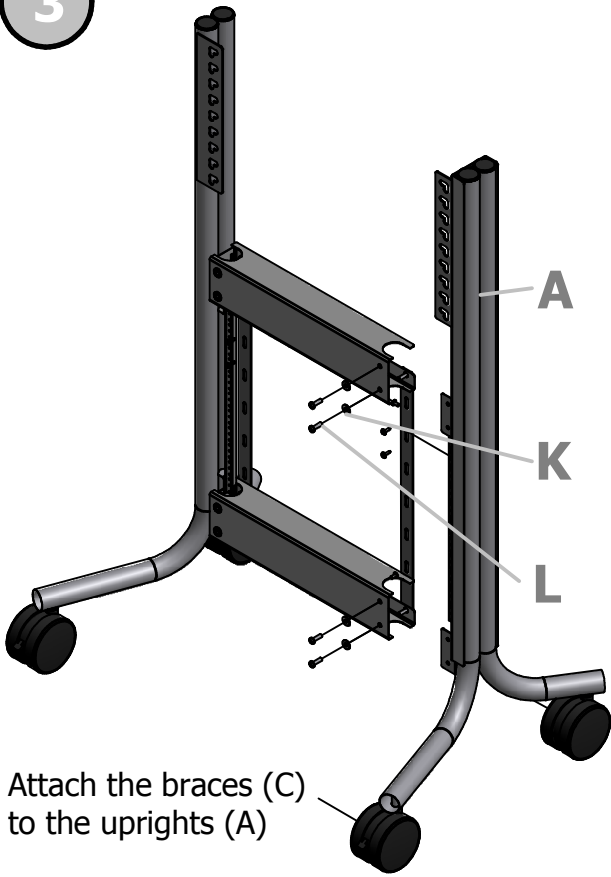


Attach the braces (C) to the uprights (A)

4

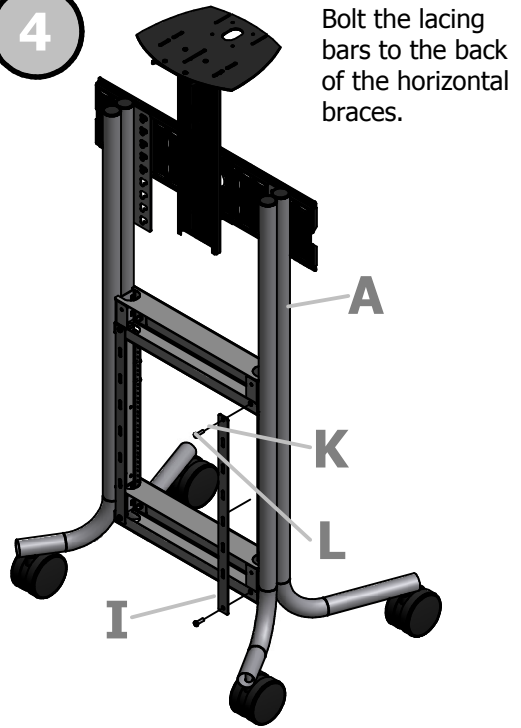

Bolt the lacing bars to the back of the horizontal braces.

5

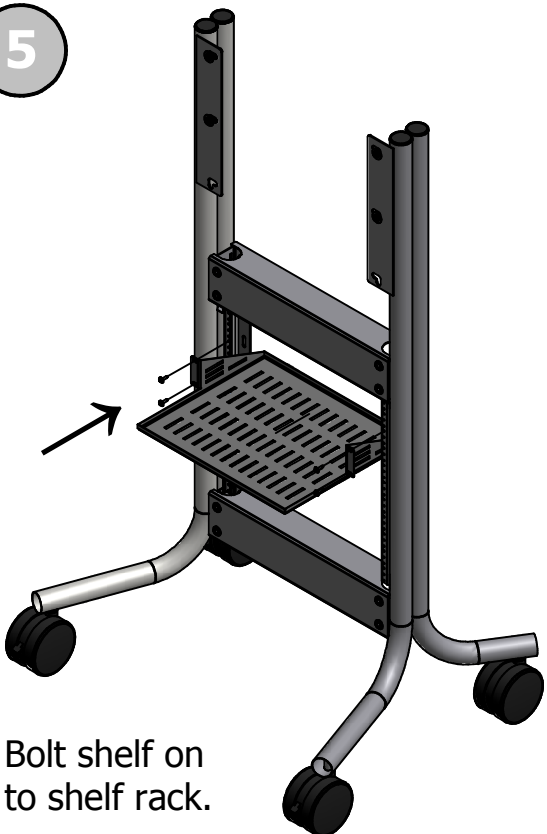

Bolt shelf on to shelf rack.

6

