


AVTEQ

Easy Setup Guide

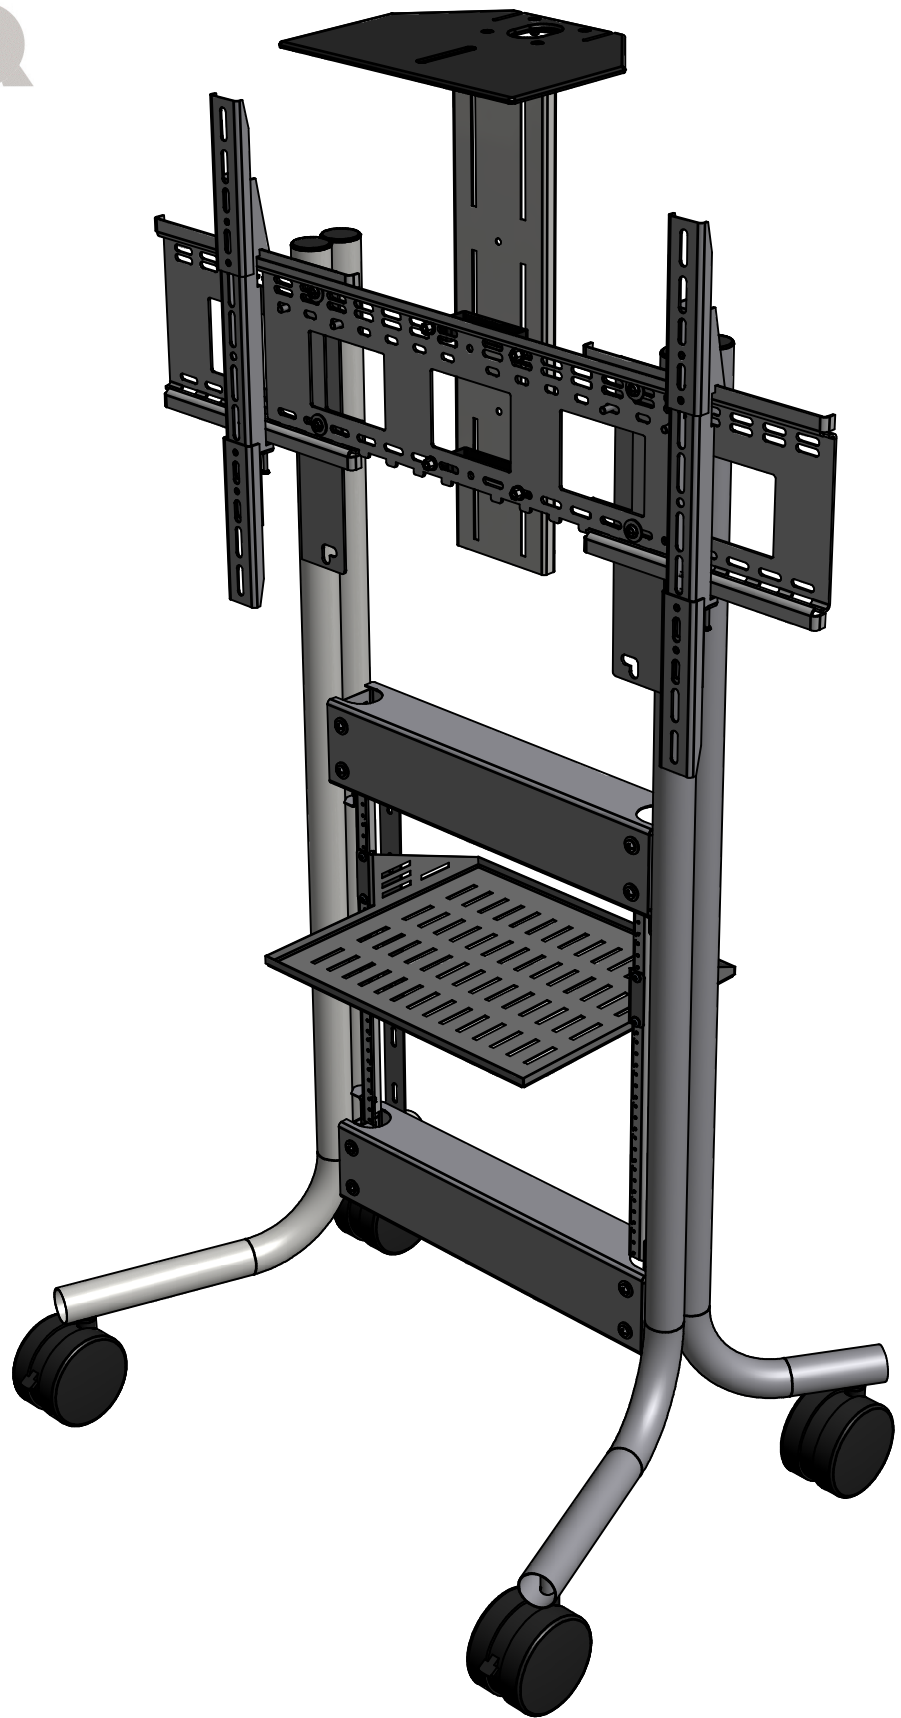


RPS 500

Items Included



1

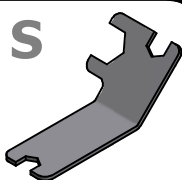


Multi Wrench




Attach casters(F) to body (A).
Note: Casters with brakes should be assembled on front.

2

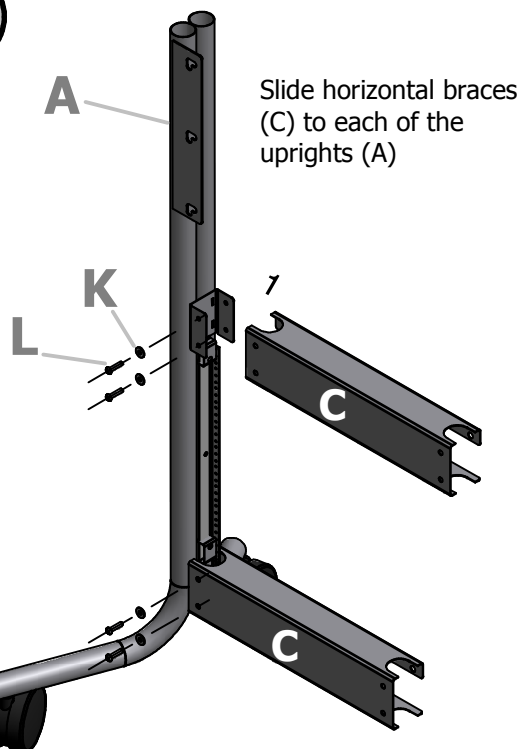


3

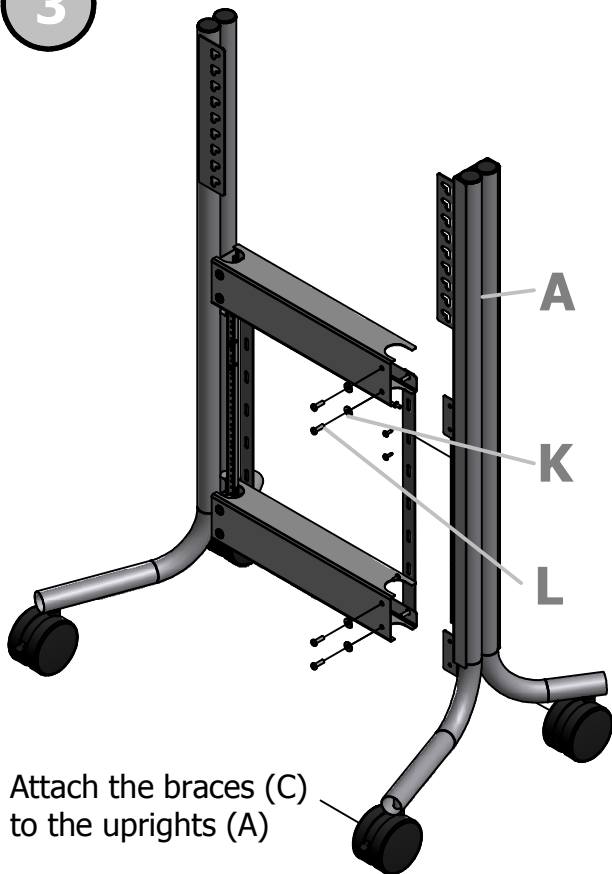


Attach the braces (C) to the uprights (A)

4

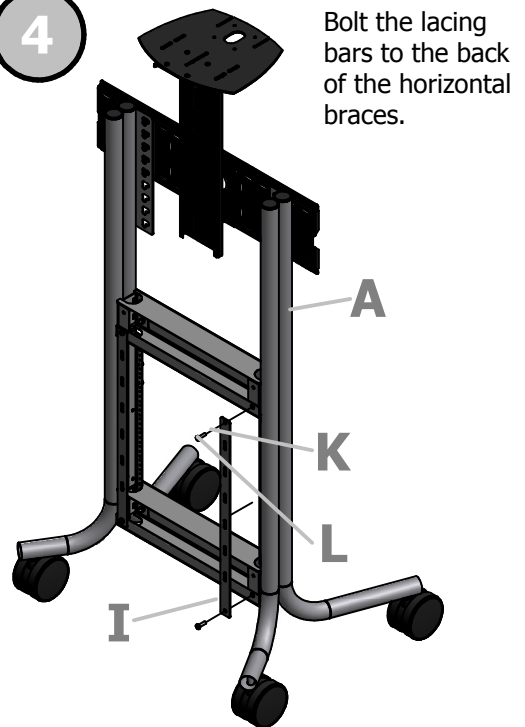


Bolt the lacing bars to the back of the horizontal braces.


5

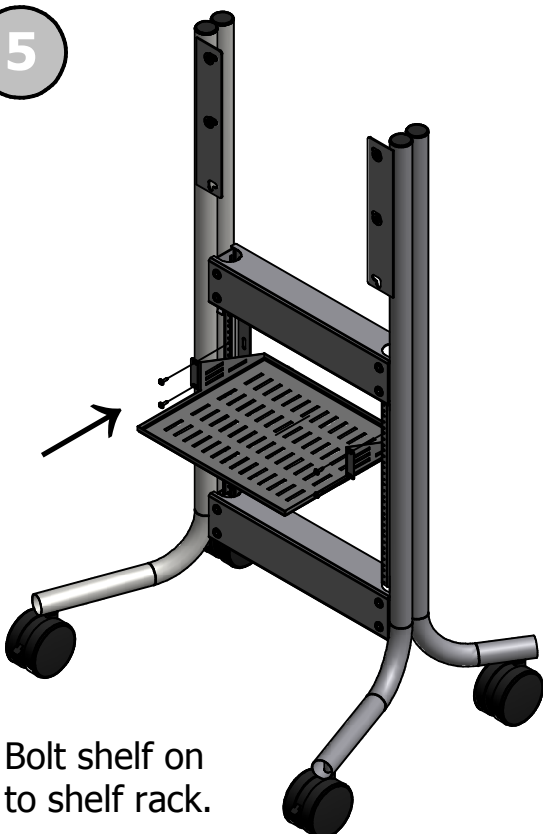

Bolt shelf on to shelf rack.



6

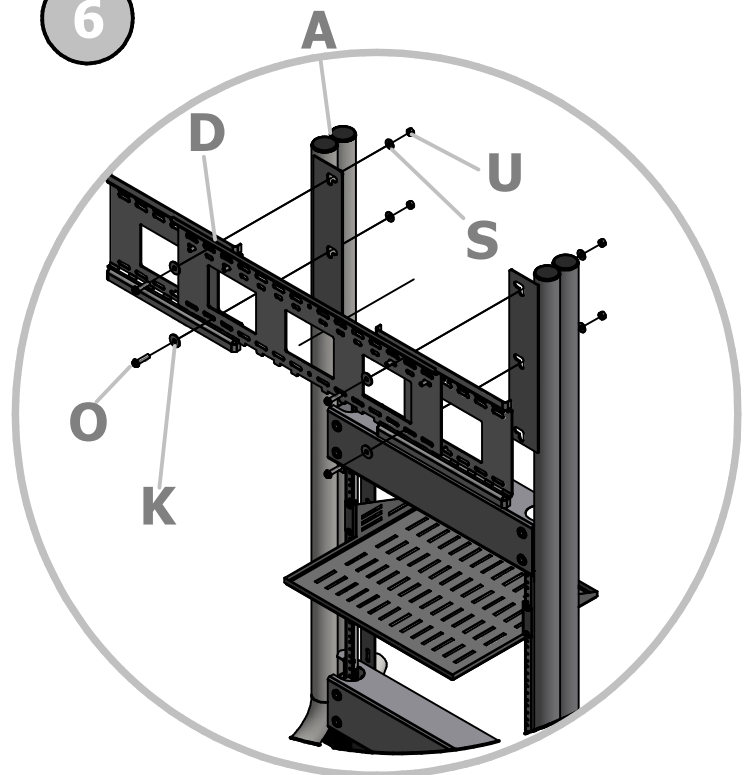

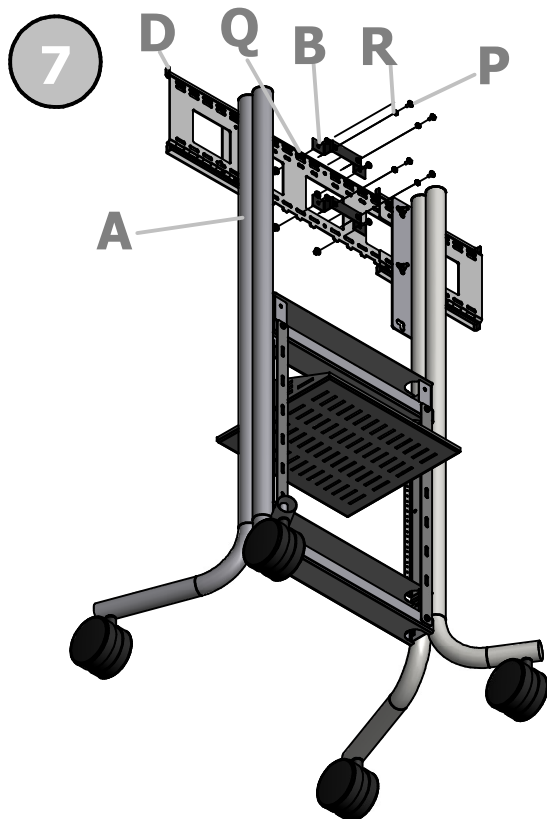

Attach screen support (D) to body (A).

NOTE: See instructions inside screen support box to mount flat screen on cart. Please secure the flat screen to the cart at desired height before moving on to step 7.

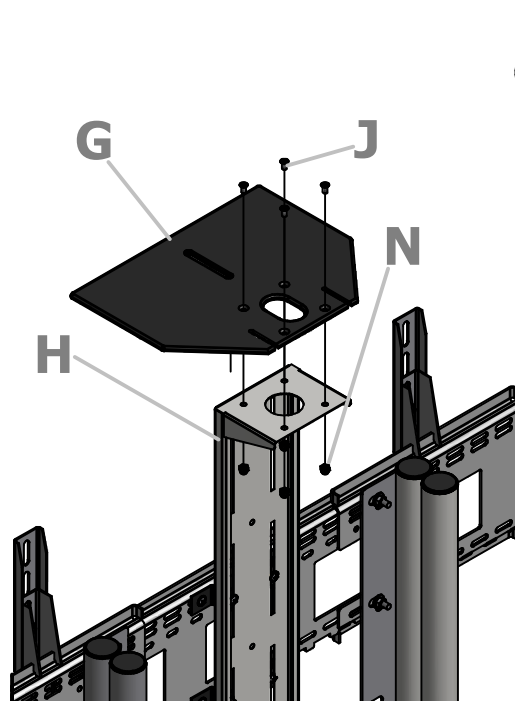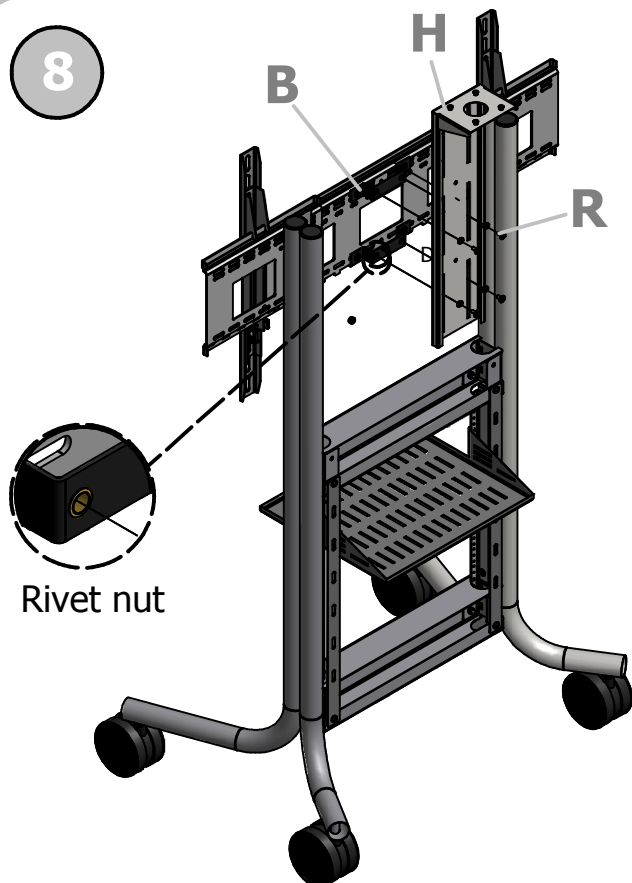

Attach acrylic (G) to bracket (H) then attach bracket (H) to body (A) at desired height.