
Recommended Items:

- Protective eye wear
- Wire Cutters
- Drill
- Phillips Drill Bit

Step 1: Unboxing your cart

1. Wearing protective eye wear, use wire cutter to cut green straps.

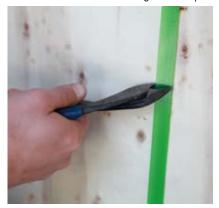

4. With an assistant, carefully lift container upward & set aside.



7. With an assistant, slowly tilt cart forward while removing cardboard cart support from underneath.





2. Locate & remove screws on lid, then remove lid & set aside.



 Inspect cart thoroughly for any shipping damage or defects.
NOTE: Any shipping damage claim must be submitted within 5 business days of delivery.



8. Set cart back down, unlock all wheels & slowly roll cart off of pallet.



Touchboards

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

3. Locate & remove screws on each corner at base of pallet.



6. Apply brakes to both front wheels.



9. Put all packing materials together and retain for any warranty claims.





Cable Pass-thru Slots





Adjustable Dividers




Retaining Strip & Thumbscrews



Locking ER Wheels



Removable Adapter Baskets

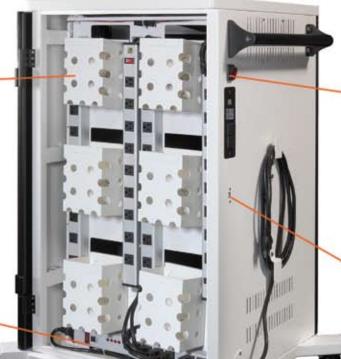

Main Power Switch



Cycle Timer





Optional Sync Port

© 2015 NSX Technologies, Inc | 42400 Winchester Rd Temecula, CA 92590

888-650-4488 | FAX 951-699-9000 | info@anywherecart.com

Step 2: Adjusting Dividers

Device slots come set at 1" wide and are adjustable in 1/2" increments to fit any device width.

1. Using a ruler, measure the thickest part of your device. If it is less than 1" thick, skip to Step 3: Power Adapter Setup.



3. Slide Retaining Strip forward & out of the way. Strip can be removed if needed.



5. Adjust spacing as needed in 1/2" increments.



2. If your device is thicker than 1", locate & remove thumbscrew by turning counter clockwise.



4. Pulling forward, then up, remove divider panel.



6. Slide retaining metal strip into place & replace thumbscrew.





Step 3: Power Adapter Setup

1. Remove basket by pulling forward first, then pull upward.



3. If your device power adapters are "brick" style, feed power cables thru holes on bottom & add up to 6 adapters per basket.



5. Feed 6 device cables thru each slot.



2. If your device power adapters are "wall wart" style, plug into outlets & skip to step 5.



4. Hook basket(s) back in place & plug power cables into outlets.



6. Working up front, weave device cables into divider tabs.



Step 4: Timer Operation



