
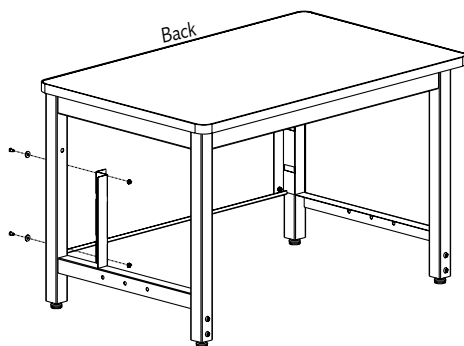



RTW MODESTY PANEL

Item Numbers 8750, 8751, 8752, 8753

Step 1

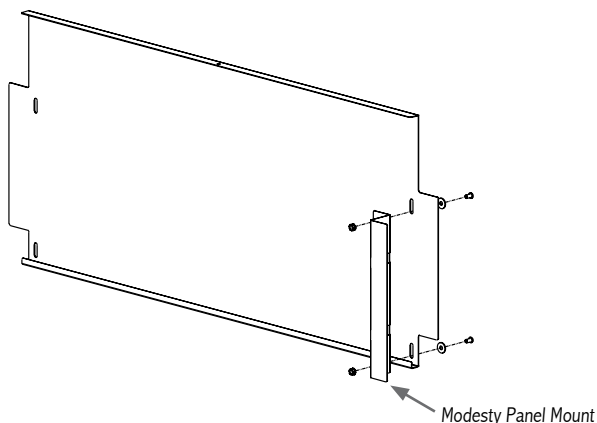

Steps 2-3

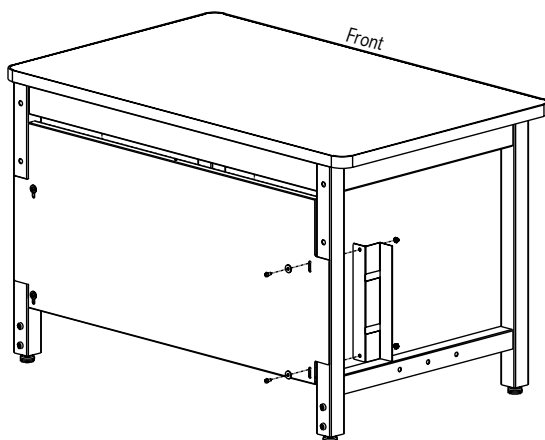

ACCESSORIES

PARTS AND HARDWARE	QUANTITY
Modesty Panel	1
Modesty Panel Mount	2
1/4-20 x 1/2 Bolts	4
1/4-20 Kep Nuts	4
1/4" Flat Washer	4
#8 Tek Screw- 1/2"	1
Other Items Needed (not included)	
Phillips head drill or screwdriver	1
5/32 Hex Wrench	1
7/16 open end wrench	1

1. Attach Modesty Panel Mount to the one side of the RTW Modesty Panel on the inside and lightly secure using bolts, washers and kep nuts.
2. Slide assembly on back of RTW Table until the Modesty Panel Mount is flush against the RTW leg tube.
3. Attach other Modesty Panel Mount to opposite side of Modesty Panel while in place. Slide Modesty Panel Assembly up until top flange touches the RTW Support Rail. Tighten all hardware.
4. For 60" wide tables and wider, insert a Tek screw into center of RTW Modesty Panel and then into Support Rail from underneath the workbench to secure panel to RTW.